

# **TOSHIBA**

## **SERVICE MANUAL**

### **VIDEO CASSETTE RECORDER**

***V-730EF, V-610EF, V-510EF***

***V-430EF, V-230EF, V-220EF***

***V-730UK, V-720UK, V-710UK***

***V-430UK, V-230UK, V-220UK,***

***V-210UK***

***V-740EG, V-730EG, V-430EG***

***V-230EG, V-210EG***

***V-720W, V-710W, V-420W***

***V-410W, V-220W, V-210W***

---

# **CONTENTS**

---

- 1. Precautions**
- 2. Reference Information**
- 3. Product Specifications**
- 4. Disassembly and Reassembly**
- 5. Alignment and Adjustment**
- 6. Exploded View**
- 7. Replacement Parts List**
- 8. Block Diagram**
- 9. PCB Diagrams**
- 10. Schematic Diagrams**

# 1. Precautions

1. Be sure that all of the built-in protective devices are replaced. Restore any missing protective shields.
2. When reinstalling the chassis and its assemblies, be sure to restore all protective devices, including : control knobs and compartment covers.
3. Make sure that there are no cabinet openings through which people--particularly children --might insert fingers and contact dangerous voltages. Such openings include the spacing between the picture tube and the cabinet mask, excessively wide cabinet ventilation slots, and improperly fitted back covers.

If the measured resistance is less than 1.0 megohm or greater than 5.2 megohms, an abnormality exists that must be corrected before the unit is returned to the customer.

4. Leakage Current Hot Check (See Fig. 1-1) :  
Warning : Do not use an isolation transformer during this test. Use a leakage current tester or a metering system that complies with American National Standards Institute (ANSI C101.1, *Leakage Current for Appliances*), and Underwriters Laboratories (UL Publication UL1410, 59.7).

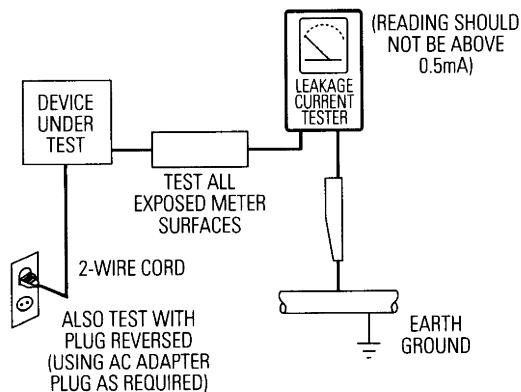




Fig. 1-1 AC Leakage Test

5. With the unit completely reassembled, plug the AC line cord directly the power outlet. With the unit's AC switch first in the ON position and then OFF, measure the current between a known earth ground (metal water pipe, conduit, etc.) and all exposed metal parts, including : antennas, handle brackets, metal cabinets, screwheads and control shafts. The current measured should not exceed 0.5 milliamp. Reverse the power-plug prongs in the AC outlet and repeat the test.
6. Antenna Cold Check :  
With the unit's AC plug disconnected from the AC source, connect an electrical jumper across the two AC prongs. Connect one lead of the ohmmeter to an AC prong.  
Connect the other lead to the coaxial connector.
7. Some semiconductor ("solid state") devices are easily damaged by static electricity. Such components are called Electrostatically Sensitive Devices (ESDs); examples include integrated circuits and some field-effect transistors. The following techniques will reduce the occurrence of component damage caused by static electricity.
8. Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground. Alternatively, wear a discharging Wrist-strap device. (Be sure to remove it prior to applying power--this is an electric shock precaution.)
9. Design Alteration Warning :  
Never alter or add to the mechanical or electrical design of this unit. Example : Do not add auxiliary audio or video connectors. Such alterations might create a safety hazard. Also, any design changes or additions will void the manufacturer's warranty.
10. Never defeat any of the B+ voltage interlocks. Do not apply AC power to the unit (or any of its assemblies) unless all solid-state heat sinks are correctly installed.

11. Always connect a test instrument's ground lead to the instrument chassis ground before connecting the positive lead; always remove the instrument's ground lead last.
12. Observe the original lead dress, especially near the following areas : Antenna wiring, sharp edges, and especially the AC and high voltage power supplies. Always inspect for pinched, out-of-place, or frayed wiring. Do not change the spacing between components and the printed circuit board. Check the AC power cord for damage. Make sure that leads and components do not touch thermally hot parts.
13. Product Safety Notice :  
Some electrical and mechanical parts have special safety-related characteristics which might not be obvious from visual inspection. These safety features and the protection they give might be lost if the replacement component differs from the original--even if the replacement is rated for higher voltage, wattage, etc.


Components that are critical for safety are indicated in the circuit diagram by shading,  
(  or  ).

Use replacement components that have the same ratings, especially for flame resistance and dielectric strength specifications. A replacement part that does not have the same safety characteristics as the original might create shock, fire or other hazards.



## General Identification of the VTR Controls


### General Identification of the VTR Controls

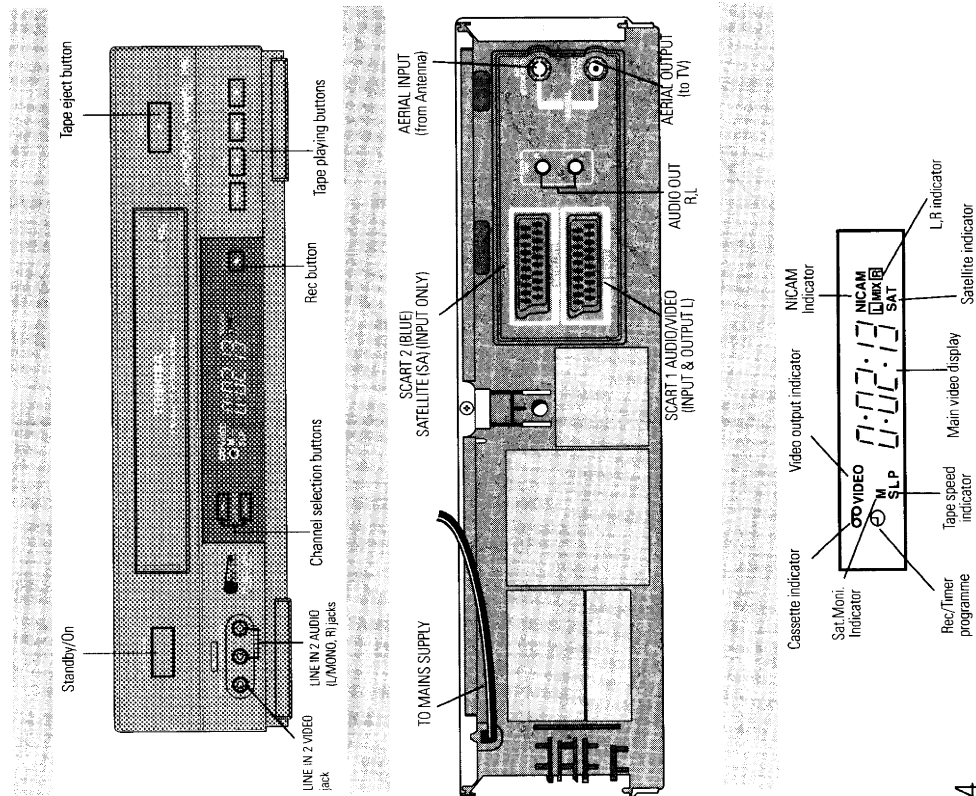

## GENERAL INFORMATION

### Your Remote Control

The illustration below is to show a quick guide to the Remote Control. Detailed instructions occur throughout the book.

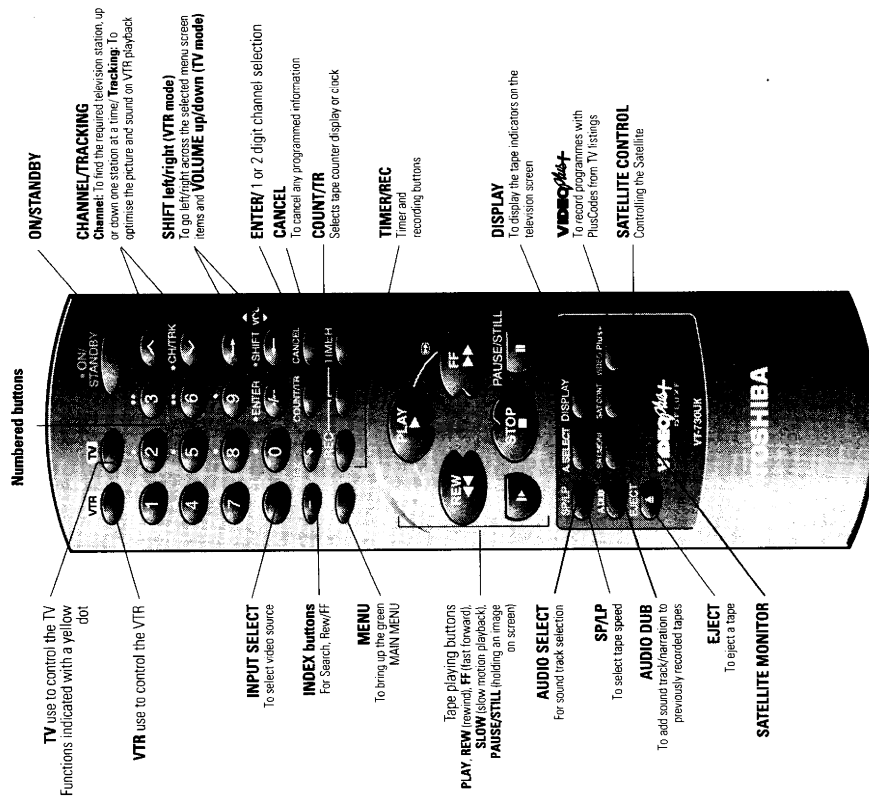

## GENERAL INFORMATION

## Preparing your Remote Control

The Remote Control handset is needed to operate your new Toshiba video recorder. If used correctly, it should give years of trouble-free viewing. Please take good care of it, always observing the correct polarities when replacing the batteries.

Carefully open the battery compartment on the rear of the Remote Control by sliding in the direction of the arrow.

Insert both batteries taking care to observe the correct polarity (+ and -).




The 2 Toshiba batteries supplied are Cadmium- and Mercury-free (UM-4, AAA, IECR03, 1.5v).

Replace the cover of the battery compartment.

**CAUTION:**  
**DO NOT throw your batteries into a fire. Dispose of your batteries in a designated disposal area.**  
**DO NOT mix an old battery with a new one.**  
**DO NOT mix battery types.**

For optimum performance your Remote Control will operate within a distance of 7 metres and up to 30° from the central position.

If the Remote Control does not work, press the VTR button and make sure the batteries are in good working order.

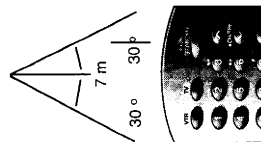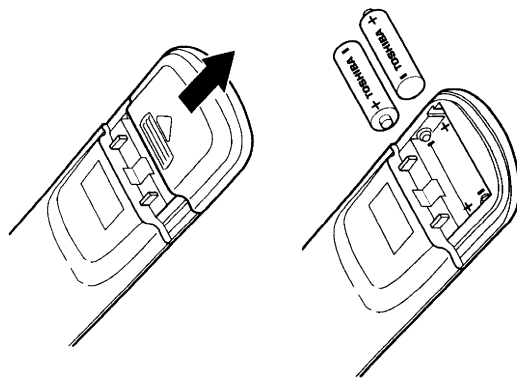

6


## GETTING STARTED

## Connecting the Leads and Auto Set Up

When first connected to the mains electricity supply the VTR will automatically search and store TV stations in memory and also set the clock. But remember, you must connect the Aerial **before** connecting the VTR to the power supply.

Satellite users: Refer to section **SATELLITE CONTROL** starting on page 26.

**REMEMBER:**  
**DO NOT PLUG THE VTR INTO THE MAINS UNTIL AFTER YOU HAVE CONNECTED THE AERIAL CABLE AS SHOWN.**

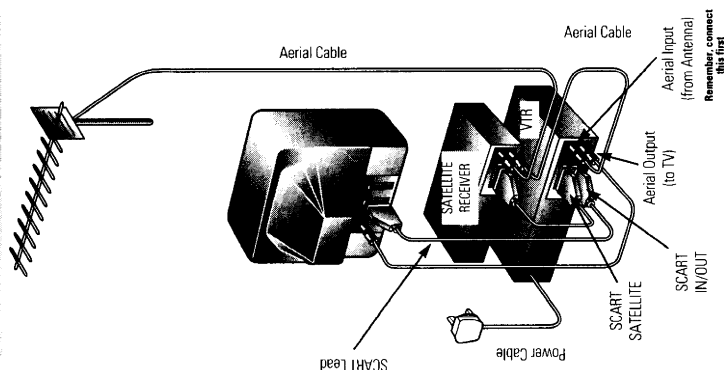

**NOTE:** WHERE POSSIBLE, ALWAYS CONNECT USING A SCART LEAD FOR IMPROVED SOUND AND PICTURE QUALITY.

1 Connect the Aerial Cable to the VTR (Aerial Input).

2 Connect another Aerial Cable from the VTR (Aerial Output) to the TV.

3 Connect a SCART Lead from the VTR to the TV as shown. Connecting via a SCART Lead will give better picture and sound quality. It will also enable the television to automatically switch over whenever a tape is played.

4 Connect the VTR to the power supply with the Power Cable. The display on the VTR will flash 'AUTO' for about 2-4 minutes.

5 Now turn on the television.

If you have connected with a SCART Lead you will see various television stations appear and disappear on your television.

Now turn the page to continue the Auto Set Up...



If you get any problems contact the helpline...

7

GETTING STARTED



# Checking the Auto Set Up

It is important that you check Auto Set Up has stored the channels in the correct order on the VTR for the operation of

**VCR**

- 1 Turn on the TV and select the channel on which you watch videos.
- 2 Now turn on the VTR.
- 3 Using the **CH/TRK** P Q buttons on the Remote Control, check that the order of the TV stations (the programme position number) stored on the VTR is as follows:

Programme position number

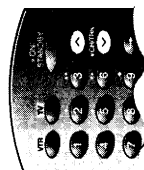

Program Position	TV Station
1	BBC1
2	BBC2
3	ITV
4	Channel 4
5	Channel 5*
6	Satellite

(If you use a different order **VCR** will not work)


Any other stations will be stored in program positions 7, 8, etc.

\*Channel 5 is only available in some areas of the country (and the reception may be poor). If Channel 5 is not stored in position 5 check to see if it is stored in 7 or above and use the Channel Swapping function as detailed on Page 10. If Channel 5 has not been stored and all other channels have been it is likely that Channel 5 is not available in your area.

## THE SET UP IS NOW COMPLETE

You are now ready to **PLAYBACK TAPES** and **MAKE RECORDINGS**. Refer to the **BASIC OPERATION** section which starts on page 14.

9

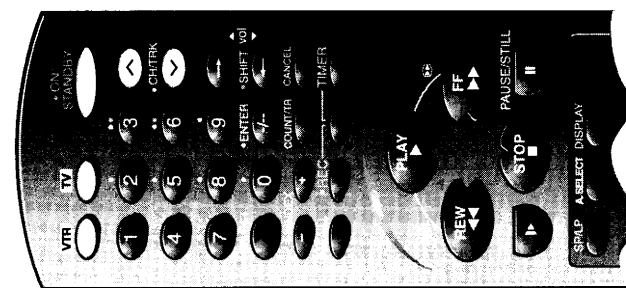

**Note:** Regional variations - from some areas of the country you may be able to receive broadcasts from more than one region.

If your preferred regional broadcast is stored in position 7 or above please use the **Channel Swapping** facility as described on page 10.

GETTING STARTED

# Auto Set Up continued

After connecting the Leads as on page 7 and Auto Set Up has run, one of the following screens will be displayed. **If not, select the AV channel on the television manually.** If you have not connected the VTR using a SCART Lead select the channel on the TV that you normally watch videos on and tune this channel until you find one of these screens. Store this channel and select it every time you watch a video.

1 This screen will be displayed if **All Channels Found**. The numbers in the right hand column may be different.

Auto Set Up is now complete.

Press the **MENU** button twice on the Remote Control to automatically set the clock.

Go to page 9, *Checking the Auto Set Up*.

AUTO SET UP	
CH	CH
BBC1	22
BBC2	28
ITV	25
CH4	32
CS	30

Auto Set Up Now Completed  
Press **MENU** to Exit And Automatically Set Clock

2 This screen will be displayed if **Some Channels Found**.

The VTR has been unable to find the channels identified by the white flashing squares. They may be stored in positions 7 and above.

Press the **MENU** button and refer to *Channel Swapping* on page 10.

AUTO SET UP	
CH	CH
BBC1	22
BBC2	28
ITV	25
CH4	32
CS	30

Stations not identified by flashing squares above by pressing **MENU**

3 This screen will be displayed if **No Channels Found**.

The VTR has been unable to find any channels.

Check that the Aerial is connected correctly and press the number button 0 on the Remote Control.

If no channels are found a second time, see page 12, *Manual Tuning*.

AUTO SET UP	
CH	CH
BBC1	22
BBC2	28
ITV	25
CH4	32
CS	30

Still not working. Use manual tuning. Press **MENU** to exit

4 This screen will be displayed if **No Channels Found**.

The VTR has been unable to find any channels.

Check that the Aerial is connected correctly and press the number button 0 on the Remote Control.

If no channels are found a second time, see page 12, *Manual Tuning*.

AUTO SET UP	
CH	CH
BBC1	22
BBC2	28
ITV	25
CH4	32
CS	30

Still not working. Use manual tuning. Press **MENU** to exit



...If you get any problems contact the helpline

8

For full details of tuning your TV, please refer to your TV Owner's Manual.

**Channel 5** is only available in some areas of the country (and the reception may be poor). If Channel 5 is not stored in position 5 check to see if it is stored in 7 or above and use the Channel Swapping function as detailed on Page 10. If Channel 5 has not been stored and all other channels have been, it is likely that Channel 5 is not available in your area.

If no channels are found the clock will not set automatically.

Press the **MENU** button and select **CLOCK SET** from the green MAIN MENU screen.

Using the number buttons on the Remote Control set the clock.


For single numbers press 0 first.  
E.g. for April, which is 4, press 0 4.

Once the Date and Time have been set press the **MENU** button to exit.

## 66 GETTING STARTED

# Restarting Auto Set Up

If you ever need to re-run the Auto Set Up process, for example, if you move house, carry out the connections as detailed on *page 7* and re-start as described here.

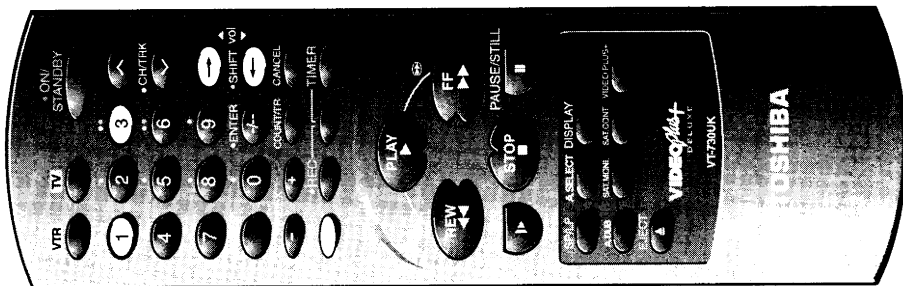

- 1 Press the **MENU** button on the Remote Control to display the green **MAIN MENU** on the screen.
 

**MAIN MENU**

    - 1 **TIMER PROGRAMMING**
    - 2 **USER SETTING**
    - 3 **INSTALLATION**
    - 4 **VIDEO SETTING**
    - 5 **nextViewLink SETTING**

Press **1** - **5** to select  
Press **MENU** to exit
  - 2 Press button 3 to select the blue **INSTALLATION MENU**.
 

**INSTALLATION MENU**

    - 1 **AUTO SET UP**
    - 2 **MANUAL SET UP**
    - 3 **SATELLITE SETTING**
    - 4 **SAT CONNECTION (1P)**
    - 5 **VIDEO PLUS+ GUIDE CH**

Press **1** - **5** to select  
Press **MENU** to exit
  - 3 Press button 1 to select **AUTO SET UP**.
 

**AUTO SET UP**

CH 1 CH

BBC1	1	22
BBC2	2	28
ITV	3	25
ITV4	4	26
CS	5	30

Press **SHIFT** to search  
Press **MENU** to exit
  - 4 Press **SHIFT** → to start **AUTO SET UP**.
 

**AUTO SET UP**

CH 1 CH

BBC1	1	22
BBC2	2	28
ITV	3	25
ITV4	4	26
CS	5	30

Press **SHIFT** to search  
Press **MENU** to exit

...If you get any problems  
contact the helpline




GETTING STARTED

# Manual Tuning and Cable TV Installation

Manual Tuning is available as a back-up if Auto Set Up does not work due to poor Broadcast Reception. When using Manual Tuning you will need to use the information on both of the TV screen and the VTR front display panel.

**Note:** Some Cable systems send all their TV and Satellite programmes on one channel only. If you have this type of system you should tune in one Position number on the video and then use the Cable Box to select the chosen channel to record.

- BBC1: Position number 1  
BBC2: Position number 2  
ITV: Position number 3  
CHANNEL 4: Position number 4  
CHANNEL 5: Position number 5  
Satellite/Cable: Position number 6

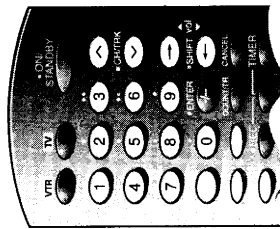

**Note:** The VTR must display a position number before tuning in can start. Remove any tape and if L1, L2 or SA is displayed, press the INPUT SELECT button on the Remote Control so that a position number is displayed.



GETTING STARTED

# Additional RF Tuning Information


In some areas of the country you may experience interference from other broadcast stations or from other AV equipment. This may be reduced or eliminated by choosing to turn OFF the RF output from your VTR.

If a SCART Lead has been used as detailed in the GETTING STARTED section and you are experiencing problems with interference from other equipment or channels, you can turn OFF the RF output.



- 1 Press the MENU button on the Remote Control to display the green MAIN MENU.
- 2 Press number button 3 to select the blue INSTALLATION MENU.
- 3 Press button 2 to select MANUAL SET UP.
- 4 Press button 3 to select RF OUT CHANNEL.
- 5 Press **SHIFT** or **←** until OFF appears in the RF OUT CHANNEL option.
- 6 Press MENU to exit.



*If you still believe you are having interference problems, consult your dealer or ring the Toshiba Helpline.*

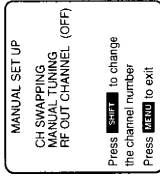


## Watching a Pre-Recorded Tape

If you insert a commercially pre-recorded tape, it will automatically start to play. If you have not used a SCART Lead you will first need to select the channel on the television that you watch videos on (refer to Additional RF Tuning information on page 13). The VTR is fitted with an autohead cleaner which automatically cleans the video heads during playback.


- 1 Insert a tape with the clear window facing upwards. The video cassette loaded "z" symbol will appear on the VTR front display.
- 2 To play the tape, press the PLAY button on the Remote Control.
- 3 To stop the tape press the STOP button on the Remote Control.
- 4 To eject a tape press the EJECT button on the Remote Control.

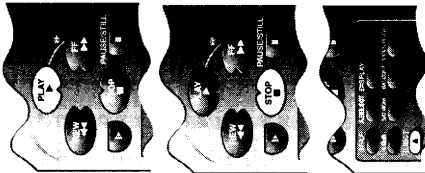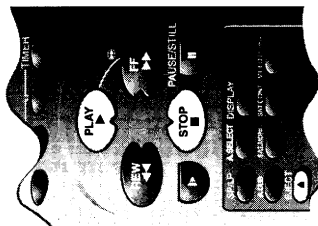

- 1 To play the tape, press the PLAY button on the front of the VTR.



- 2 To stop the tape press the STOP button.

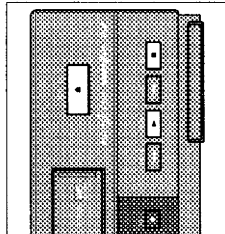

- 3 To eject the tape press the EJECT button.

## Tracking

As each VTR is different, slight adjustments need to be made in the way the tape is read. This is called 'Tracking'.


### To manually adjust Tracking

- 1 With a tape in and playing, hold down either the **CH/TRK** **A** or **V** button on the Remote Control until the best possible picture and sound is obtained.
- 2 To resume Automatic Digital Tracking, press the two **CH/TRK** buttons on the Remote Control.



- 3 If the tape is old or worn, it may be impossible to improve the picture performance.

If you press the **PAUSE/STILL** button the image may shimmer. This may also be reduced by adjusting the Tracking.

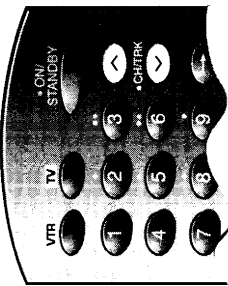

## BASIC OPERATION


## Variable Speed Playback

When viewing a tape it can be played at various speeds. This is called Picture Search.

As well as normal playback, you can view a tape at various speeds.

When watching a tape, you can look for a particular scene by pressing either the FF or REW button or view the tape in slow playback using the SLOW button. In Picture Search, the quality of the image may deteriorate. If you view a tape recorded in Long Play (LP) mode, or recorded on another VTR, the picture quality may be poor or even in black and white.

Improvements can sometimes be made by adjusting the Tracking, see page 15.

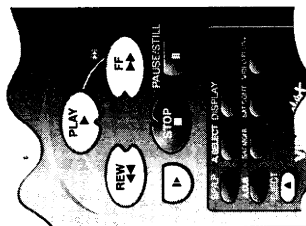

When in Picture Search or Slow Motion, the quality of the image may deteriorate.

## BASIC OPERATION

## Trick Play Functions

Holding images and advancing frames on the screen.

1 When in PLAY, if you want to hold an image on screen, simply press the PAUSE/STILL button.

This will freeze the frame for about 5 minutes.


2 To advance one frame at a time, press and release the PLAY button.

Press and hold the PLAY button.

3 To resume PLAY, press the PAUSE/STILL button again.

Note - If left unattended for about 5 minutes in the Picture Still mode, the Freeze Frame will cancel and the VTR will revert to PLAY.

Note: Fast moving images may shimmer when Freeze Frame is selected. This can sometimes be reduced by adjusting the Tracking, see page 15.

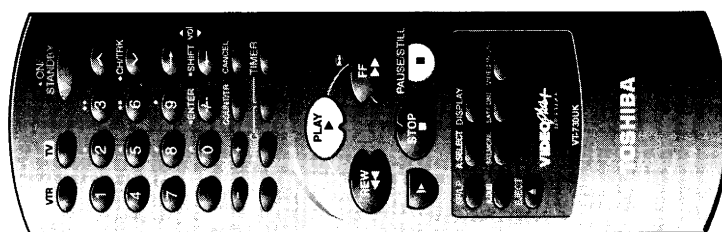

**Picture Search enables you to Fast Forward or Rewind and look for a particular part of a tape.**

1 Press PLAY, the VTR will enter normal play mode.

While in play, press and release the FF (or REW) button. The VTR will search at 5 times the normal playback speed.

To return to normal playback mode, press the PLAY button.

2 If you press and HOLD down the FF (or REW) button the VTR will search at 9 times the normal speed. Releasing the FF button will return the VTR to search at 5 times the normal speed. To return to normal playback mode, press the PLAY button.

3 While in Picture Search mode, if you press the FF button again, the VTR will enter normal Fast Forward mode.

4 Likewise, while in Picture Search REW mode, if you press the REW button again, the VTR will enter normal Rewind mode.

5 If, when Rewinding (REW) or Fast Forwarding (FF), you press the REW (or FF) button, the VTR will enter the Picture Search mode.


6 To view a tape in Slow Motion, when in PLAY, press and release the SLOW button on the Remote Control. The playback will slow down to 1/4th of normal speed.

If you press the SLOW button once again, the playback will slow down to 1/2th of normal speed.

Press PLAY to resume normal playback.

1 When in PLAY mode press the FF (Fast Forward) or REW (Rewind) button on the front of the VTR. The VTR will search at 5 times the normal playback speed. If you

press and HOLD down the FF (or REW) button the VTR will search at 9 times the normal speed. If you release the button, the VTR will enter normal Fast Forward/ Rewind speed. To return to normal playback, press PLAY.

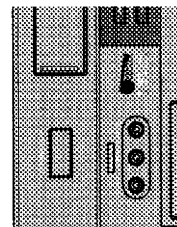


RECORDER

# VIDEO Plus+


**VIDEO Plus+** is the easiest way to record TV programmes, using short numerical codes. The PlusCode programming numbers shown in most TV listings pages, tell the video recorder when to start and stop recording a particular programme. These numbers appear after the programme description.

VideoPlus and PlusCode are trademarks of GEMSTAR development corp. VideoPlus+ system is manufactured under license from GEMSTAR development corporation

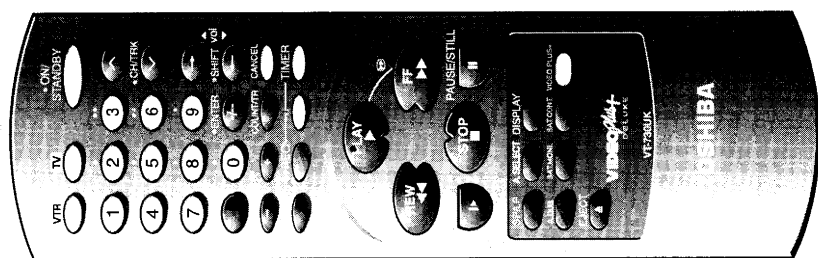

**\*PDC WARNING PLEASE NOTE:**  
If you have selected PDC ON (see page 23) do not change the advertised start time of the programmes or the video will not record.

18

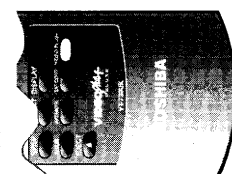

**1** Before you begin. Turn on the VTR and the TV.  
Ensure the clock is set correctly. Make sure that the TV stations have been stored correctly on the VTR as in the order shown on page 12.

**2** Press the VIDEO Plus+ button on the Remote Control.

**3** Enter the PlusCode, using the number buttons on the Remote control. E.g. to record a TV programme with a PlusCode of 1234, press 1234. Check that you have entered the numbers correctly and press the VIDEO Plus+ button to confirm. If you make a mistake, simply press the CANCEL button and re-enter the PlusCode.

**4** You are now prompted to confirm how many times you want to record this event - i.e. ONCE, DAILY or WEEKLY. E.g. ONCE. Press 1.

**5** The TV will now confirm the programme information that relates to the PlusCodes entered, along with the recording defaults. E.g. PDC ON/OFF\* and the tape speed: 1 for SP (Standard Play) or 2 for LP (Long Play).

If you wish to change the speed use SHIFT → and move to SPD, then press 1 for short play or 2 for long play.

**6** If you wish to enter another VIDEO Plus+ recording press the VIDEO Plus+ button again and repeat steps 3 to 4.


**7** If OK, press the two TIMER buttons at the same time. The TIMER indicator on the front panel of the VTR will light up.

To cancel the Timer, press the two Timer buttons again, then the ON/STANDBY button.


RECORDER

## One Touch Record - Advanced OTR

Recording the selected video channel at the touch of a button.

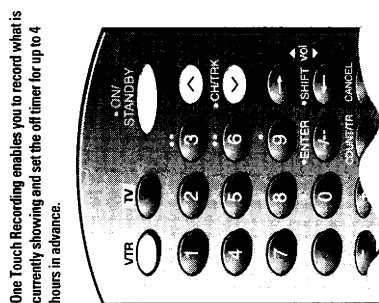


**1** One Touch Recording enables you to record what is currently showing and set the off timer for up to 4 hours in advance.

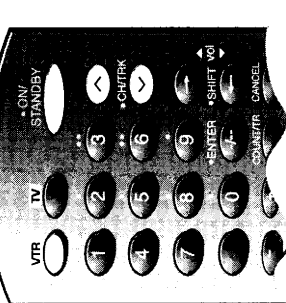

Advanced OTR starts recording simply at the touch of a button.

When using Advanced OTR the VTR will count the time from the hour and 1/2 past the hour. If you press the REC button at 14:15, the 1st off time shown will be 14:30, pressing the REC button again will set an off time of 15:00.

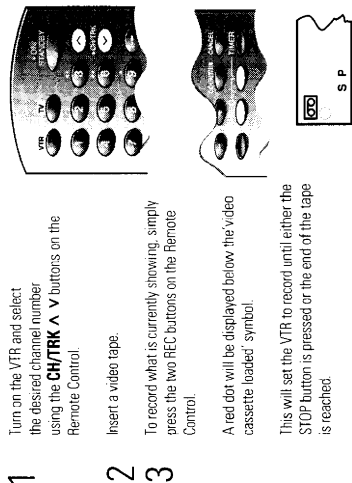

**1** Turn on the VTR and select the desired channel number using the CH/TRK ▲ V buttons on the Remote Control.


**2** Insert a video tape.

**3** To record what is currently showing, simply press the two REC buttons on the Remote Control.

A red dot will be displayed below the video cassette loaded symbol.

This will set the VTR to record until either the STOP button is pressed or the end of the tape is reached.

Turn on the TV and select the video channel.



**1** Turn on the VTR and select the desired channel number using the channel buttons on the front of the VTR.

**2** Insert a video tape. Press the REC button. A red symbol will be displayed below the 'video cassette loaded' symbol on the front of the VTR.

The VTR will continue to record until the STOP button is pressed or the tape runs out.

One more	30 minutes
Two more	1 hour
Three more	1 hour 30 minutes
Four more	2 hours
Five more	2 hours 30 minutes
Six more	3 hours
Seven more	3 hours 30 minutes
Eight more	4 hours
Nine more	4 hours 30 minutes
Cancel	...

By repeatedly pressing the REC button on the VTR you can set the VTR to record for a preset time. The VTR display will show the time that the recording will stop and a red timer symbol will appear.

To STOP an OTR, simply press the STOP button. To extend the recording time (i.e. delay the stop time) press the REC button on the VTR repeatedly to extend in 30 minute sections.

If you wish to skip a scene or adverts, simply press the PAUSE/STILL button. This will pause the recording. To start the recording again, simply press the PAUSE/STILL button again.

**NOTE: Advanced OTR only works with the REC button on the front of the VTR.**

19




68 RECORDING

## Using On-Screen Programming

Before recording a television broadcast, the clock, date and year must be correct. By setting the 'ADJUST CLOCK' on, see page 24, the VTR will check and correct the clock each morning at 8am provided the VTR is in Standby.

**Note:** Use the **SHIFT** → or ← buttons on the Remote Control to move the cursor forwards or backwards. If you make a mistake, simply press the **SHIFT** ← button to move back and re-enter the number.

Timer recordings can easily be made using the On-Screen Programming function. Up to 6 timed events can be set for up to one month in advance.

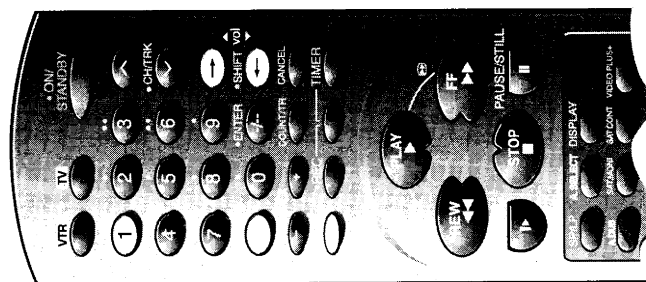

To cancel any programmed information, select **TIMER PROGRAMMING** from the green **MAIN MENU** and, with the event number highlighted e.g. 1, press the **CANCEL** button to clear the programmed information.

**\*PDC WARNING PLEASE NOTE**  
If you have selected **PDC ON**

(see page 23) do not change the advertised start time of the programmes or the video will not record.

20

68 RECORDING

## User Settings – Tape Select and Eco Mode

Presetting the video to your chosen recording defaults using the **USER SETTING** screen from the green **MAIN MENU**.

The **USER SETTING** screen has 2 displays.

By pressing **SHIFT** → whilst on the **USER SETTING 1/2** screen you will progress to the **USER SETTING 2/2** screen. Press **SHIFT** ← and you will go back to **USER SETTING** screen 1/2.

**MAIN MENU**

- TIMER PROGRAMMING
- USER SETTING 1/2
- INSTALLATION
- CLOCK SET
- nextViewLink SETTING


Press 1-9 to select  
Press **ENTER** to exit  
Press **MENU** to exit

**USER SETTING 1/2**

- TAPE SELECT (E180)
- ECO MODE (OFF)
- NTSC ON PAL TV (ON)
- VIDEO PLUS-EXTEND (OFF)
- COLOUR (ON)

Press 1-9 to change  
Press **ENTER** to next  
Press **MENU** to exit

**Note:** If you suffer a power failure the settings will need to be reset.

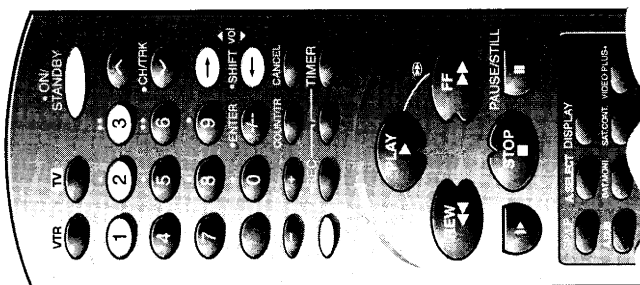

**Note:** Ensure you connect the VTR to the television using a SCART Lead.

4 Press **MENU** to exit

If you wish to use the tape counter to display the time remaining on a cassette, you must indicate the type of cassette inserted. Standard Play gives a better quality picture and sound. For the VTR to be able to calculate you must first tell it what length of tape is in the VTR.

- 1 Press the **MENU** button on the Remote Control to display the green **MAIN MENU**.
- 2 Press number button 2 to select the **USER SETTING 1/2** screen.
- 3 Press number button 1 repeatedly to select between (E180), (E240), (E260) and (E300).
- 4 Having selected the length of tape that is in the VTR, press the **MENU** button twice to exit.

**USER SETTING 1/2**

- TAPE SELECT (E260)

**ECO MODE** is useful if you already have a clock display e.g. on another Set Top Box, to save energy and for security. Without the clock display, the VTR is more difficult to spot in the dark.

In normal Standby mode the display on the front of the VTR shows clock. When **ECO MODE** is on this light turns red.

- 1 Press the **MENU** button on the Remote Control to display the green **MAIN MENU**.
- 2 Press number button 2 to select the **USER SETTING 1/2** screen.
- 3 Press button 2 to turn **ECO MODE ON**. Now, when the VTR is in Standby mode the front display panel will shut off. Even the clock disappears. By pressing the Standby button again on the Remote Control the display panel will reappear.


**USER SETTING 1/2**

- ECO MODE (ON)

21

# NTSC on PAL TV, VIDEOplus EXTEND and Colour

Note: If you suffer a power failure the settings will need to be reset.

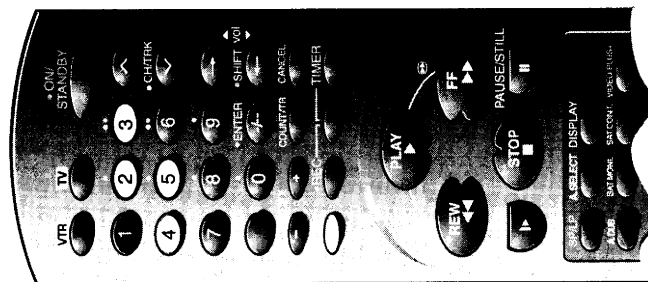

NTSC is the television standard used in many parts of the world.

See page 25 NTSC Playback.

- 1 Press the MENU button on the Remote Control to display the green MAIN MENU.
- 2 Press number button 2 to select the blue USER SETTING screen.
- 3 Press number button 3 repeatedly to select between ON or OFF.

USER SETTING 12  
NTSC ON PAL TV (ON)

To prevent delays or over-runs the VTR has a function called VIDEOplus-EXTEND allowing you to extend the recording time by up to 60 minutes. If PDC is set to ON, this VIDEOplus-EXTEND is ignored.

- 1 As steps 1-2 above and press button 4 repeatedly to set the VIDEO PLUS+ EXTEND time by increments of 10 minutes.

USER SETTING 12  
VIDEO PLUS-EXTEND (OFF)

- 2 To turn off, press 4 repeatedly until OFF shows.

To view video tapes in Colour the COLOUR option must be set to ON. However, when viewing black and white tapes you may find that by choosing OFF the picture is improved.

- 1 Press the MENU button on the Remote Control to display the green MAIN MENU.
- 2 Press number button 2 to select the blue USER SETTING screen.
- 3 Press number button 5 to select between ON or OFF.

USER SETTING 12  
COLOUR (ON)

# OSD Background and PDC

The Blue Background feature will automatically display a blue screen when a blank tape is played, no broadcast signal is received or there is no signal from the selected source, e.g. camcorder is connected but not switched on.

- 1 Press the MENU button on the Remote Control to display the green MAIN MENU.
- 2 Press number button 2 to select the USER SETTING 1/2 screen.
- 3 Press the **SHIFT** → to go to USER SETTING 2/2 screen. Press the number button 1 to turn OSD BACKGROUND ON.
- 4 Press MENU twice to exit.

USER SETTING 22  
OSD BACKGROUND (OFF)  
PDC DEFAULT (ON)  
ADJUST CLOCK (ON)  
169 (OFF)  
NICAM (OFF)  
Press **SHIFT** → to change  
Press **SHIFT** → to previous

Programme Delivery Control is a system of telling the VTR when a programme actually starts. Typically, when you want to record a programme you will tell the VTR to start recording, probably, five minutes before the advertised starting time of the programme and to finish ten minutes or so after the programme is due to finish. So even if the programme starts early or finishes late you will normally still get to see what you wanted to record. However, when live programmes over-run or the day's television schedule is changed from that advertised, you may miss the desired programme which may have been delayed or even cancelled.

With PDC the VTR will wait until the signal is sent to confirm the programme is starting and the VTR will record the programme even if it is two or more hours late.

- 1 Press the MENU button on the Remote Control to display the green MAIN MENU.
- 2 Press number button 2 to select USER SETTING 1/2.
- 3 Press **SHIFT** → to proceed on to the USER SETTING screen 2/2.
- 4 Press number button 2 to select ON in PDC DEFAULT option.
- 5 Press MENU to exit.

USER SETTING 22  
OSD BACKGROUND (OFF)  
PDC DEFAULT (ON)  
ADJUST CLOCK (ON)  
169 (OFF)  
NICAM (OFF)  
Press **SHIFT** → to change  
Press **SHIFT** → to previous


Note: Currently, not all broadcasters transmit PDC signals and, if you do use PDC you must set the exact advertised start and end times. Not five minutes before and ten minutes after.

## RECORDING

## User Settings continued

## – Adjust Clock, nextViewLink

You can preset the video to your chosen recording defaults by using the **USER SETTING** screens from the green MAIN MENU. **ONLY USE THESE OPTIONS IF YOU HAVE A nextViewLink TELEVISION.**

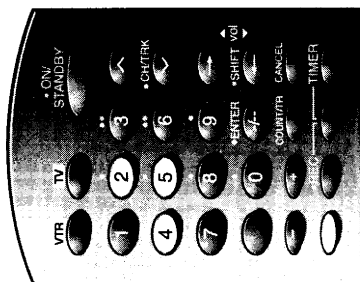

**Note: Ensure you connect the VTR to the television using a SCART Lead.**

## nextViewLink:

In the future, new types of **Teletext** may be available. This Electronic Programming Guide (EPG) will enable you to utilise **nextViewLink**.

However, before you can use nextViewLink you must set the VTR to receive information from a nextViewLink TV. **TV CH P DOWN LOAD**, the first option will enable you to download the channel order that is stored on your TV. Having done this, you can then send instructions directly from the nextViewLink pages.

## THESE OPTIONS ONLY WORK WITH A nextViewLink TELEVISION.

- By setting the **ADJUST CLOCK** to ON there will be no need to adjust the clock manually. This will be automatically carried out for you daily.
- Press the **MENU** button on the Remote Control to display the green MAIN MENU.
- Press button 2 to select the **USER SETTING 1/2** screen. Press the **SHIFT** button to go to **USER SETTING 2/2** screen.
- Press button 3 to turn **ADJUST CLOCK** OFF and press **MENU** to exit.
- Press the **MENU** button on the remote control to select the green MAIN MENU. Press button 5 to select the nextViewLink SETTING screen.
- Press number button 1 to select **TV CH P DOWN LOAD**. By pressing the number buttons to select the channels, download the channel orders by pressing **SHIFT**.
- Having downloaded the channel order you must now instruct the VCR to accept this information. Follow the on screen instructions.
- Press the **MENU** button to exit **TV CH P DOWN LOAD** screen. Now select 2 **TV PICTURE RECORD** from the nextViewLink SETTING menu and press number button 2 to change to ON. To turn this facility off, press button 2 whilst in the nextViewLink SETTING screen.
- Having downloaded the channel order and set the **TV PICTURE RECORD** to ON you can now instruct the VCR to record information from the television. For example, you may be watching a news item and decide to record it. Because the setting on the **PICTURE RECORD** was turned ON the VCR will automatically record from the current television station, irrespective of what channel the VCR is set to (unlike the **CH** function by pressing the two REC buttons).

The TV will automatically switch the VCR into Timer Mode.

**USER SETTING 2/2**  
ADJUST CLOCK (ON)

**MAIN MENU**  
TIMER PROGRAMMING  
USER SETTING  
INSTALLATION  
CLOCK SET  
nextViewLink SETTING  
Press 1 to select  
Press **MENU** to exit

**nextViewLink SETTING**  
TV CH P DOWN LOAD  
TV PICTURE RECORD (OFF)  
Press 1 to select  
Press **MENU** to exit


**TV CH P DOWN LOAD**  
CH P  
1  
Press **SHIFT** to DOWN LOAD  
Press **MENU** to exit

**nextViewLink SETTING**  
TV CH P DOWN LOAD  
TV PICTURE RECORD (OFF)  
Press 1 to select  
Press **MENU** to exit

## RECORDING

## 16:9 (Wide Screen Compatibility)

The VTR automatically adjust the image to fill the wide TV screen when you play back a tape commercially available which is recorded in the wide screen format, or when you record or play back a wide TV programme via the connected satellite receiver, etc.

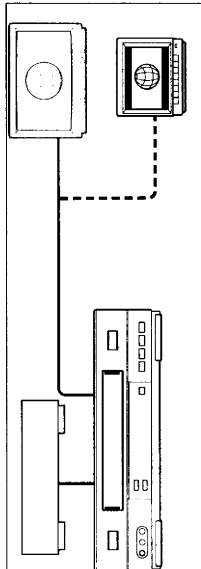

1 Press the **MENU** button on the remote control to select the green MAIN MENU.

2 Press button 2 to select the **USER SETTING 1/2** screen. Press the **SHIFT** button to go to **USER SETTING 2/2** screen.

3 Press button 4 to set "16:9" **AUTO**. Set when you use a Wide TV. The VTR detects wide TV programmes and normal TV programmes automatically when playing back and recording.


ON. The VTR always plays back and records in the mode compatible with 16:9 wide screen. Set if the VTR cannot detect wide TV programmes with "AUTO" set.

OFF. Set if you do not use a wide TV.

4 Press the **MENU** to exit.


**MAIN MENU**  
TIMER PROGRAMMING  
USER SETTING  
INSTALLATION  
CLOCK SET  
nextViewLink SETTING  
Press 2 to select  
Press **MENU** to exit

**USER SETTING 2/2**  
16:9 BACKSCANNING (OFF)  
PIC DEFALT (OFF)  
ADJUST CLOCK (ON)  
16:9 (OFF)  
NICAM (OFF)  
Press 4 to change  
Press **MENU** to previous  
Press **MENU** to exit

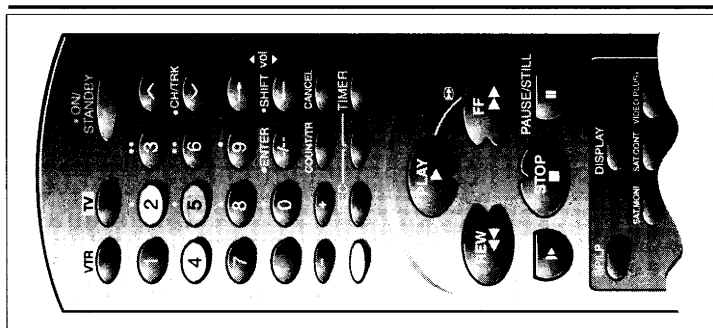

# NTSC Playback

NTSC is the broadcasting standard used in Japan and the USA. The VTR has a function that enables you to view NTSC tapes.

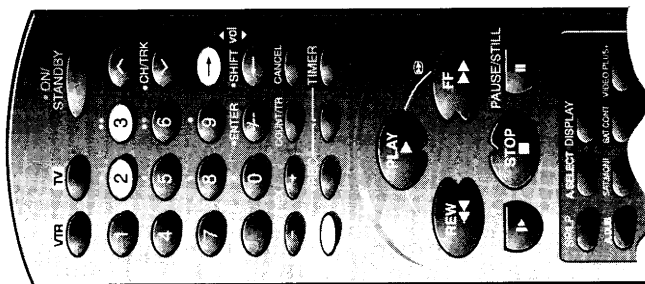

**Note:** The playback quality of NTSC tapes is not as good as PAL tapes and the picture and sound quality may be poor. The picture may shrink vertically, black bars may appear at both the top and bottom of the screen and Variable Speed Playback may not function correctly (i.e. Picture Still, Search, Slow Playback etc). Digital Auto Tracking may not work correctly.


Playback of recordings made in LP mode may be poor due to the limitations of conversion.

# Connections

## Satellite Compatibility:

In order for these functions to work you must have a compatible Satellite receiver. Some Pace and Nokia Satellite receivers are not compatible with this VTR, for instance Pace have recently changed the IR control codes of the MSS100, therefore some machines will be compatible while others are not. Incompatible MSS100 receivers can be identified by the Remote Control part number "RC10" which is printed on the handset.

## Positioning the Satellite receiver:

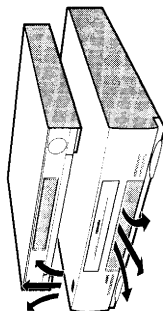


The VTR will control or 'talk' to the Satellite receiver via infra-red signals which are sent out from the VTR's display window and top-mounted sensor.

It is essential that you correctly position the VTR and Satellite receiver. Ideally, you should position the Satellite receiver above the VTR.

- Do not block the VTR's sensors
- The infrared signals come out of the sensor windows, bounce off walls and objects in the room and are picked up by the Satellite receiver.

**Note:** When using a SCART Lead between the Satellite receiver and the VTR always ensure that you connect the SCART Lead to the SCART input socket marked SATELLITE IN on the VTR.

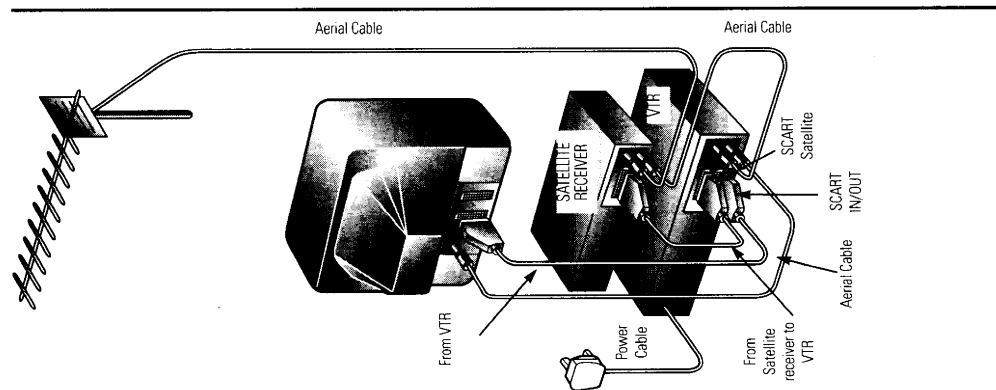

## Playing back a cassette on a PAL ONLY TV

The VTR will decode NTSC signals, so the NTSC option available on the VTR must be set to ON.

- 1 Press the MENU button to display the green MAIN MENU.  

MAIN MENU	
1	TAPE PROGRAMMING
2	USER SETTING
3	INSTALLATION
4	CLOCK SET
5	next ViewLink SETTING

Press 1 to select  
Press MENU to exit
- 2 Press button 2 to select the blue USER SETTING 1/2 screen.  

USER SETTING 1/2	
1	TAPE SELECT (E180)
2	ECO MODE (OFF)
3	NTSC ON PAL TV (OFF)
4	VIDEO PUSH-EXTEND (OFF)
5	COLOUR (ON)

Press 1 to change  
Press ENTER to next  
Press MENU to exit
- 3 Press button 3 to select NTSC ON PAL TV ON.
- 4 Press MENU twice to exit.

## Playing back a cassette on an NTSC 4.43 compatible TV

The TV will decode the NTSC signal, so the 'NTSC Playback on PAL TV' option available from the VTR must be set to OFF.

- 1 Press the MENU button to display the green MAIN MENU.  

USER SETTING 1/2	
1	TAPE SELECT (E180)
2	ECO MODE
3	NTSC ON PAL TV (ON)
4	VIDEO PUSH-EXTEND (OFF)
5	COLOUR (ON)

Press 2 to change  
Press ENTER to next
- 2 Press button 2 to select the blue USER SETTING 1/2 screen.
- 3 Press button 3 to select NTSC ON PAL TV OFF.
- 4 Press MENU twice to exit.

SATELLITE CONTROL

# Control of Satellite Channels via Satellite Control

Having connected your Satellite receiver and positioned it correctly, you now need to tell the VTR how it is connected, what Brand of Satellite receiver you have and what order of Satellite channels have been set.

1 Press the MENU button on the Remote Control to display the green MAIN MENU.

**MAIN MENU**

- 1 TIMER PROGRAMMING
- 2 CHANNEL SETTING
- 3 INSTALLATION
- 4 CLOCK SET
- 5 nextViewLink SETTING

Press 1-5 to select  
Press **MENU** to exit

2 Press button number 3 to select the blue INSTALLATION MENU and 3 again to select the blue SATELLITE SETTING screen.

**INSTALLATION MENU**

- 1 AUTO SET UP
- 2 MANUAL SET UP
- 3 SATELLITE SETTING (LINE1)
- 4 SATELLITE SETTING (LINE2)
- 5 SAT. BRAND NO. (017)
- 6 VIDEO PLUS+ GUIDE CH

Press 1-6 to select  
Press **MENU** to exit

3 Select 1 - 4 depending on how you have connected the Satellite receiver.

**SATELLITE CONNECTION**  
How is your satellite connected?

- 1 SATELLITE SCART (SAT)
- 2 RF AERIAL (CH P)
- 3 AV SCART (LINE1)
- 4 FRONT AV (LINE2)

Press 1-4 to select  
Press **MENU** to exit

If you have connected the Satellite receiver using RF AERIAL (Option 2 from the SATELLITE CONNECTION) the VTR needs to be told to which channel you have tuned your Satellite. The screen will prompt you. Use the number buttons on the Remote Control. e.g 06 for channel 6.

If the Satellite receiver has been connected - turned on and set to Sky News - prior to running AUTO SET UP then the Satellite receiver should be stored in position 6.

4 Once this number has been entered, press the MENU button on the Remote Control.

Enter the Satellite Brand Code from the table on page 29 using the numbered buttons on the Remote Control, even if the correct code is shown.

The VTR will send a test signal to the Satellite receiver.

Continued overleaf.

5

If the Satellite receiver switches to channel 12 it is working correctly. Press **MENU** to continue and go to instruction 7 below.

**SAT. BRAND NO. (017)**

sending a test signal of CH 12 to your satellite

6 If it does not switch to channel 12 continue trying the list of Brand Codes until the VTR controls the Satellite.

**Dig SAT. CH change to 12?**

YES: Press **MENU**  
NO: Try another No.

**SAT. BRAND NO. (017)**

If all numbers tried are incorrect, press **MENU** on next screen.

Press **MENU** - next screen

**Note:** If no Codes work, press the **MENU** button on the Remote Control and select NO SAT CONTROL on the next screen and see step 9 below.

7 You now need to tell the VTR the Channel order on your Satellite receiver.

**SATELLITE CH ORDER**  
How is your satellite receiver tuned?

- 1 SKY ORDER
- 2 ASTRA ORDER
- 3 PERSONAL PREFERENCE
- 4 NO SATELLITE CONTROL

Press 1-4 to select  
Press **MENU** to exit

Most Satellite receivers are preset to either SKY or ASTRA order. If, however, you have changed the order then you will need to select 3 PERSONAL PREFERENCE on the SATELLITE CH ORDER screen and change the VIDEO Plus+ GUIDE numbers accordingly.

Select 1-4 and this will customise your VTR to your Satellite receiver.

8

If you selected 3 PERSONAL PREFERENCE you will need to enter the channel order of the Satellite receiver (see the example right). Use the table on page 29 to help.

**Example only**


GUIDE	CH P
101	SAT
102	SAT
103	ISAT
104	SAT
105	SAT
106	SAT

Enter CH P or LINE  
Press **MENU** to change GUIDE  
Press **MENU** to exit

9 If you selected 4 NO SATELLITE CONTROL, you will need to manually select the correct Satellite channel on the receiver when you want to record a Satellite programme.

The set-up is now complete

29

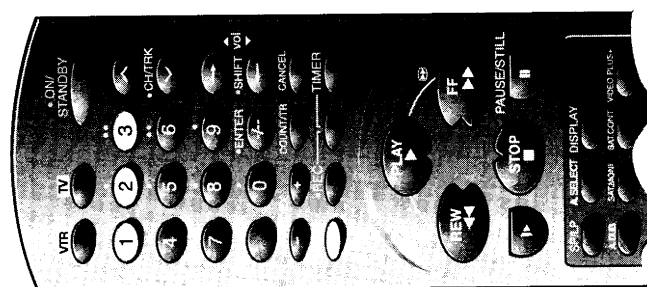

28

# Control of Satellite Channels via Satellite Control

From the tables below look up the make of the Satellite Receiver and note the Brand Code. The Channel order may change from time to time – contact your Satellite provider for the latest details.


Brand Name	Brand Code	
TOSHIBA	017	023
ALBA	017	020
AMSTRAD	017	022
AMSTRAD	017	021
AMSTRAD	017	024
AMSTRAD	017	025
AMSTRAD	017	026
AMSTRAD	017	027
AMSTRAD	017	028
AMSTRAD	017	029
AMSTRAD	017	030
AMSTRAD	017	031
AMSTRAD	017	032
AMSTRAD	017	033
AMSTRAD	017	034
AMSTRAD	017	035
AMSTRAD	017	036
AMSTRAD	017	037
AMSTRAD	017	038
AMSTRAD	017	039
AMSTRAD	017	040
AMSTRAD	017	041
AMSTRAD	017	042
AMSTRAD	017	043
AMSTRAD	017	044
AMSTRAD	017	045
AMSTRAD	017	046
AMSTRAD	017	047
AMSTRAD	017	048
AMSTRAD	017	049
AMSTRAD	017	050
AMSTRAD	017	051
AMSTRAD	017	052
AMSTRAD	017	053
AMSTRAD	017	054
AMSTRAD	017	055
AMSTRAD	017	056
AMSTRAD	017	057
AMSTRAD	017	058
AMSTRAD	017	059
AMSTRAD	017	060
AMSTRAD	017	061
AMSTRAD	017	062
AMSTRAD	017	063
AMSTRAD	017	064
AMSTRAD	017	065
AMSTRAD	017	066
AMSTRAD	017	067
AMSTRAD	017	068
AMSTRAD	017	069
AMSTRAD	017	070
AMSTRAD	017	071
AMSTRAD	017	072
AMSTRAD	017	073
AMSTRAD	017	074
AMSTRAD	017	075
AMSTRAD	017	076
AMSTRAD	017	077
AMSTRAD	017	078
AMSTRAD	017	079
AMSTRAD	017	080
AMSTRAD	017	081
AMSTRAD	017	082
AMSTRAD	017	083
AMSTRAD	017	084
AMSTRAD	017	085
AMSTRAD	017	086
AMSTRAD	017	087
AMSTRAD	017	088
AMSTRAD	017	089
AMSTRAD	017	090
AMSTRAD	017	091
AMSTRAD	017	092
AMSTRAD	017	093
AMSTRAD	017	094
AMSTRAD	017	095
AMSTRAD	017	096
AMSTRAD	017	097
AMSTRAD	017	098
AMSTRAD	017	099
AMSTRAD	017	100
AMSTRAD	017	101
AMSTRAD	017	102
AMSTRAD	017	103
AMSTRAD	017	104
AMSTRAD	017	105
AMSTRAD	017	106
AMSTRAD	017	107
AMSTRAD	017	108
AMSTRAD	017	109
AMSTRAD	017	110
AMSTRAD	017	111
AMSTRAD	017	112
AMSTRAD	017	113
AMSTRAD	017	114
AMSTRAD	017	115
AMSTRAD	017	116
AMSTRAD	017	117
AMSTRAD	017	118
AMSTRAD	017	119
AMSTRAD	017	120
AMSTRAD	017	121
AMSTRAD	017	122
AMSTRAD	017	123
AMSTRAD	017	124
AMSTRAD	017	125
AMSTRAD	017	126
AMSTRAD	017	127
AMSTRAD	017	128
AMSTRAD	017	129
AMSTRAD	017	130
AMSTRAD	017	131
AMSTRAD	017	132
AMSTRAD	017	133
AMSTRAD	017	134
AMSTRAD	017	135
AMSTRAD	017	136
AMSTRAD	017	137
AMSTRAD	017	138
AMSTRAD	017	139
AMSTRAD	017	140
AMSTRAD	017	141
AMSTRAD	017	142
AMSTRAD	017	143
AMSTRAD	017	144
AMSTRAD	017	145
AMSTRAD	017	146
AMSTRAD	017	147
AMSTRAD	017	148
AMSTRAD	017	149
AMSTRAD	017	150
AMSTRAD	017	151
AMSTRAD	017	152
AMSTRAD	017	153
AMSTRAD	017	154
AMSTRAD	017	155
AMSTRAD	017	156
AMSTRAD	017	157
AMSTRAD	017	158
AMSTRAD	017	159
AMSTRAD	017	160
AMSTRAD	017	161
AMSTRAD	017	162
AMSTRAD	017	163
AMSTRAD	017	164

*Please note:  
These charts were correct at time of going to press.  
Names and Codes may vary.*

# Control of Satellite Channels

## Satellite Control function

**Note:** Some Satellite receivers may not respond to all the operations described, or may not be operated with this Remote Control. In these cases, operate the Satellite receiver using its own remote control.

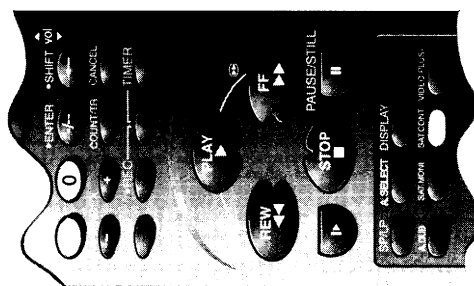

**Satellite Control enables you to change channels on the Satellite using the VTR Remote Control.**


- Press the VTR button to ensure you are in VTR mode. Press the SAT CONT. (Satellite Control) button to switch Satellite Control ON. The VTR is now in Satellite Control mode and the VTR will automatically select the Satellite Input on the VTR that you have previously set.
- 'SAT' will appear in the VTR display panel, to switch it off, press the SAT CONT. button again.
- Select a Satellite channel using the numbered buttons on the Remote Control. Depending on the Satellite receiver, the ways of use may differ. For example: to select SKY MOVIES (on channel 3) either press 0 then 3, or 0 then 3 then the ENTER button, or 0 then 3 then the ENTER button twice.
- When you have finished press the SAT CONT. button to switch the Satellite Control OFF. To reset the VTR to record from BBC 1, ITV etc, press the INPUT SELECT button repeatedly until a programme position number is displayed.
- Some functions of the Remote Control will not work whilst in this mode. To exit this mode, press the SAT CONT. button on the Remote Control. 'SAT' will disappear from the VTR display panel.

If the Satellite receiver has two SCART outputs, one to the VTR and another to the TV, you do not need to use this function.

**To view Satellite you must select the SCART socket on the television (refer to the TV Owner's Manual).**

- 1 Press the **SAT MONI (SATELLITE MONITOR)** button on the VTR Remote Control; this will loop the Satellite signal through the VTR up to the television.
- 2 If it has not been automatically selected, select the **SCART** socket on the television (refer to TV Owner's Manual).
- 3 To cancel press the **SAT MONI** button again.

**Note:** If you press the MENU button on the Remote Control to display the green MAIN MENU on the TV screen the Satellite Monitor Function will cancel.

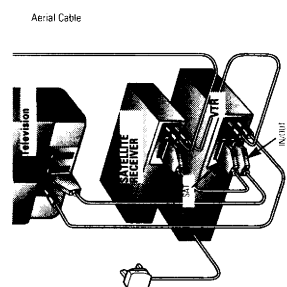

# Recording from Satellite – VIDEOplus+ DELUXE, Recording and Timer

If you have not followed the Satellite installation instructions as described in these *Satellite Control* pages you will NOT be able to use VIDEOplus+.



This gives the simplicity of VIDEOplus+ but also allows the recording of Satellite programmes. If Satellite Control works, VIDEOplus+ will operate in the same way, see page 18.

Recording can be used in the same way as described on page 19.


- 1 All you need to do is press the INPUT SELECT button on the Remote Control to select the appropriate connection.

e.g. SA for SATELLITE SCART

06 for RF channel number 6, etc.

You must ensure that the Satellite receiver is set to the required channel manually.

Timer recordings from Satellite channels can be made in the same way as described on page 20.



- 1 All you need to do is use the INPUT SELECT button on the Remote Control to select the appropriate connection:

e.g. SA for SATELLITE SCART


06 for RF channel number 6, etc.

If you have set up the Satellite Control function as described on page 28, you can press SAT CONT. instead of the INPUT SELECT button. SAT CONT. automatically selects the required Satellite channel. If you use INPUT SELECT, you must ensure that the Satellite receiver is set to the required channel manually.

- 2 Press the SAT CONT. button to display SA and enter the appropriate Channel number for the Satellite programme you wish to record using the number buttons on the Remote Control.



If you have connected the VTR to a Cable system, please refer to the Cable provider for full details on how to set up using VIDEOplus+.

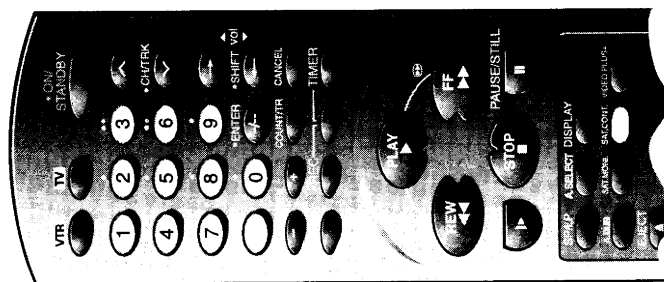

# Hi-Fi Stereo Sound system

Selecting different audio tracks when viewing a Hi-Fi stereo recorded tape.

The VTR is capable of recording and playing sound in a number of ways. As you select the different options the display on the front of the VTR will change accordingly.

This is factory set to L + R and in most instances there will be little need to alter any of these settings.

1

Repeatedly press the A SELECT (audio select) button on the Remote Control.



2

The output indicator on the front of the VTR will show the changes. From: L and R, L, R, blank, MIX L and R, and back to L and R.


3

**When the display shows both L and R:**  
Audio is played from both the Left and Right Hi-Fi tracks, giving a true stereo sound.



4

**When the display shows L:**  
Audio from the left soundtrack on the tape is output from the VTR.



5

**When the display shows R:**  
Audio sound from the right soundtrack on the tape is output from the VTR.




6

**When the display is blank:**  
Audio taken from the mono soundtrack is output from the VTR.



7

**When the display shows MIX L and R:**  
Stereo sound taken from the Hi-Fi track PLUS the MONO normal audio track is output from the VTR.

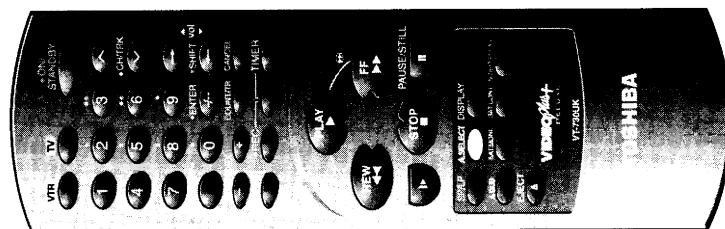

# Audio Dubbing

For adding soundtracks such as narration or music to previously - recorded video tapes.



In addition to the left and right Hi-Fi audio tracks there is another soundtrack called the 'normal audio track'.

This 'normal audio track' is mono track, recorded by all VTR recorders. When you record, the VTR uses the left and right Hi-Fi tracks for the normal stereo sound, but it also records a mono version of the soundtrack on the 'normal audio track'.

If you wish, you can record your own soundtrack onto this, the 'normal audio track' without affecting the soundtrack on the Hi-Fi.

This is ideal for putting a 'voice over' onto a home movie recorded on a camcorder.

In this way, you can keep the original soundtrack, but it means you can also add your own commentary.

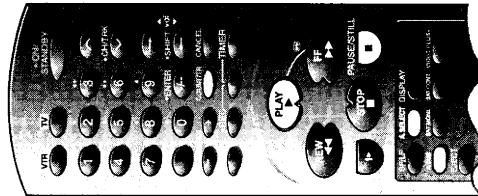

1 Connect suitable equipment *e.g.* cassette recorder to the IN/OUT (SCART) on the rear of the VTR.

2 Insert the tape to be OVER-DUBBED (the tape with the new audio track to be recorded onto).

3 Find the scene that you want to over-dub and press PAUSE/STILL on the Remote Control.


4 Press the A DUB (audio dub) button on the Remote Control. (The screen may flicker, this is normal.)

5 Press the PAUSE/STILL button again to start both the playback and the Audio dub record.

6 Play the sound from the external equipment.


7 When listening to the tape, use the A SELECT button to select the required option.

See page 22 for the selection soundtracks.

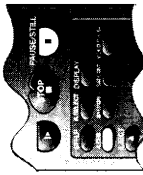

# Editing a Video Tape

Using another VTR or external equipment, you can copy a tape.

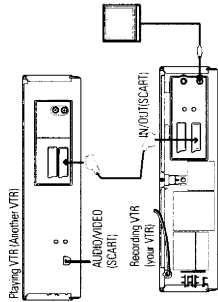


**Important**  
It is permissible to record television programmes only in the event that third party copyrights and other rights are not violated.

When using the IN/OUT (SCART) socket



- 1 Press the LSELECT button so that display shows "L1".
- 2 Press the SP/TP button to select the recording tape speed.
- 3 Play the tape on the playback VTR and press the REC buttons to start recording on this VTR.
- 4 Press the STOP button on each VTR when copying is finished.

**Note:** The picture quality of the copied tape is slightly less than the original picture quality.

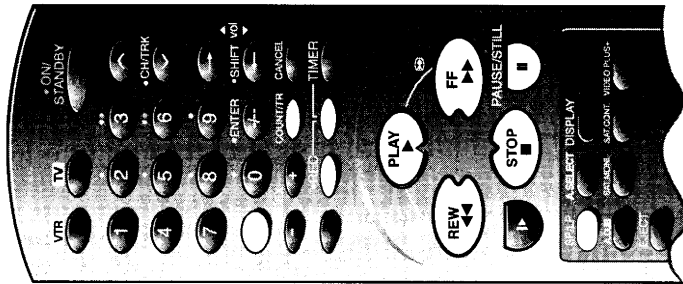

L1 (line1) SCART connection through IN/OUT (SCART 1) AUDIO/VIDEO

L2 (line2) RCA cable connection through LINE IN 2 (AUDIO/VIDEO)

SA SCART Connection through SATELLITE (SCART 2) INPUT




ADDITIONAL FUNCTIONS

# On-screen and VTR front panel displays

Pressing the DISPLAY button on the Remote Control when a tape is in PLAY will display the tape indicator on the TV screen. When you insert a tape, the counter will change from the current time to 0H00M00S. Pressing the COUNT/FR button will give you information on the VTR display panel.

## On Screen Displays

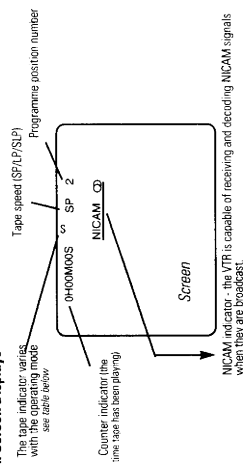

NICAM	STEREO TV programme (stereo sound)
NICAM /II	BILINGUAL TV programme transmitted in another language (not available in the UK)
UNLIT programme	NO NICAM programme or Normal TV (Monaural sound)

Tape indicator on screen symbol	
Ejecting a tape	Recording
STOP	Recording Pause
Fast-forwarding	Playback
Forward picture search	Pause/still picture
Rewinding	Frame advance
Reverse picture search	Slow Playback

## Counter - VTR Display

- By repeatedly pressing the COUNT/FR button on the Remote Control, you will see:
  - The time the tape has been playing.
  - TR\* - the amount of tape Remaining (approx).
  - Programme position number
  - The current time

\* Before the tape remaining function can work you must identify the length of tape in play - see page 21

ADDITIONAL FUNCTIONS

# Index marks and Index searches

Whenever a recording starts, the VTR puts an electronic index mark on the tape.

## Making and finding Index marks:

- To register an index mark *during recording*, simply press the INDEX + button on the Remote Control.
- To find the index marks when a tape is in playback, press the INDEX+ button to search forwards or the INDEX - button to search backwards.
- When an index mark is found the VTR will playback the tape for 5 seconds, after which it will continue searching for the next index mark.
- If you want to watch the tape from a particular index, simply press PLAY.

## Index Skip Search:

This feature will enable you to fast forward/rewind to a specific point on a tape: E.g. if you have recorded 3 different programmes on a tape and you have rewound the tape to the beginning, by using this feature you can go directly to the start of programme 2 simply by pressing the INDEX button.

- Press the INDEX + to start the index search.
- Press the INDEX + button twice more. This will take you directly to the start of the recording/index mark 2. The VTR counter will show the progress of the search.
- These index searches can be made forwards (press INDEX +) or backwards (press INDEX -).
- To cancel an index search simply press the PLAY or STOP button.

You can skip forward or backward a maximum of 20 index marks.

# **ADDITIONAL FUNCTIONS**

## **Multi-Brand Remote Control**


The Remote Control of the VTR can be compatible with various brands of Television by setting the control codes. The TOSHIBA code has initially been set to control TOSHIBA Televisions.

For some Brands several Control Codes, or Brand Codes are allocated. Try each of them until the buttons on the Remote Control work on the Television. When the Remote Control batteries are replaced, set the Brand Code again.

BRAND CODES	
TV Brand Name	Brand Code
TOSHIBA	01, 14, 15, 16, 17, 19
AAAI	08
BANG & OLUFSEN	20
BLAUPUNKT	04
BRANDT	11
BRUNNEN	20
CCE	19
CONTINENTAL EDISON	22
FERGUSON	11, 24, 25
FINLUX	02, 15, 20
FISHER	08
FORMENT	20
GOLDSTAR	02
GRUNDIG	04, 15, 19
HITACHI	06, 10, 11, 22
IMPERIAL	19
JVC	07
LOWEY	02
LOWE OPTA	02, 20
METZ	20
MITSUBISHI	02, 09, 14
MIVAR	19
NOKIA	21
NORDMENDE	10, 11, 22
PANASONIC (NATIONAL)	03, 21, 26
PHILIPS	02, 18, 20
PHONOLA	02, 18, 20
PIONEER	11, 21
RADIONA	02, 18
RADIONARELLI	20
REX	21
SABA	10, 11, 20, 21, 22
SALORA	21
SAMSUNG	02
SANYO	08, 14
SCANDIUM	02
SELEC	21
SHARP	05, 14
SIEMENS	04
SINGER	20
SINCLAYNE	20
SONY	13, 14
TELEAIA	11
TELEFUNKEN	11, 24
THOMSON	10, 11, 22
WEGA	20
YOKO	02

See the table opposite for the Television Brand Codes.

- 1 Press the TV button on the Remote Control.
- 2 Hold down the TV button on the Remote Control and enter the two digits of the TV's Brand Code using the number buttons.
- 3 Release the TV button.
- 4 With the Remote Control pointing at the Television use each button listed below to ensure that the TV is operated correctly –

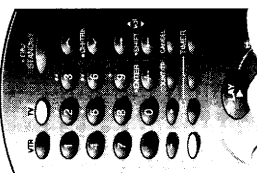

**ON/STANDBY:**

Turns to television on or off.

**CH/TRK:**

Selects the TV channels up or down.

**VOL:**

Adjusts the sound level.

**Number Buttons and ENTER +/-:**

To select TV channels. The way of use may differ with varying models of televisions.

**E.g. To select Channel 3:**

Press number buttons 0 3

or

Press number buttons 0 3 and the ENTER button

or

Press the ENTER button and the number button 3

**To select Channel 16:**

Press number buttons 1 6

or

Press number buttons 1 6 and then the ENTER button


or

Press the ENTER button twice and then the number buttons 1 and 6


**Note:** Some TVs may not respond to all the operations listed above or may not be operated at all with the VTR Remote Control. In which case operation of the TV will have to be by its own Remote Control.

## 2-2 IC Blocks


### 2-2-1 IC301 (LA71598M)

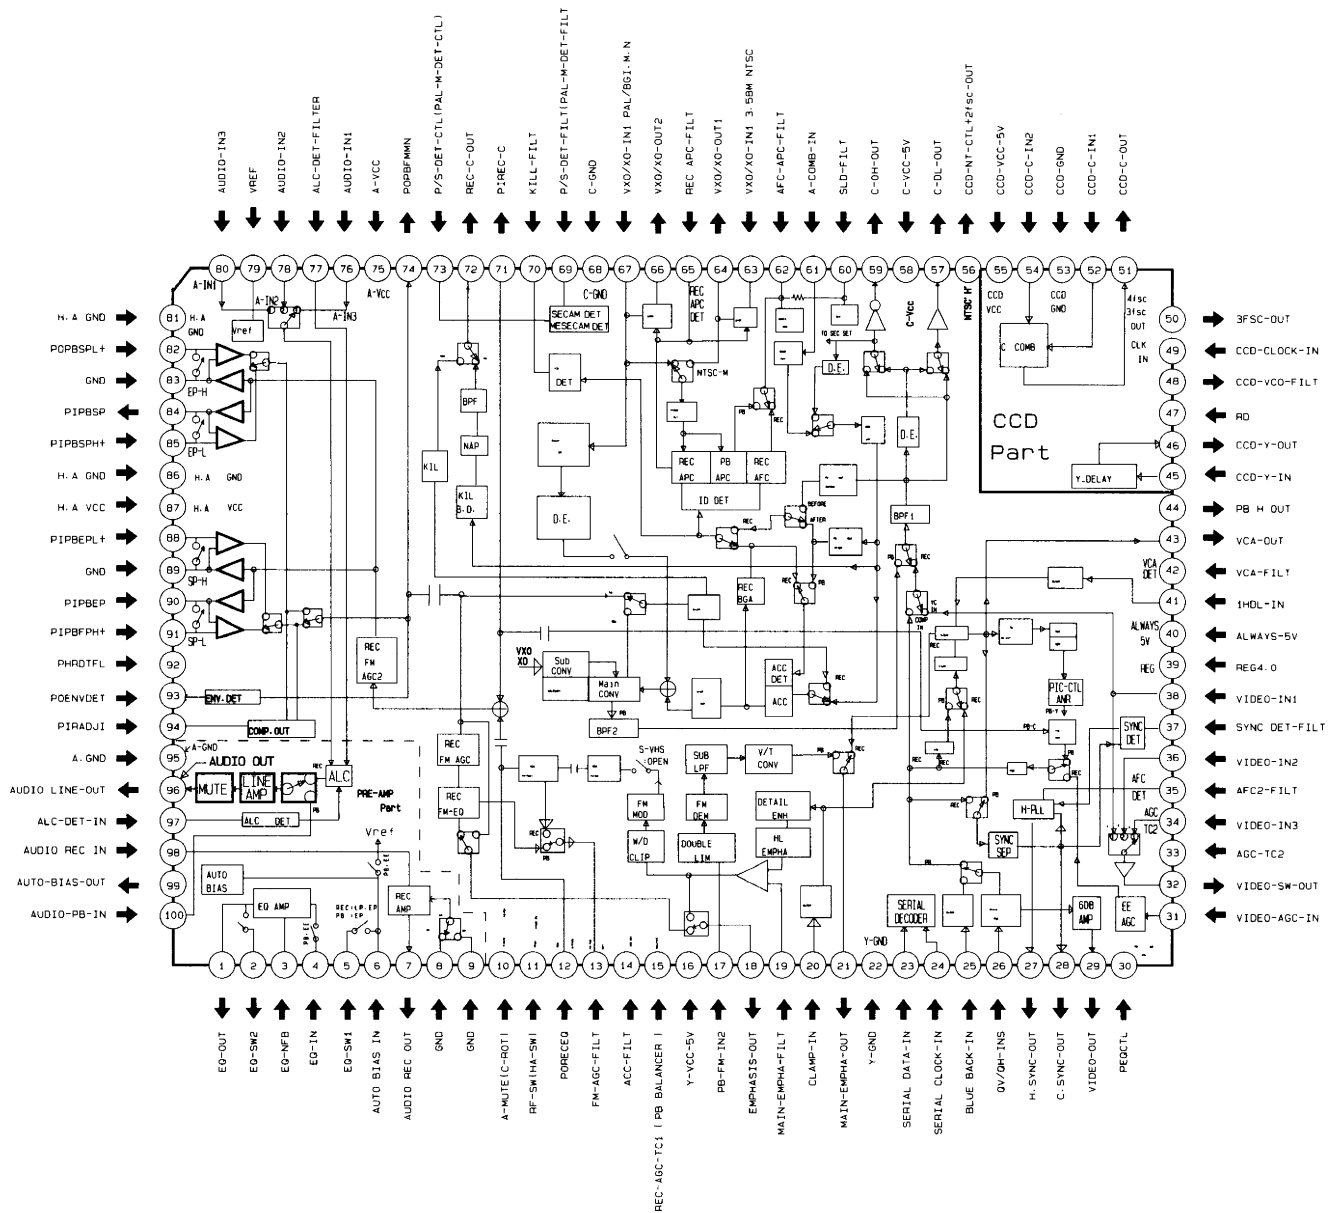

## 2-2-2 IC501 (LA72634AM)

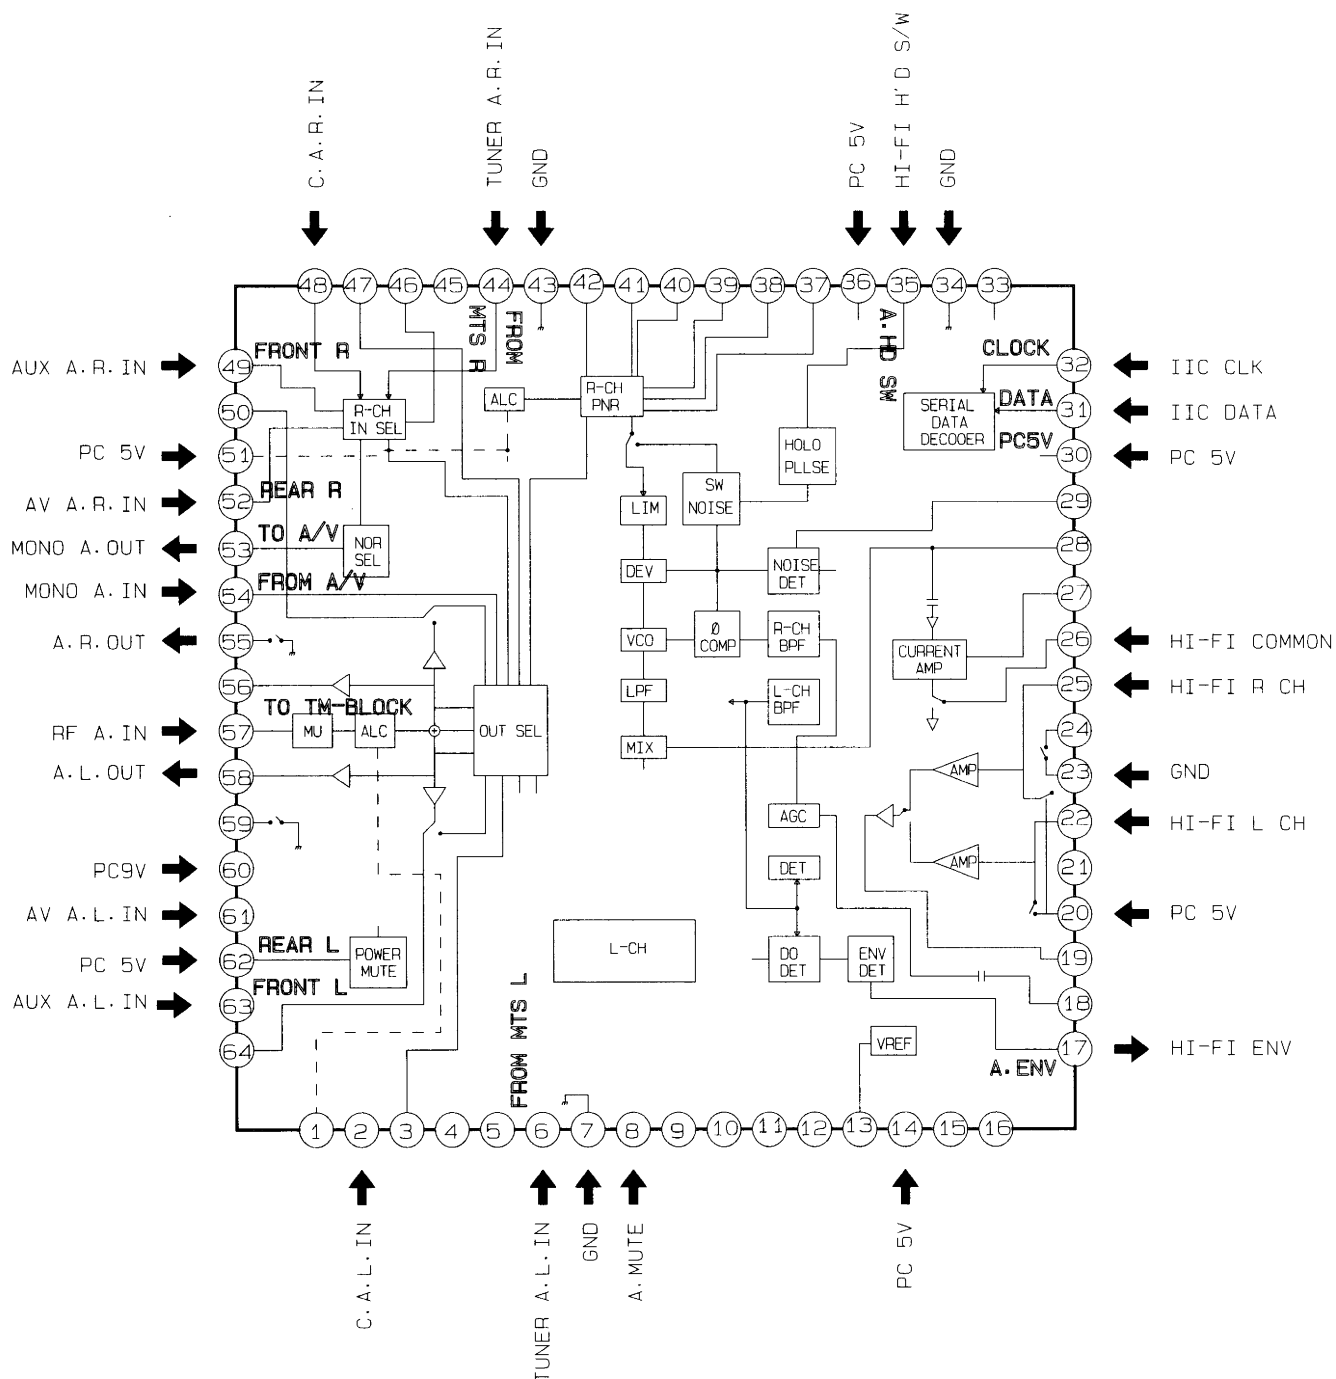

## 2-2-3 IC601 (uPD784927)

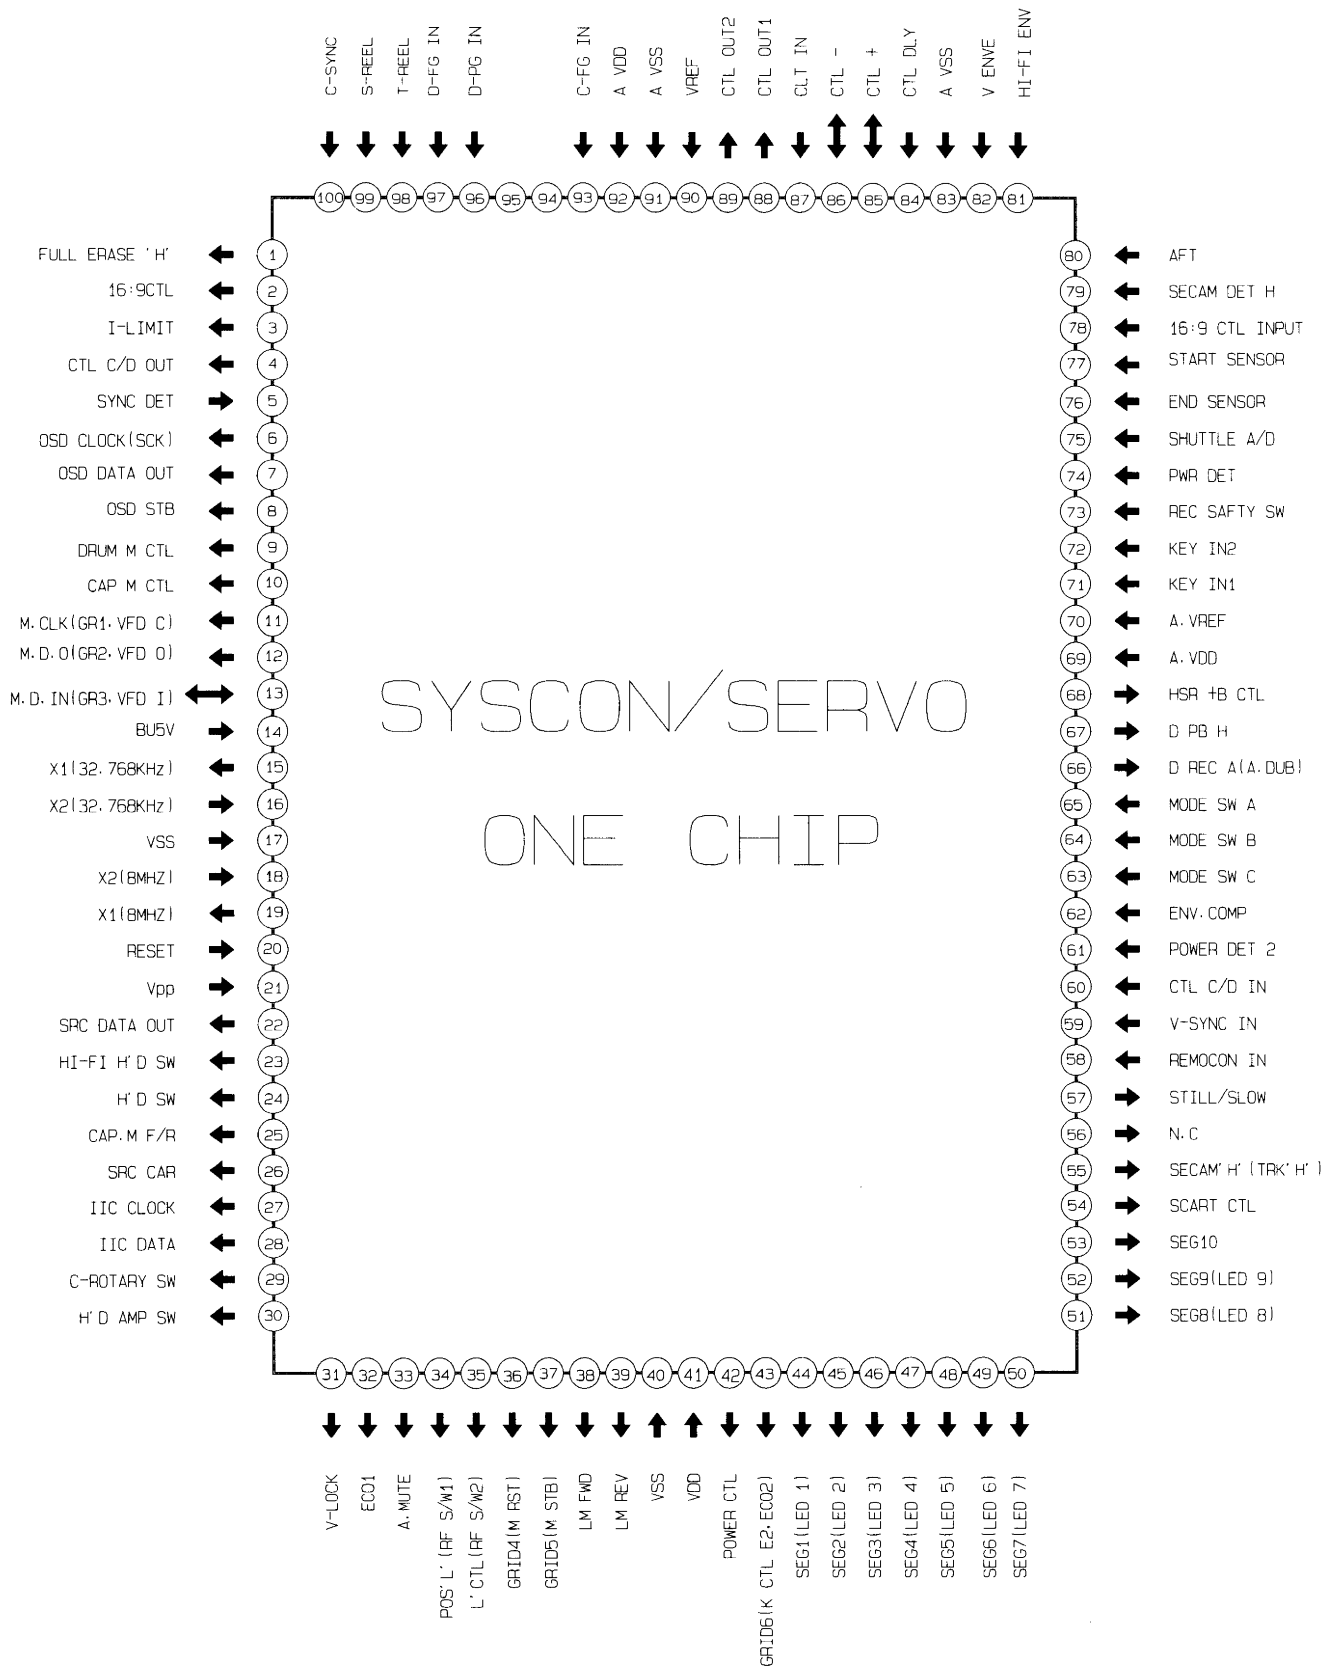

### 3. Product Specifications

Specifications and features are subject to change without notice.

OPERATION	DESCRIPTION
Power supply	230V/240V ("UK" Models), 230V ("EF/EG/W" Models) AC, 50Hz
Power consumption	18 Watts (Hi-Fi Models), 16 Watts (Non Hi-Fi Models), 5W (normal standby), 3W (ECO Mode standby)
External dimensions	360 (W) x 94 (H) x 298 (D) mm
Mass	3.3 kg approx.
Receiing channels	UK : VHF A-J (IRE), UHF 21-69, CATV X, Y, Z S1-41 EG : VHF E2-12 R2-12 A-H, UHF 21-69, CATV X, Y, Z S1-41 EF : VHF E2-12 F1-6 FB-FC, UHF E21-69, CATV X, Y, Z B-Q S1-41 70-92 W : VHF E2-12 R2-12 A-H, UHF 21-69, CATV X, Y, Z S1-41
Format	VHS standard
Video signal system	CCIR 625 lines, 50 fields, PAL colour signal, 525 lines NTSC colour (PB only)
Recording system/Playback system	UK : PAL SP, LP VHS format EG/W : PAL/MESECAM SP, LP VHS format EF : PAL/MESECAM/SECAM SP, LP VHS format PAL/MESECAM/SECAM SP VHS format (V-230F/V-229F)
NTSC playback	NTSC SP/SLP tape playback : NT4.43/NT PB ON PAL TV (V-230F/V-229F is SP only)
Fast forward/Rewind time	Within approx. 150s (When E-180 video cassette is used)
Aerial input/output	75 ohm coaxial
Video input/output	AUDIO/VIDEO SCART socket, 1.0Vp-p, 75ohm
Audio input	AUDIO/VIDEO SCART socket, 308mV(rms), more than 1.0Kohm
Audio output	AUDIO/VIDEO SCART socket, 308mV(rms), less than 1.0Kohm
Audio frequency range	20Hz - 20KHz (Hi-Fi model only)
Operating conditions	Temperature : +5°C - +40°C Humidity : less than 80% RH

## 4. Disassembly and Reassembly

### 4-1 Cabinet Assembly

#### 4-1-1 Cabinet Top Removal

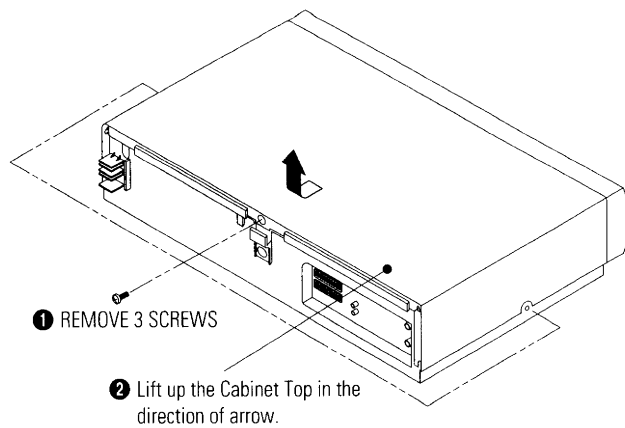


Fig. 4-1 Cabinet Top Removal

#### 4-1-2 Bottom Cover Removal

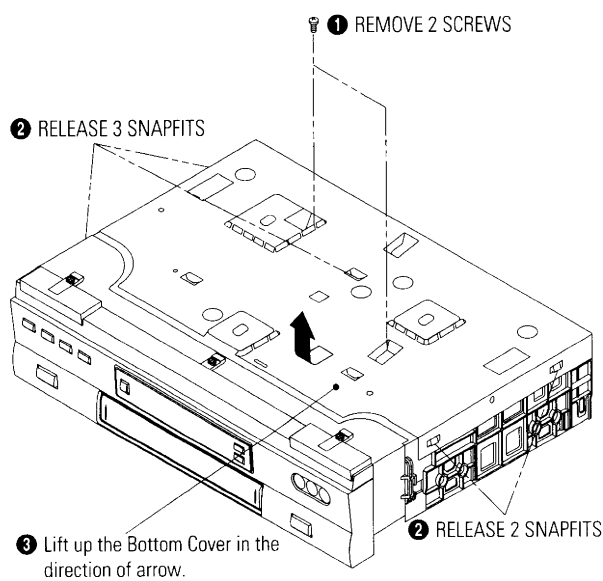


Fig. 4-2 Bottom Cover Removal

#### 4-1-3 Ass'y Front Panel Removal

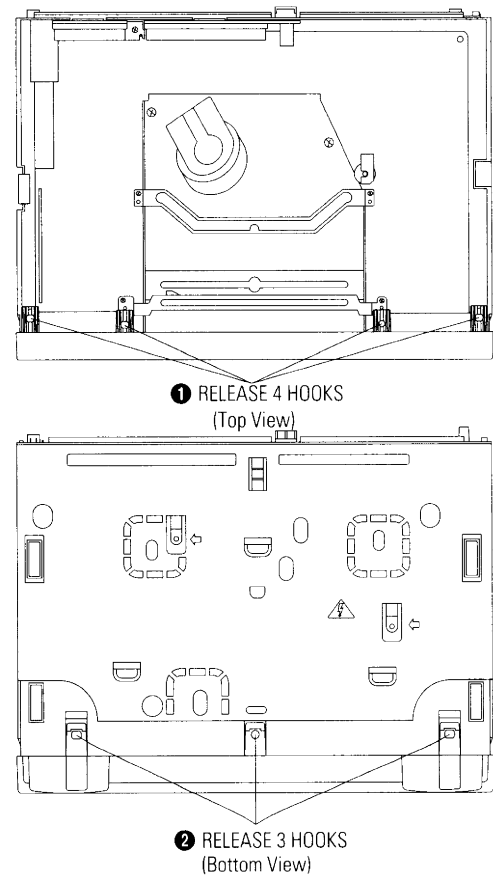


Fig. 4-3 Ass'y Front Panel Removal

#### 4-1-4 Jack PCB Removal

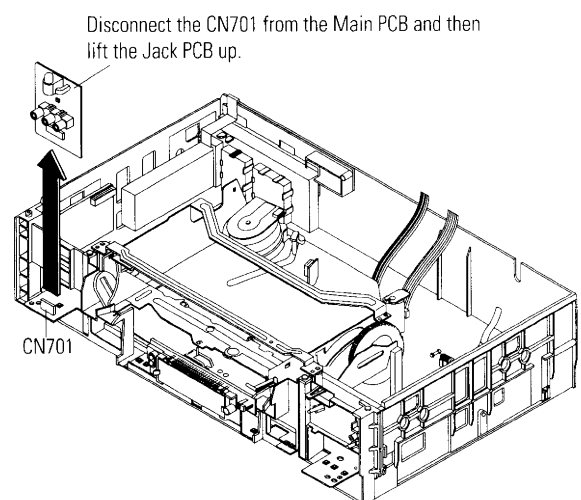


Fig. 4-4 Jack PCB Removal

## 4-1-5 Chassis Removal

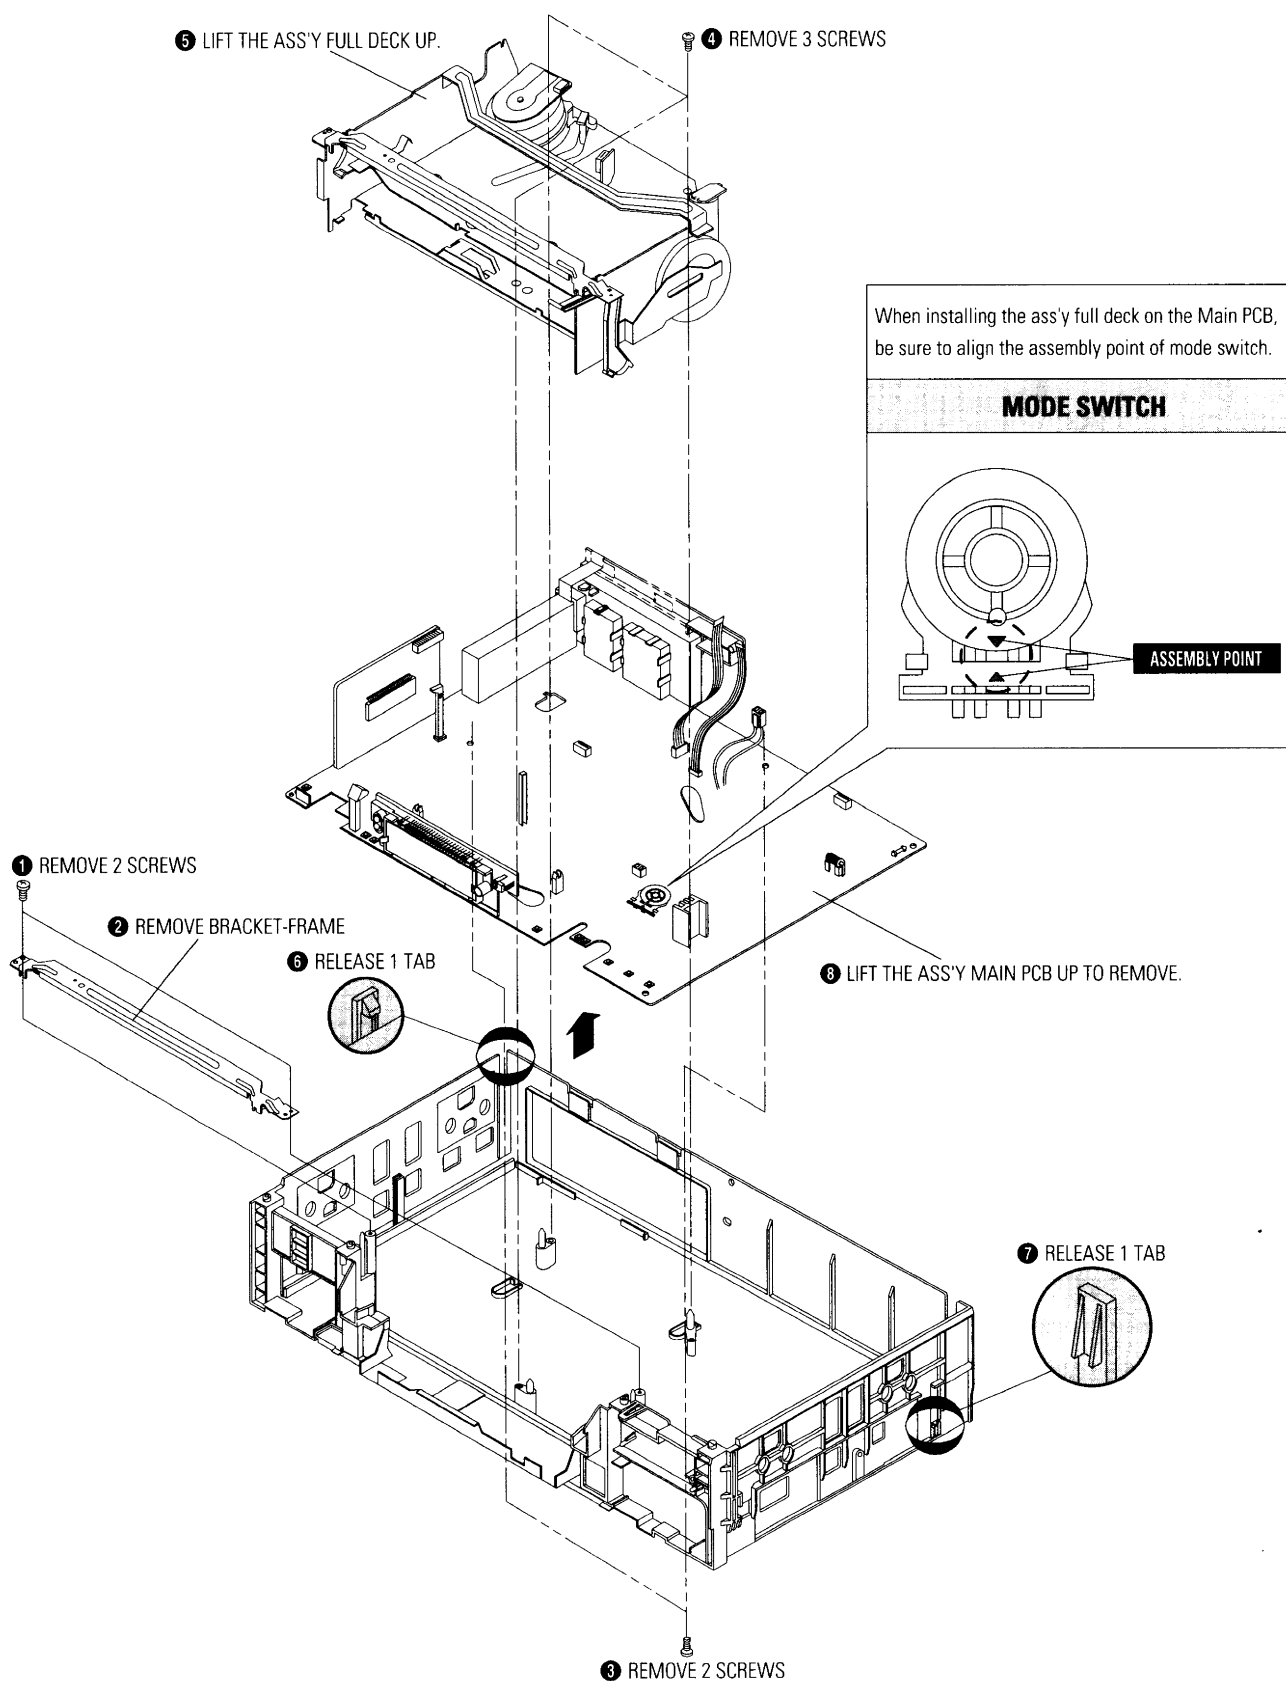


Fig. 4-5 Chassis Removal



## 4-2 Deck Parts Locations

### 4-2-1 Top View

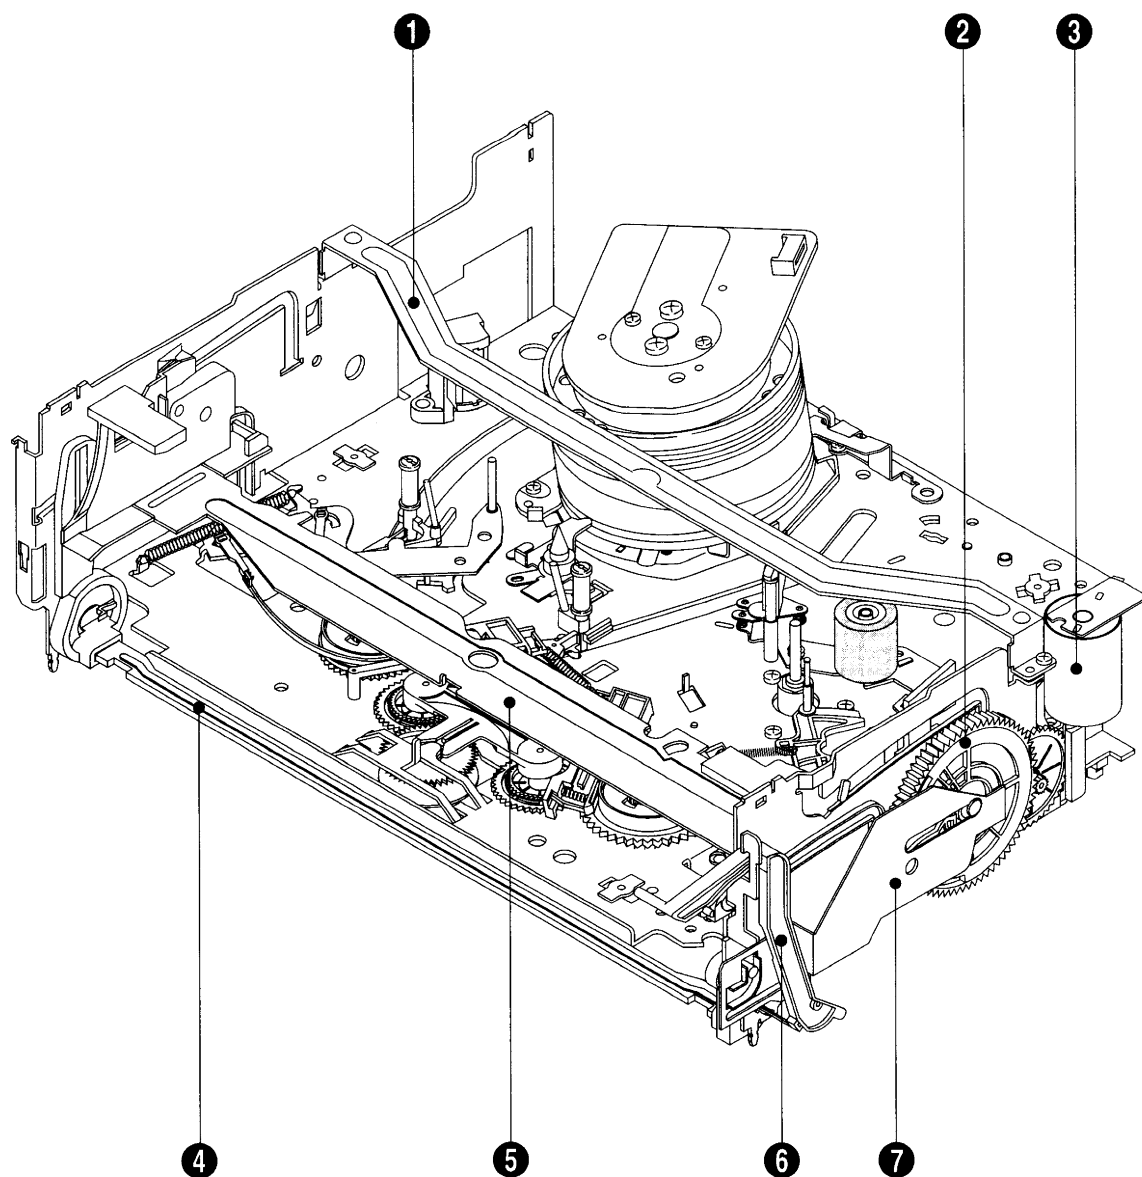


Fig. 4-6 Top parts Location-1

- ❶ BRACKET FL TOP (Optional)
- ❷ GEAR FL CAM
- ❸ MOTOR LOADING ASS'Y
- ❹ LEVER FL ARM ASS'Y
- ❺ HOLDER FL CASSETTE ASS'Y
- ❻ LEVER FL DOOR
- ❼ SLIDER FL DRIVE

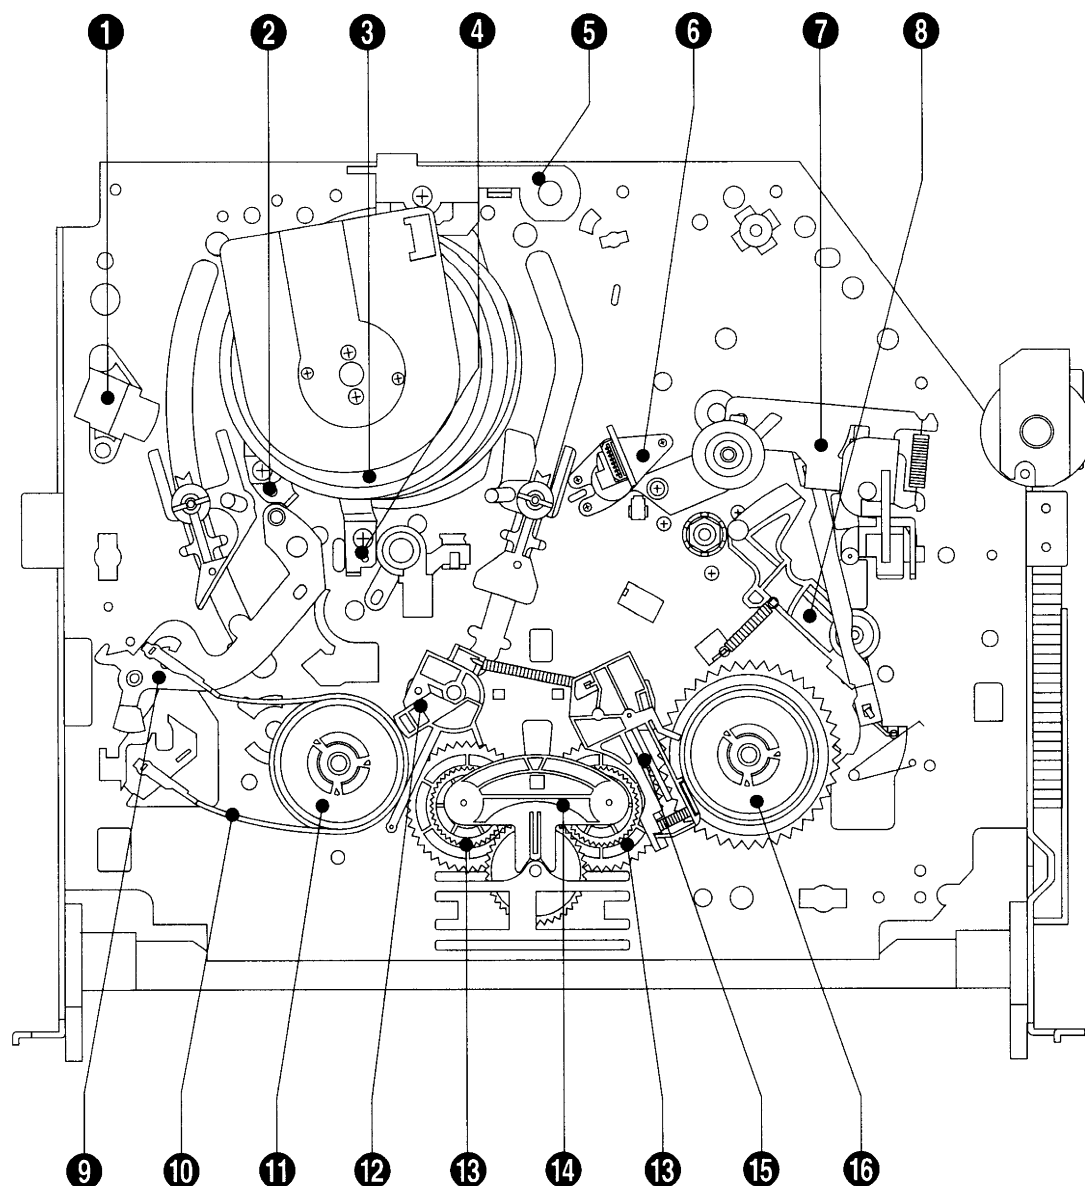


Fig. 4-7 Top Parts Location-2

- |                        |                       |
|------------------------|-----------------------|
| ① FE HEAD              | ⑩ BAND BRAKE ASS'Y    |
| ② PLATE CYLINDER C     | ⑪ DISK S REEL         |
| ③ CYLINDER ASS'Y       | ⑫ LEVER S BRAKE ASS'Y |
| ④ PLATE CYLINDER B     | ⑬ GEAR IDLE           |
| ⑤ PLATE CYLINDER A     | ⑭ LEVER IDLE          |
| ⑥ ACE HEAD ASS'Y       | ⑮ LEVER T BRAKE ASS'Y |
| ⑦ UNIT PINCH ASS'Y     | ⑯ DISK T REEL         |
| ⑧ LEVER #9 GUIDE ASS'Y |                       |
| ⑨ LEVER TENSION ASS'Y  |                       |

## 4-2-2 Bottom View

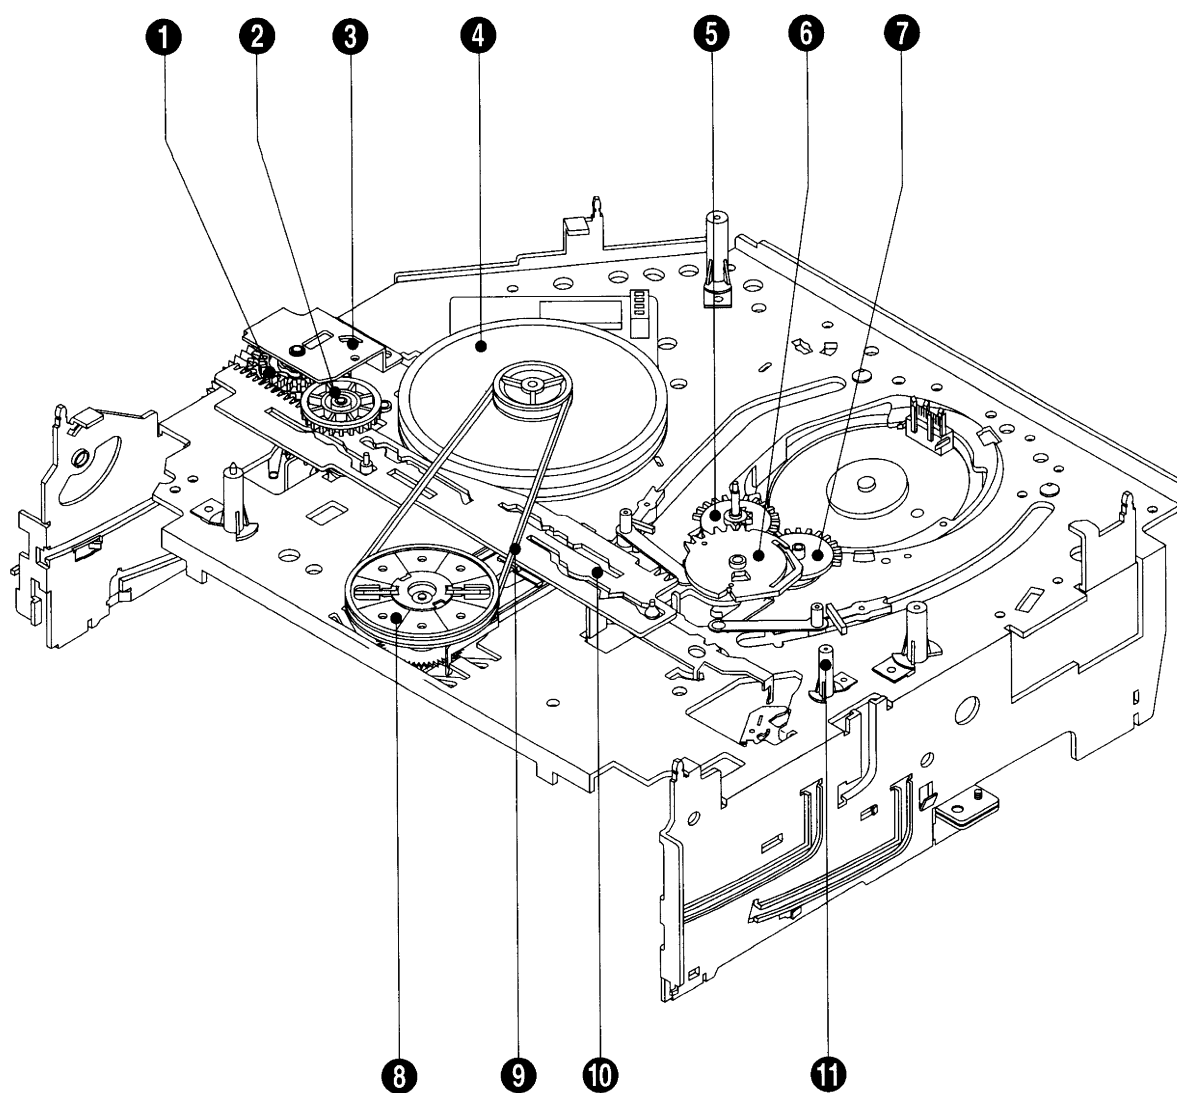


Fig. 4-8 Bottom Parts Location

- ❶ GEAR JOINT 1
- ❷ GEAR JOINT 2
- ❸ BRACKET GEAR
- ❹ MOTOR CAPSTAN ASS'Y
- ❺ LEVER T LOAD ASS'Y
- ❻ GEAR LOADING DRIVE
- ❼ LEVER S LOAD ASS'Y
- ❽ HOLDER CLUTCH ASS'Y
- ❾ BELT PULLEY
- ❿ SLIDER CAM
- ⓫ SLEEVE TENSION

## 4-3 Main Deck

### 4-3-1 Bracket FL Top Removal (Optional)

- 1) Remove 2 screws ❶.
- 2) Remove the Bracket FL Top ❷.

**Note :** Take care not to change assembly direction.

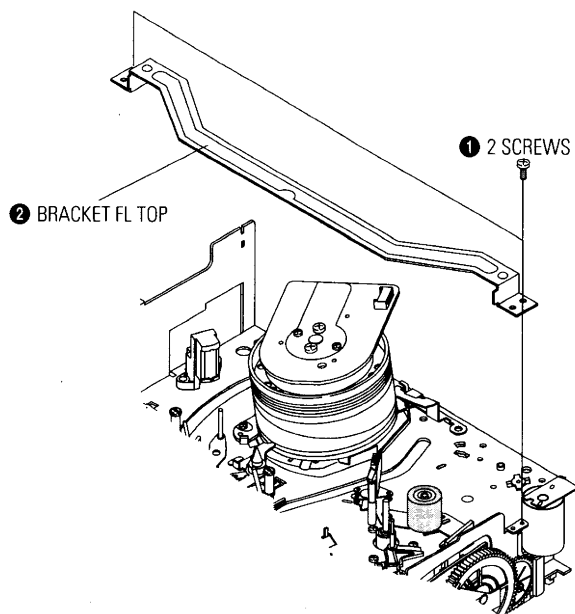


Fig. 4-9 Bracket FL Top Removal

### 4-3-2 Lever FL Door Removal

- 1) Rotate the Lever FL Door ❶ in the direction of arrow "A".
- 2) Release the Hook ❷, remove the Lever FL Door ❶ in the direction of arrow "B".

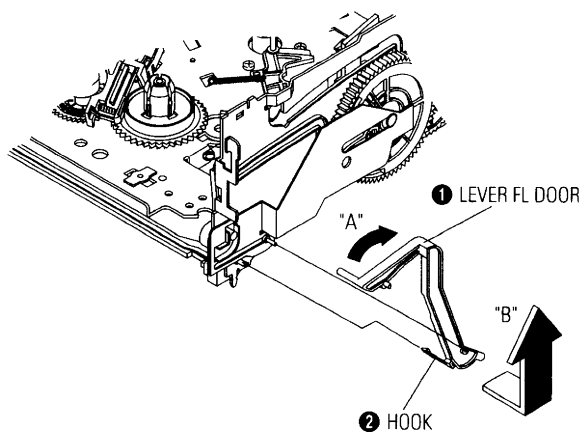


Fig. 4-10 Lever FL Door Removal

### 4-3-3 Holder FL Cassette Ass'y Removal

- 1) Remove the Lever FL Door. (Refer to Fig. 4-10)
- 2) Pull the Holder FL Cassette Ass'y ❶ to the eject position.
- 3) Pull the Holder FL Cassette Ass'y ❶ as grasping the Holder FL Cassette Ass'y ❶ and Lever FL Cassette-R ❷ in the same time to release hooking from Main Base until the Boss [A], [B] of Holder FL Cassette Ass'y ❶ is taken out from the Rail [C], [D].
- 4) Lift the Holder FL Cassette Ass'y ❶ in the direction of arrow "B" in this time, you have to grasp the Lever FL Cassette-R ❷ continuously until the Holder FL Cassette Ass'y ❶ is taken out completely.

**Note :** Be sure to insert Lever FL Cassette-R ❷ in the direction of "A" to prevent separation and breakage of the Lever FL Cassette-R ❷ at disassembling and reassembling.

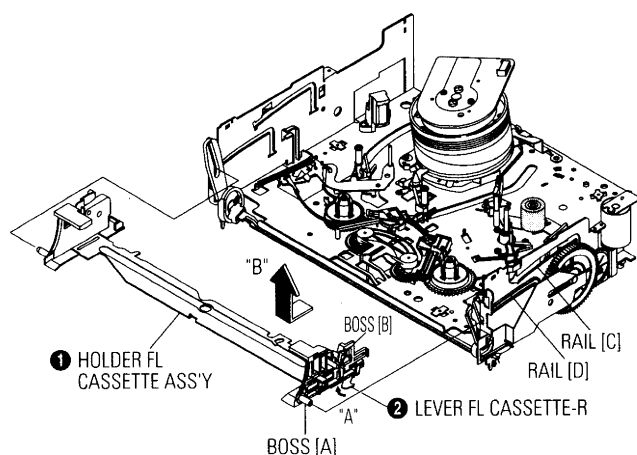


Fig. 4-11 Holder FL Cassette Ass'y Removal

### 4-3-4 Lever FL Arm Ass'y Removal

- 1) Remove the Lever FL Door. (Refer to Fig. 4-10)
- 2) Remove the Holder FL Cassette Ass'y. (Refer to Fig. 4-11)
- 3) Release the Hook ❶ in the direction of arrow "A", pull out the Lever FL Arm Ass'y ❷ from the Boss of Main Base.
- 4) Remove the Lever FL Arm Ass'y ❷ in the direction of arrow "B".

**Assembly :** When reinstalling, be sure to reassemble Lever FL Arm Ass'y ❷ after you insert the Boss ❷ in Groove [A] of Slider FL Drive ❸.

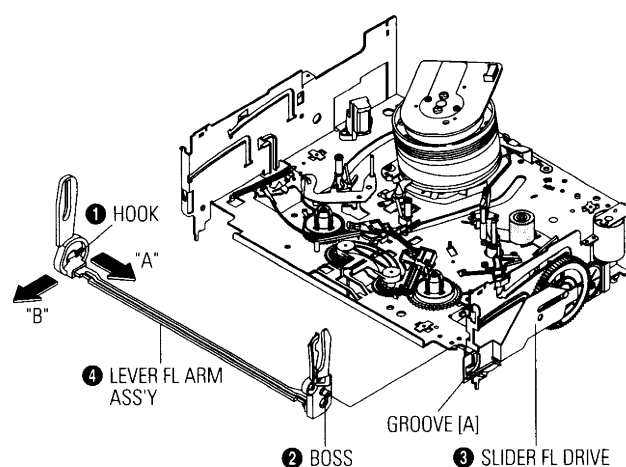


Fig. 4-12 Lever FL Arm Ass'y Removal

### 4-3-5 Slider FL Drive Removal

- 1) Pull the Slider FL Drive ❶ to the front direction.
- 2) Remove the Slider FL Drive ❶ in the direction of arrow. (Refer to Fig. 4-13)

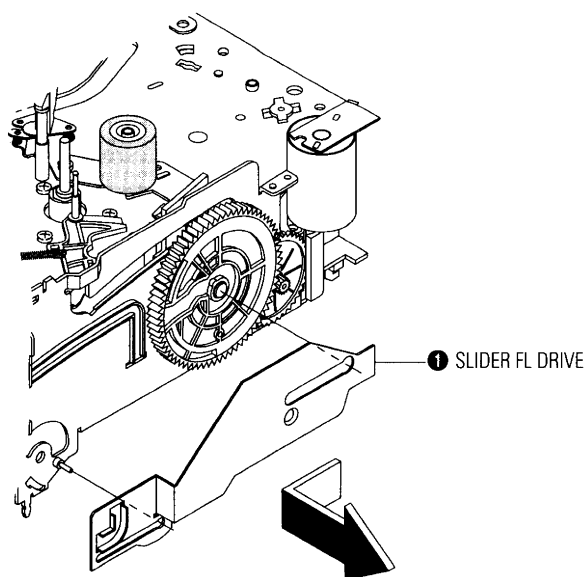


Fig. 4-13 Slider FL Drive Removal

### 4-3-6 Bracket Gear, Gear FL Cam, Gear Joint 1, 2 Removal

- 1) Remove screw ❶.
- 2) Lift the Bracket Gear ❷.
- 3) Remove the Gear FL Cam ❸.
- 4) Lift the Gear Joint 2 ❹, Gear Joint 1 ❺.

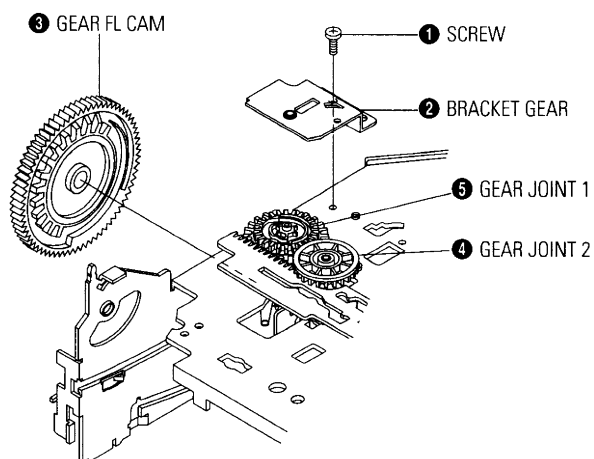


Fig. 4-14 Bracket Gear, Gear FL Cam, Gear Joint 1, 2 Removal

### 4-3-7 Assembly of Gear FL Cam, Gear Joint 1, 2

- 1) Be sure to align dot mark of Gear Joint 1 ❶ with dot mark of Gear Joint 2 ❷ as shown Fig. 4-15 (Refer to Timing Point 1), confirm the Timing Point 2 of the Gear Joint 2 ❷ and Slider Cam ❸.
- 2) Align the Gear FL Cam ❹ with the Gear Worm Wheel Post as shown detail drawing. (Refer to Timing Point 3)

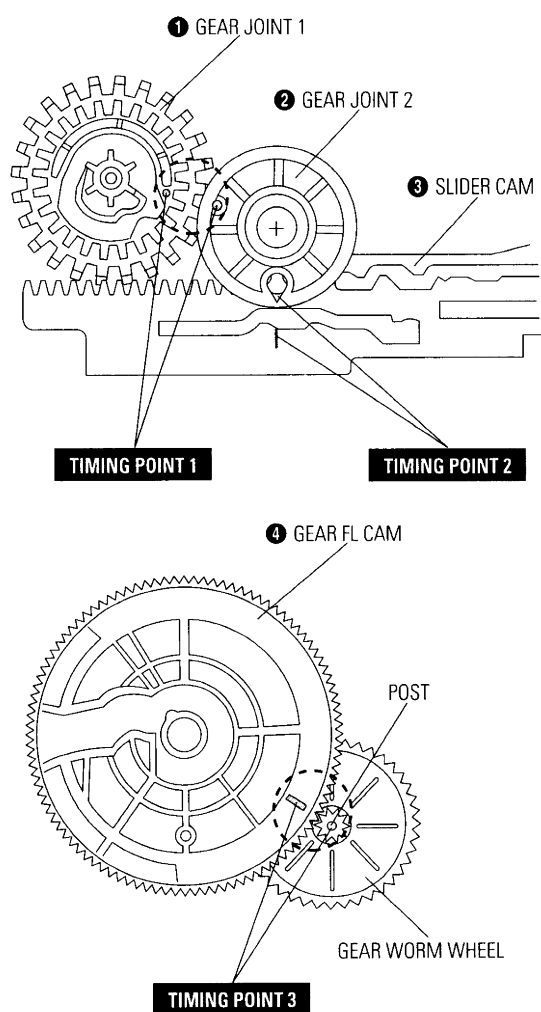


Fig. 4-15 Assembly of Gear FL Cam, Gear Joint 1, 2

### 4-3-8 Holder Worm, Gear Worm, Gear Worm Wheel Removal

- 1) Release the Hook [A] in the direction of arrow and, remove the Holder Worm ❶.
- 2) Remove the Gear Worm ❷.
- 3) Remove the Gear Worm Wheel ❸. (After removing the Gear FL Cam as shown Fig. 4-14)

**Note :** Secure the Hook [A] after installing the Holder Worm ❶.

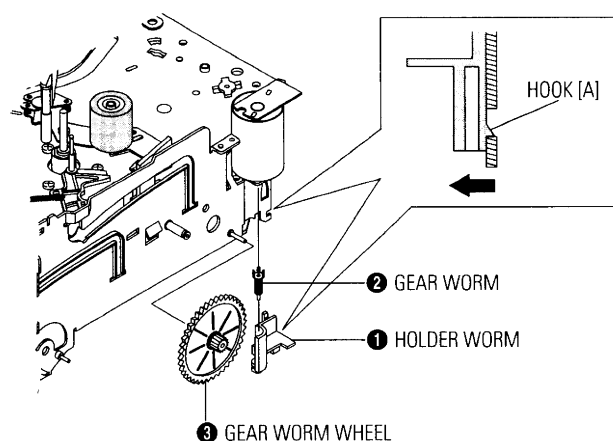


Fig. 4-16 Holder Worm, Gear Worm, Gear Worm Wheel Removal

### 4-3-9 Motor Loading Ass'y Removal

- 1) Remove the screw ❶.
- 2) Remove the Motor Loading Ass'y ❷.

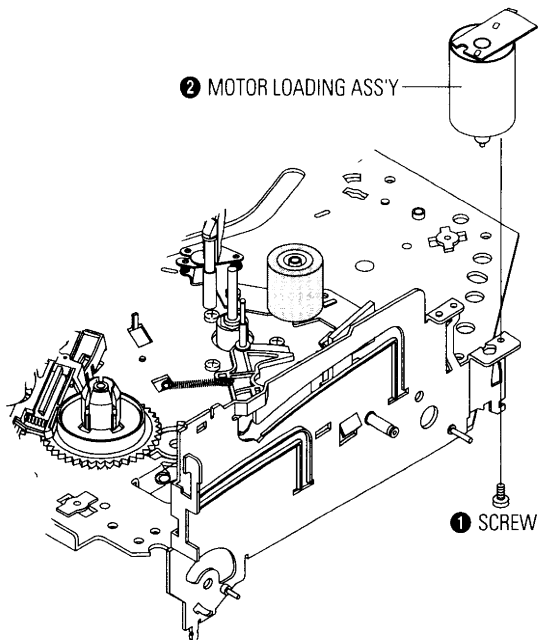


Fig. 4-17 Motor Loading Ass'y Removal

### 4-3-10 Gear Loading Drive, Slider Cam, Lever T, S Load Ass'y Removal

- 1) Remove the Belt Pulley. (Refer to Fig. 4-34)
- 2) Remove the Gear Loading Drive ❶ after releasing Hook [A] in the direction arrow as shown in detail drawing.
- 3) Remove the Slider Cam ❷.
- 4) Remove the Lever T, S Load Ass'y ❸, ❹.

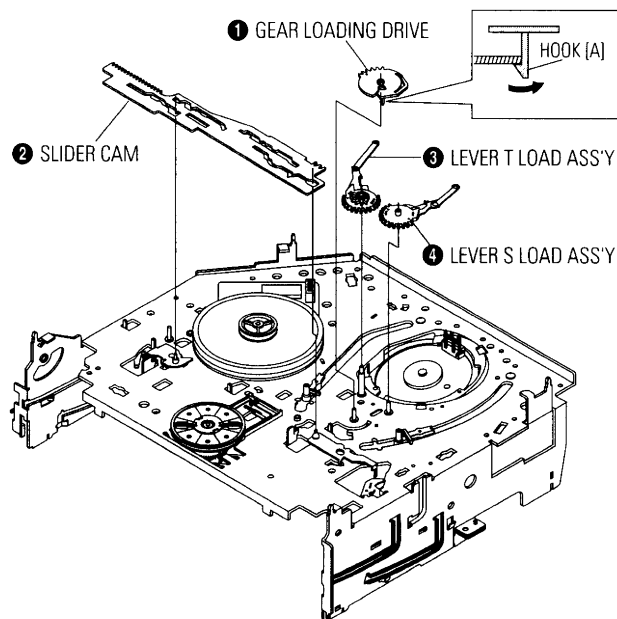


Fig. 4-18 Gear Loading Drive, Slider Cam, Lever T, S Load Ass'y Removal



### 4-3-11 Assembly of Gear Loading Drive, Slider Cam, Lever T, S Load Ass'y

- 1) When reinstalling, be sure to align dot of Lever T Load Ass'y ❶ with dot of Lever S Load Ass'y ❷ as shown in drawing. (Refer to Timing Point 1)
- 2) Insert the Pin A, B, C, D into the Slider Cam ❸ hole.
- 3) Be sure to align dot of Lever T Load Ass'y and dot of Gear Loading Drive ❹. (Refer to Timing Point 2)
- 4) Align dot of Gear Loading Drive with mark of Slider Cam as shown in drawing. (Refer to Timing Point 3)

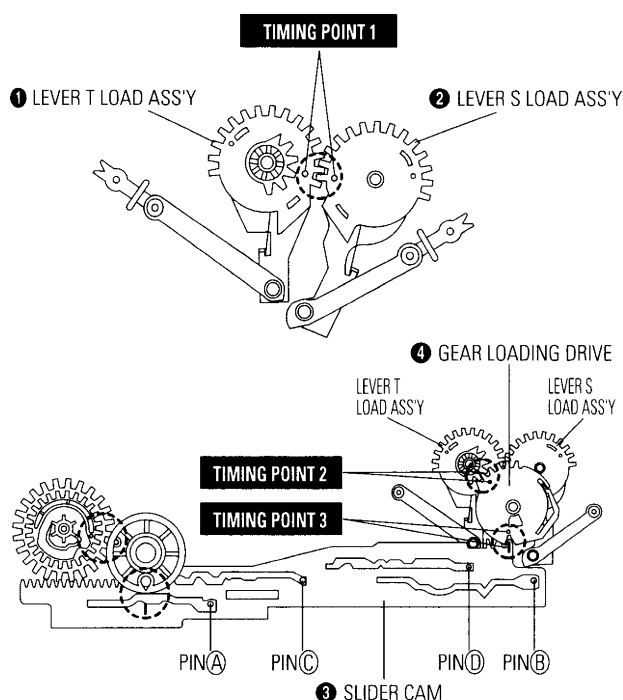


Fig. 4-19 Assembly of Gear Loading Drive, Slider Cam, Lever T, S Load Ass'y

### 4-3-12 Lever Tension Ass'y, Band Brake Ass'y, Sleeve Tension Removal

- 1) Remove the Spring Tension ❶.
- 2) In bottom side of Deck, remove the Sleeve Tension ❷ after rotating it right or left as lifting locking edge of Sleeve Tension.
- 3) Remove the side "a" of the Band Brake Ass'y ❹ in the direction of arrow "A" from the Lever Tension Ass'y ❸.
- 4) Remove the side "b" of the Band Brake Ass'y ❹ in the direction of arrow "B" from the Main Base.

#### Note :

- 1) When replacing the Lever Tension Ass'y, be sure to apply oil in the Sleeve Tension.
- 2) Take care not to touch stain on the felt side, and not to be folded and broken Band Brake Ass'y.

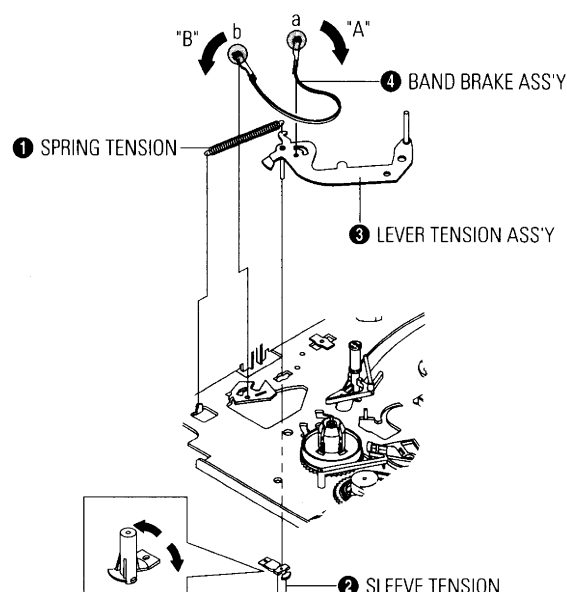


Fig. 4-20 Lever Tension Ass'y, Band Brake Ass'y, Sleeve Tension Removal

### 4-3-13 Lever S, T Brake Ass'y Removal

- 1) Release the Hook [A] and the Hook [B], [C] in the direction of arrow as shown in Fig. 4-21.
- 2) Lift the Lever S, T Brake Ass'y ①, ② with Spring Brake ③.

#### Assembly :

- 1) Assembly the Lever S Brake Ass'y ① on the Main Base.
- 2) Assembly the Lever T Brake Ass'y ② with Spring Brake ③.

**Note :** Take extreme care not to be folded and transformed spring Brake at removing or reinstalling.

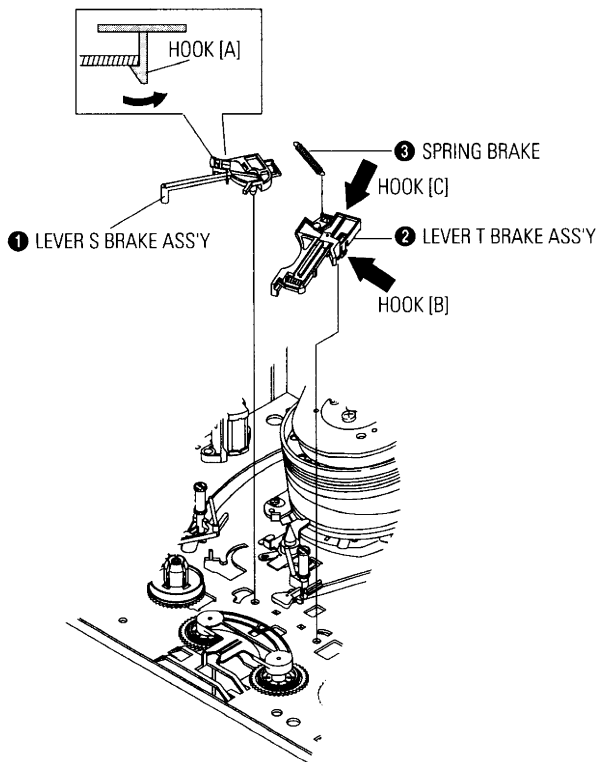


Fig. 4-21 Lever S, T Brake Ass'y Removal

### 4-3-14 Lever Idle Ass'y Removal

- 1) Push the Lever Idle ① in the direction of arrow "A", "B".
- 2) Lift the Lever Idle ①.

#### Assembly :

- 1) Apply oil in two Bosses of Lever Idle ①.
- 2) Assemble the Gear Idle ② with the Lever Idle ①.

**Note :** When replacing the Gear Idle ②, be sure to add oil in the boss of Lever Idle ①.

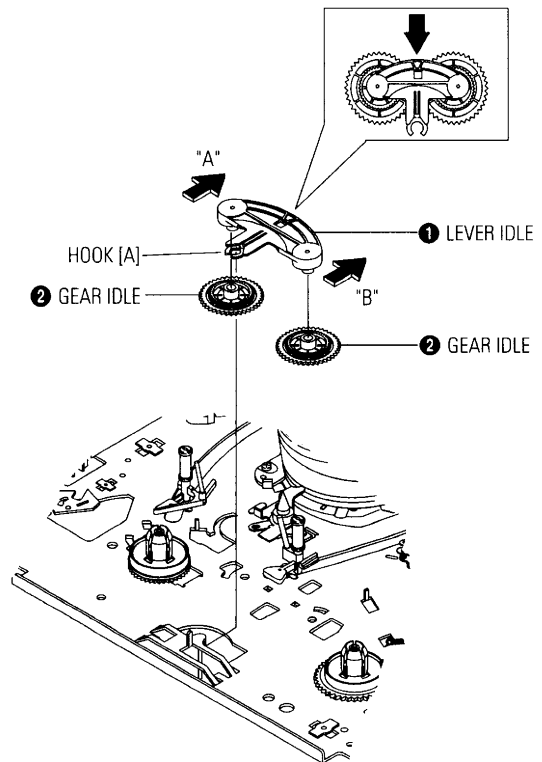


Fig. 4-22 Lever Idle Ass'y Removal

### 4-3-15 Disk S, T Reel Removal

- 1) Lift the Disk S, T Reel ❶, ❷.

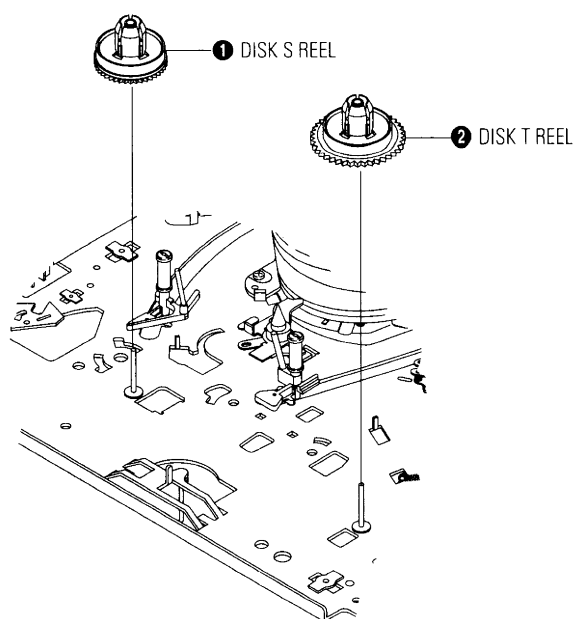


Fig. 4-23 Disk S, T Reel Removal

### 4-3-16 Holder Clutch Ass'y Removal

- 1) Remove the Washer Slit ❶.
- 2) Lift the Holder Clutch Ass'y ❷.

**Note :** When you reinstall Holder Clutch Ass'y ❷.

- 1) Check the condition of spring as shown in detail A.
- 2) Don't push Holder Clutch Ass'y down with excessive force. Just insert Holder Clutch Ass'y into post center with dead force and rotate it smoothly. Be sure to confirm that spring is in the slit of Gear Center Ass'y as shown in detail B.

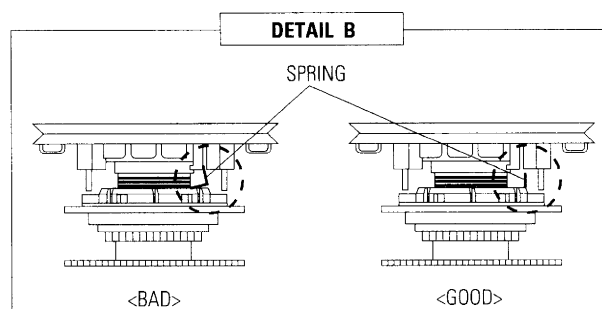
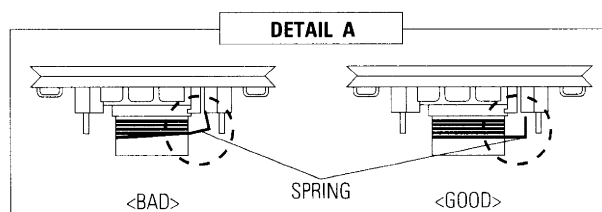
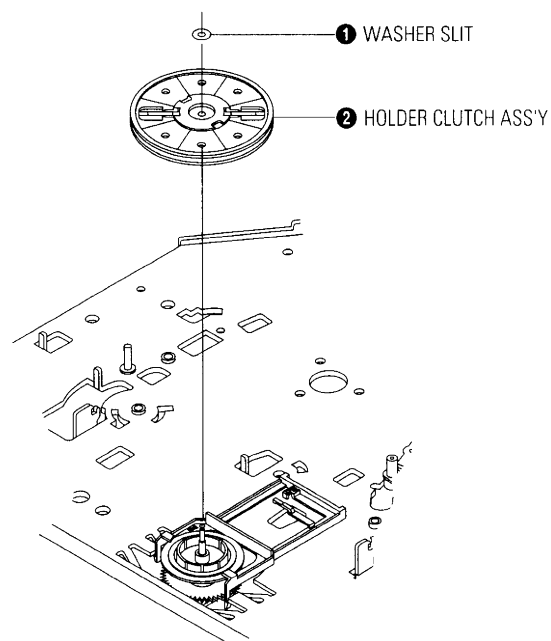


Fig. 4-24 Holder Clutch Ass'y Removal

### 4-3-17 Lever Up Down Ass'y, Gear Center Ass'y Removal

- 1) Remove the 2 hooks in the direction of arrow as shown Fig. 4-25 and lift the Lever Up Down Ass'y ①.
- 2) Lift the Gear Center Ass'y ②.

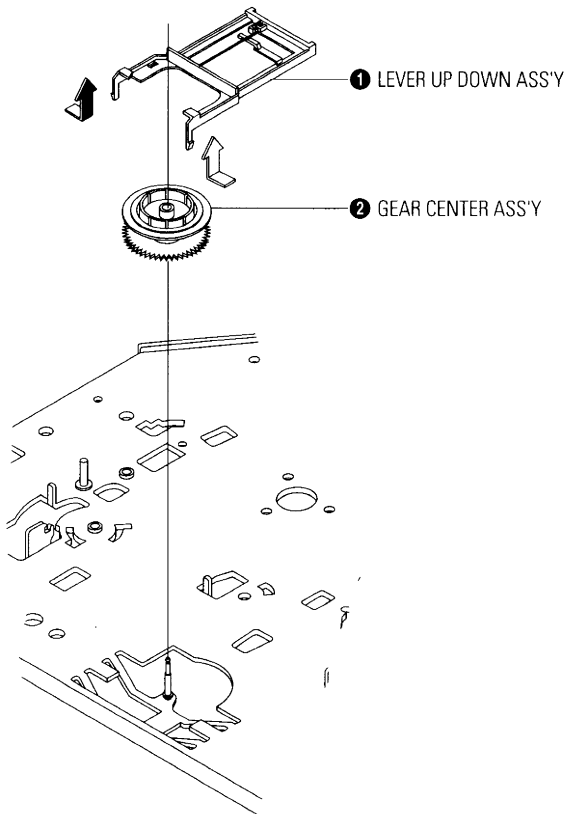


Fig. 4-25 Lever Up Down Ass'y, Gear Center Ass'y Removal

### 4-3-18 Assembly of Lever Up Down Ass'y, Gear Center Ass'y

- 1) Insert the Lever Up Down Ass'y ① in the 2 rectangular holes on Main Base.
- 2) Lift the Lever Up Down Ass'y ① about 35 degree. (Refer to Fig. 4-26)
- 3) Insert Ring ④ of the Gear Center Ass'y ② in the Guide ⑤ of the Lever Up Down Ass'y ①.
- 4) Insert the Gear Center Ass'y ② in the post ⑥ on Main Base.
- 5) Push down the Lever Up Down Ass'y ① for locking of the Hook ⑦.

**Note :**

- 1) Take care not to separate and loose the Spring Up Down.
- 2) When assembling the Gear Center Ass'y, don't push down too much.

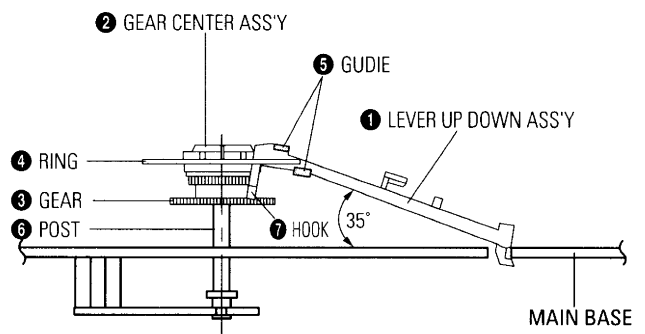


Fig. 4-26 Assembly of Lever Up Down Ass'y, Gear Center Ass'y

### 4-3-19 Guide Cassette Door Removal

- 1) Lift the Hook [A].
- 2) Rotate the Guide Cassette Door ❶ in the direction of arrow.

**Note :** After reinstalling the Guide Cassette Door ❶ secure the Hook [A].

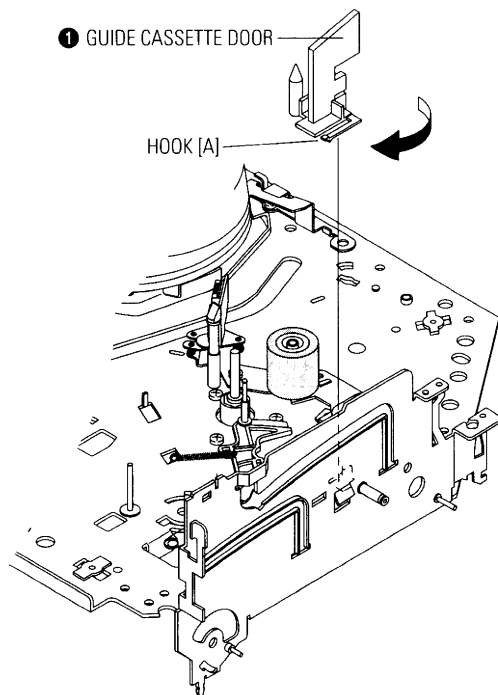


Fig. 4-27 Guide Cassette Door Removal

### 4-3-20 Unit Pinch Ass'y, Plate Joint, Spring Pinch Drive Removal

- 1) Lift the Unit Pinch Ass'y ❶.
- 2) Remove the Plate Joint ❷ from Lever Pinch Drive.
- 3) Remove the Spring Pinch Drive ❸.

**Note :**

- 1) Take extreme care not to touch the grease on the Roller Pinch.
- 2) When reinstalling, be sure to apply grease on the post pinch roller.

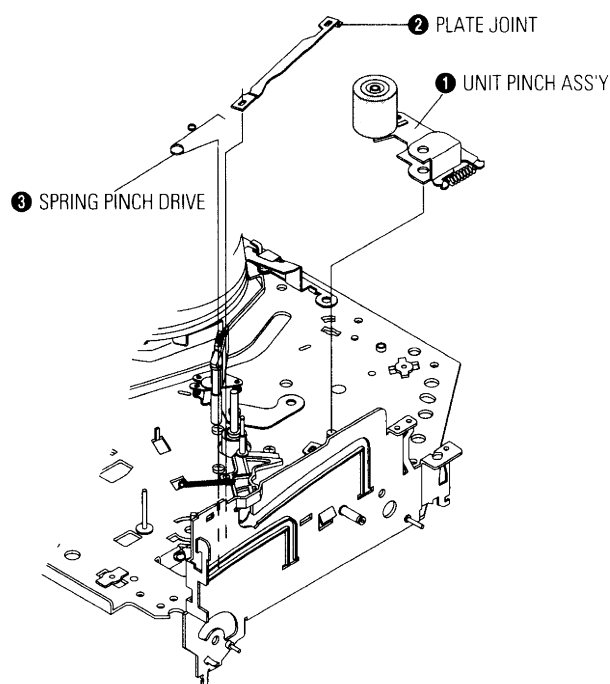


Fig. 4-28 Unit Pinch Ass'y, Plate Joint, Spring Pinch Drive Removal

### 4-3-21 Lever #9 Guide Ass'y Removal

- 1) Remove the Spring #9 Guide ❶.
- 2) Lift the Lever #9 Guide Ass'y ❷ in the direction of arrow.

**Note :**

- 1) Take extreme care not to touch the grease on the tape Guide Post.
- 2) After reinstalling, check the bottom side of the Post #9 Guide to stick to the top side of Main Base.

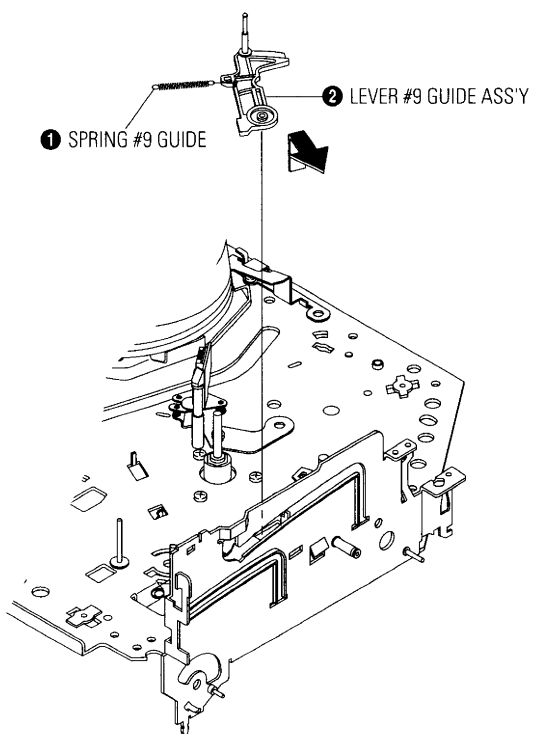


Fig. 4-29 Lever #9 Guide Ass'y Removal

### 4-3-22 FE Head Removal

- 1) Remove the screw ❶.
- 2) Lift the FE Head ❷.

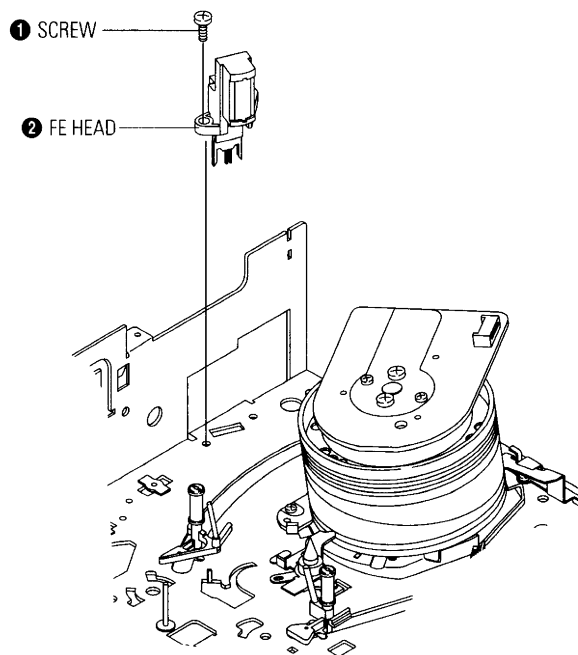


Fig. 4-30 FE Head Removal

### 4-3-23 ACE Head Removal

- 1) Pull out the FPC from connector of ACE Head Ass'y ②.
- 2) Remove the screw ①.
- 3) Lift the ACE Head Ass'y ②.

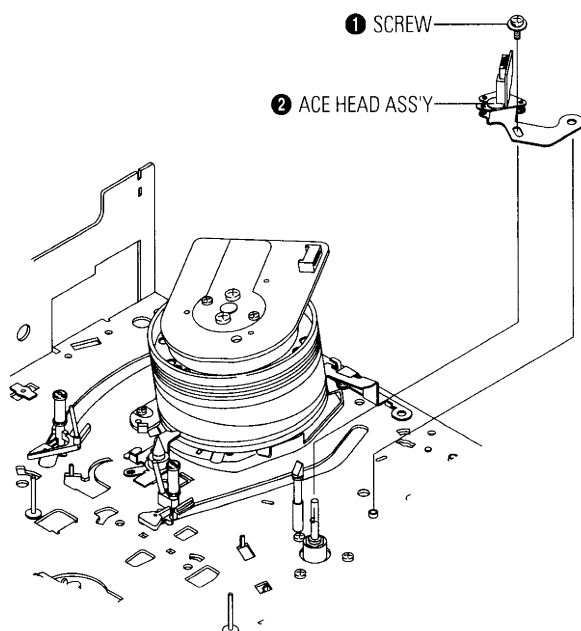


Fig. 4-31 ACE Head Removal

### 4-3-24 Slider S, T Ass'y Removal

- 1) Move the Slider S, T Ass'y ①, ② to slot, and then lift it to remove. (Refer to arrow)

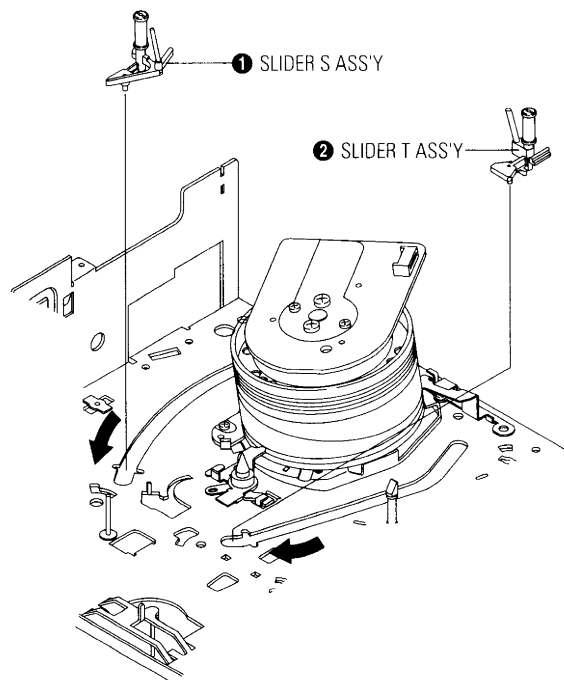


Fig. 4-32 Slider S, T Ass'y Removal

### 4-3-25 Cylinder Ass'y Removal

- 1) Remove the 3 Screws ❶, ❸, ❺.
- 2) Remove the Plate Cylinder A, B, C ❷, ❹, ❻ in the direction of arrow.
- 3) Lift the Cylinder Ass'y ❷.

**Note :**

- 1) When reinstalling, push the Plate Cylinder A, B ❹, ❻ in the reverse of arrow and then, tighten the 2 Screws ❸, ❺.
- 2) Take care not to touch the Cylinder Ass'y and the tape guide post at reinstalling Plate Cylinder C ❷.
- 3) Take care not to touch the Cylinder Ass'y with screw driver at reinstalling the Plate Cylinder C ❷.

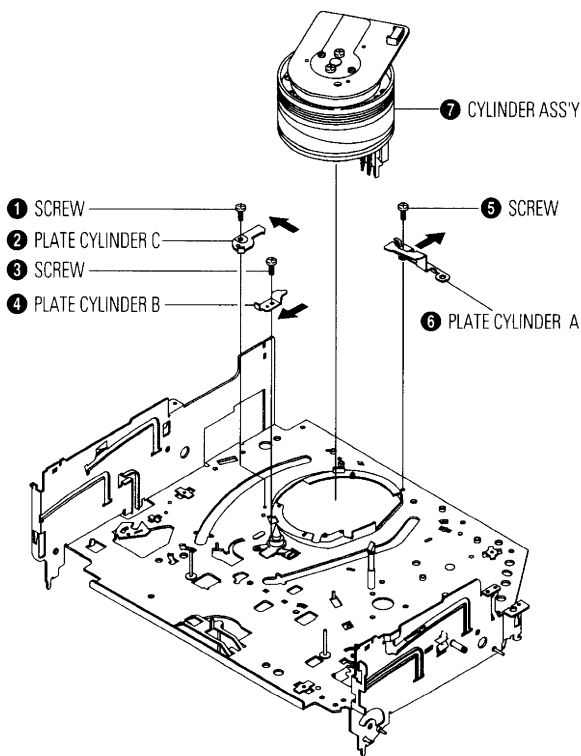


Fig. 4-33 Cylinder Ass'y Removal

### 4-3-26 Belt Pulley Removal

- 1) Remove the Belt Pulley ❶.

**Note :** Take extreme care not to touch the grease on Belt Pulley ❶ at assembling or reassembling.

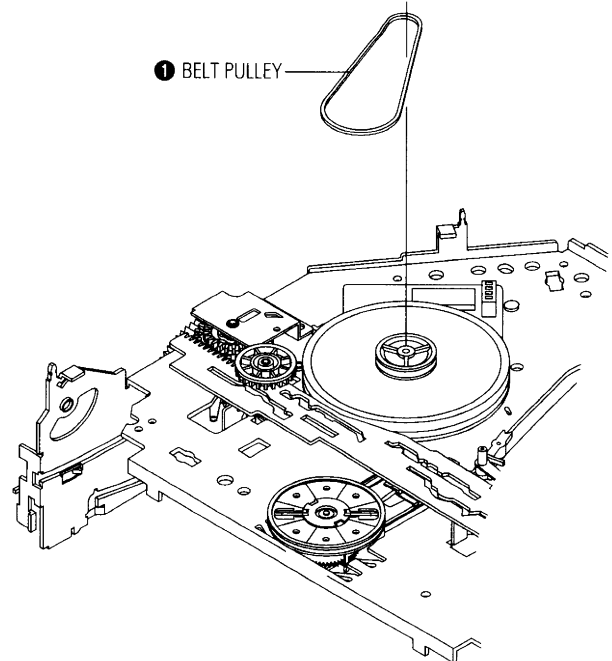


Fig. 4-34 Belt Pulley Removal

### 4-3-27 Lever Head Cleaner Ass'y Removal

- 1) Release the Hook ❶.
- 2) Lift the Lever Head Cleaner Ass'y ❷.

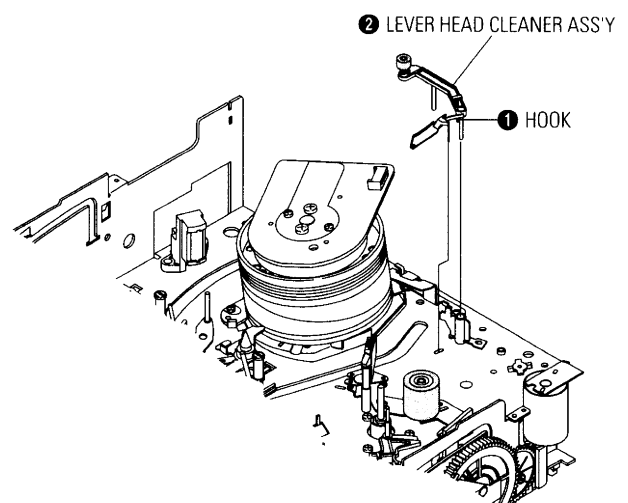


Fig. 4-35 Lever Head Cleaner Ass'y Removal



### 4-3-28 Motor Capstan Ass'y Removal

- 1) Remove the 3 Screws ❶.
- 2) Remove the Motor Capstan Ass'y ❷.

#### Assembly :

- 1) Match the 3 holes of Motor Capstan Ass'y ❷ to the 3 holes of Main Base as attending not to drop or knock the Motor Capstan Ass'y.
- 2) Tighten the 3 Screws in the direction of arrow as shown detail drawing.

#### Note :

- 1) Don't reuse the removed screws from Motor Capstan Ass'y.
- 2) After tightening screws, check if there is gap between the head of screws and the top side of Main Base. There should have no gap between the head of screws and the top side of Main Base.
- 3) After reinstalling, adjusting the tape transport system again.

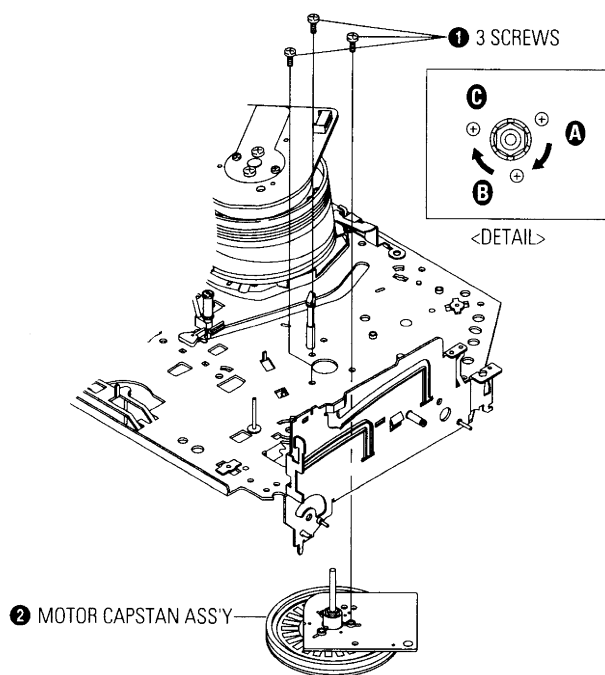


Fig. 4-36 Motor Capstan Ass'y Removal

### 4-3-29 How to Eject the Cassette Tape (If the unit does not operate on condition that is inserted into housing ass'y)

- 1) Remove the Holder worm ❶ and the Gear Worm ❷.
- 2) Turn the Gear Worm Wheel ❸ counterclockwise with screw driver. (Refer to arrow)

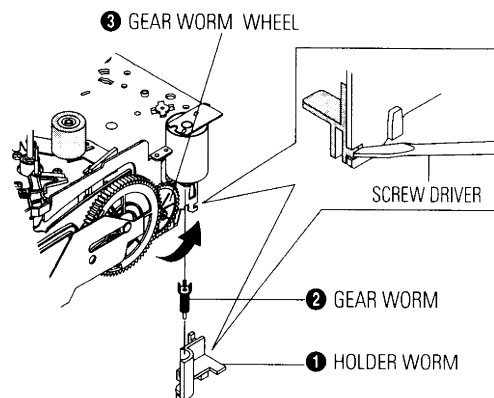


Fig. 4-37

- 3) When Slider S, T are approached in the position of unloading, rotate holder Clutch counterclockwise after inserting screw driver in the hole of frame's bottom in order to wind the unwound tape. (Refer to Fig. 4-38)  
(If you rotate Gear Worm Wheel continuously when tape is in state of unwinding, you may cause a tape contamination by grease and tape damage. Be sure to wind the unwound tape in the state of set horizontally.)
- 4) Rotate Gear Worm Wheel ❸ counterclockwise using screw driver again up to the state of eject mode and then pick out the tape. (Refer to Fig. 4-36)

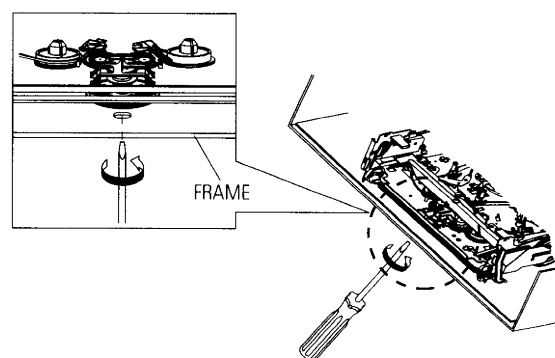


Fig. 4-38

## 4-4 The table of clearing, Lubrication and replacement time about principal parts

1) Table 4-1 is for normal temperature and humidity.

It is necessary to check more frequently under extreme conditions.

2) The life of the cylinder assembly depends on the operating conditions.

3) See exploded view for location of each parts.

<Table 4-1>

*	Parts Name	Checking Period										Remark
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	
T A P E  P A T H  S Y S T E M	POST TENSION	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	- To clean the parts, use patch and alcohol (solvent).
	SLANT POST S, T	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	#8 GUIDE SHAFT	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	CAPSTAN SHAFT	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	- After cleaning, use the video tape after alcohol is gone away completely.
	#9 GUIDE POST	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	#3 GUIDE POST	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	GUIDE ROLLER S, T	Δ	Δ	Δ	0	0	0	0	0	0	0	- We recommend to use oil [EP-56] or solvent.
	CYLINDER ASS'Y	Δ	0	0	0	0	0	0	0	0	0	
	FE HEAD	Δ	Δ	Δ	0	0	0	0	0	0	0	
	ACE HEAD	Δ	0	0	0	0	0	0	0	0	0	- One or two drops of oil should be applied after cleaning with alcohol.
	PINCH ROLLER	Δ	0	0	0	0	0	0	0	0	0	
	POST REEL S, T		◆		◆		◆		◆		◆	
	SLEEVE TENSION		◆		◆		◆		◆		◆	- Periodic time of applying oil (Apply oil after cleaning) - The excessive applying oil may be the cause of malfunction.
	POST CENTER		◆		◆		◆		◆		◆	
	LEVER IDLE BOSS (2Point)		◆		◆		◆		◆		◆	
D R I V I N G  S Y S T E M	CAPSTAN MOTOR PULLEY	Δ	Δ	Δ	Δ	Δ	0	0	0	0	0	
	BELT PULLEY				0	0	0	0	0	0	0	
	HOLDER CLUTCH ASS'Y	Δ	0	0	0	0	0	0	0	0	0	
	GEAR CENTER ASS'Y		0	0	0	0	0	0	0	0	0	
	GEAR IDLE (2Point)		0	0	0	0	0	0	0	0	0	
	LOADING MOTOR		0	0	0	0	0	0	0	0	0	
B R A K E  S Y S T E M	BAND BRAKE ASS'Y		0	0	0	0	0	0	0	0	0	
	BRAKE T ASS'Y		0	0	0	0	0	0	0	0	0	

Δ : Cleaning

0 : Check and replacement in necessary


◆ : Add Oil

## 5. Alignment and Adjustment

### 5-1 Reference

- 1) X-Point (Tracking center) adjustment, "Head switching adjustment" and "NVRAM option setting" can be adjusted with remote control.
- 2) When replacing the Micom (IC601) and NVRAM (IC605 ; EEPROM) be sure to adjust the "Head switching adjustment" and "NVRAM option setting".
- 3) When replacing the cylinder ass'y, be sure to adjust the "X-Point" and "Head switching adjustment".
- 4) Remote control used for same chassis as a accessory is available for all adjustments.
- 5) How to adjustment.
  - Press the "SW701 (TEST)" button on Main PCB to set the adjustment mode.
  - If the corresponding adjustment button is pressed, the adjustment is performed automatically.
  - If the adjustment is completed, be sure to turn the power off.

#### 5-1-1 Location of adjustment button of remote control

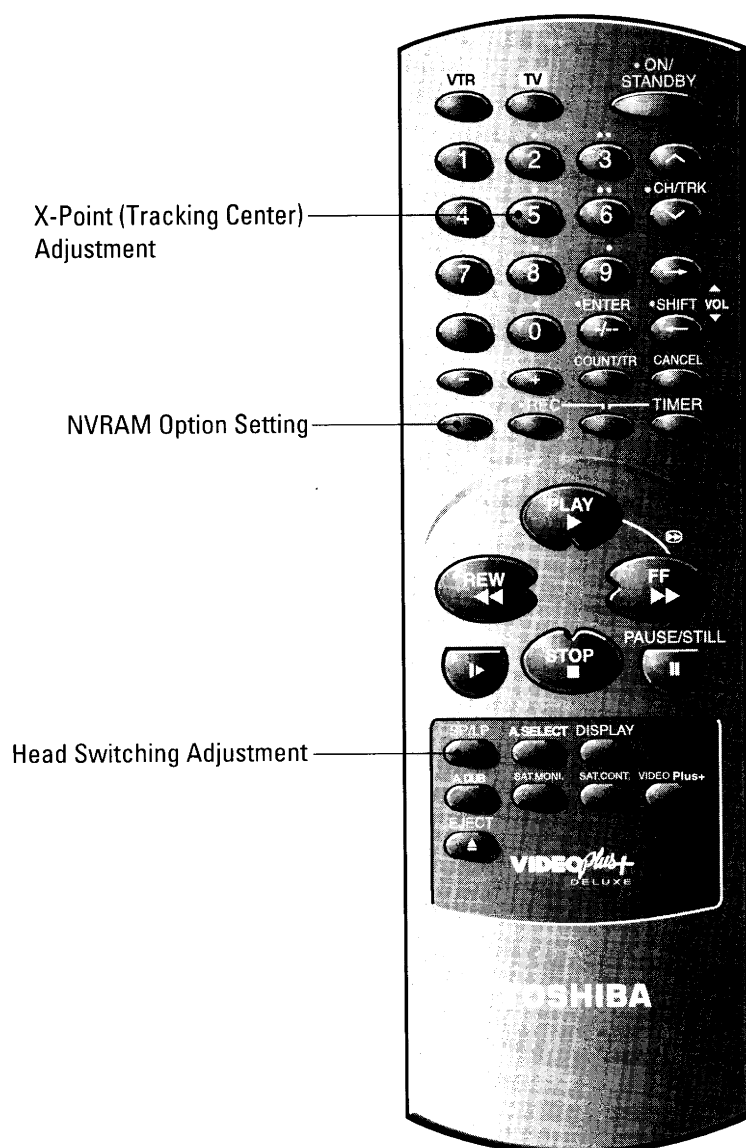

<This remote control is using the for V-730UK.>

Fig. 5-1



## 5-2 Mechanical Adjustment

### 5-2-1 Tape Transport System and Adjustment Locations

The tape transport system has been adjusted precisely in the factory. Alignment is not necessary except for the following :

- 1) Noise observed on the screen.
- 2) Tape damage.
- 3) Parts replacement in the tape transport system.

Lower flange height of tape guide is used as the reference for the transport adjustment.

To maintain the height of the tape guide and prevent damage, do not apply excessive force onto the main base.

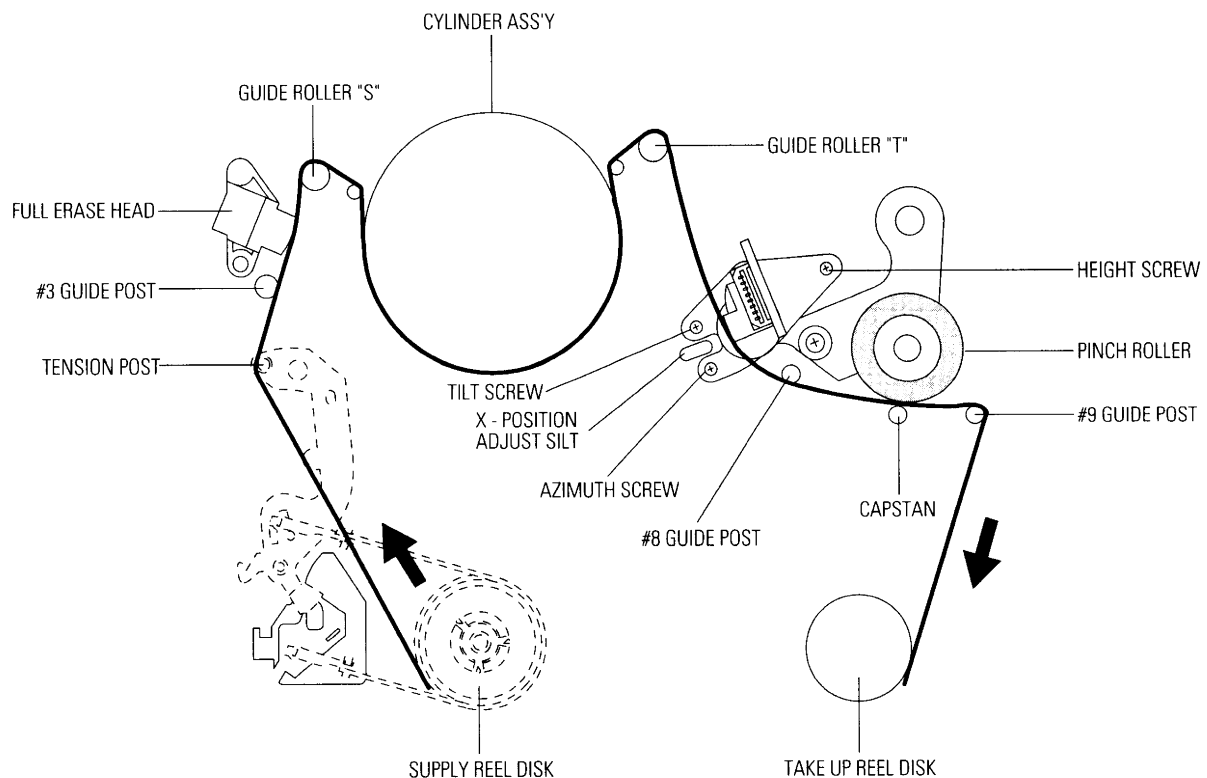


Fig. 5-3 Location of Tape Transport Adjustment

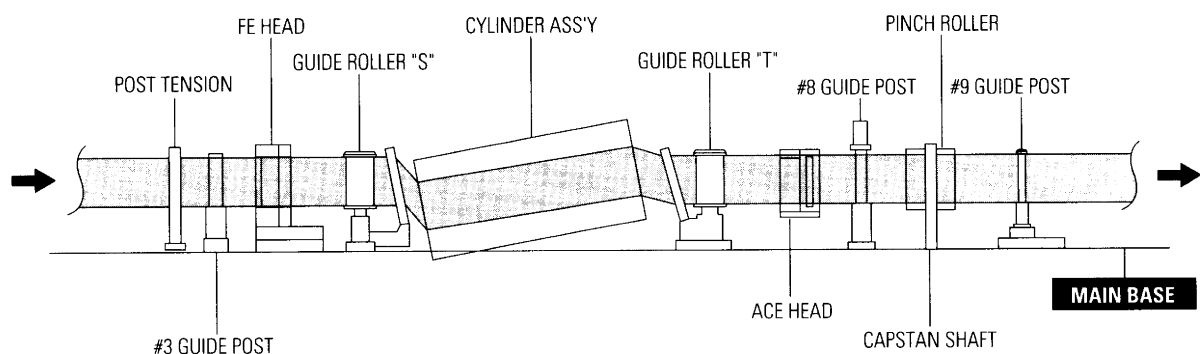


Fig. 5-4 Tape Travel Diagram

## 5-2-2 Tape Transport System Adjustment

When parts are replaced, perform the required adjustments by referring to procedures for the tape transport system. If there are any changes to the tape path, first run a E-120 tape and make sure excessive tape wrinkle does not occur at the tape guides.

- 1) If tape wrinkle is observed at the guide roller S, T, turn the guide roller S, T until wrinkle disappears.
- 2) If the tape wrinkle is still observed at the tape guide, perform the tilt adjustment of the ACE head.

### (1) ACE Head Assembly Adjustment

<b>Test point :</b>	TP601 (H'D S/W -Trigger)
	TP602 (Control Pulse)
	TP301 (Video output)
	TP302 (Audio output)
	TP303 (Envelope)
<b>Test tape :</b>	ST-N1
	BLANK TAPE : E-180

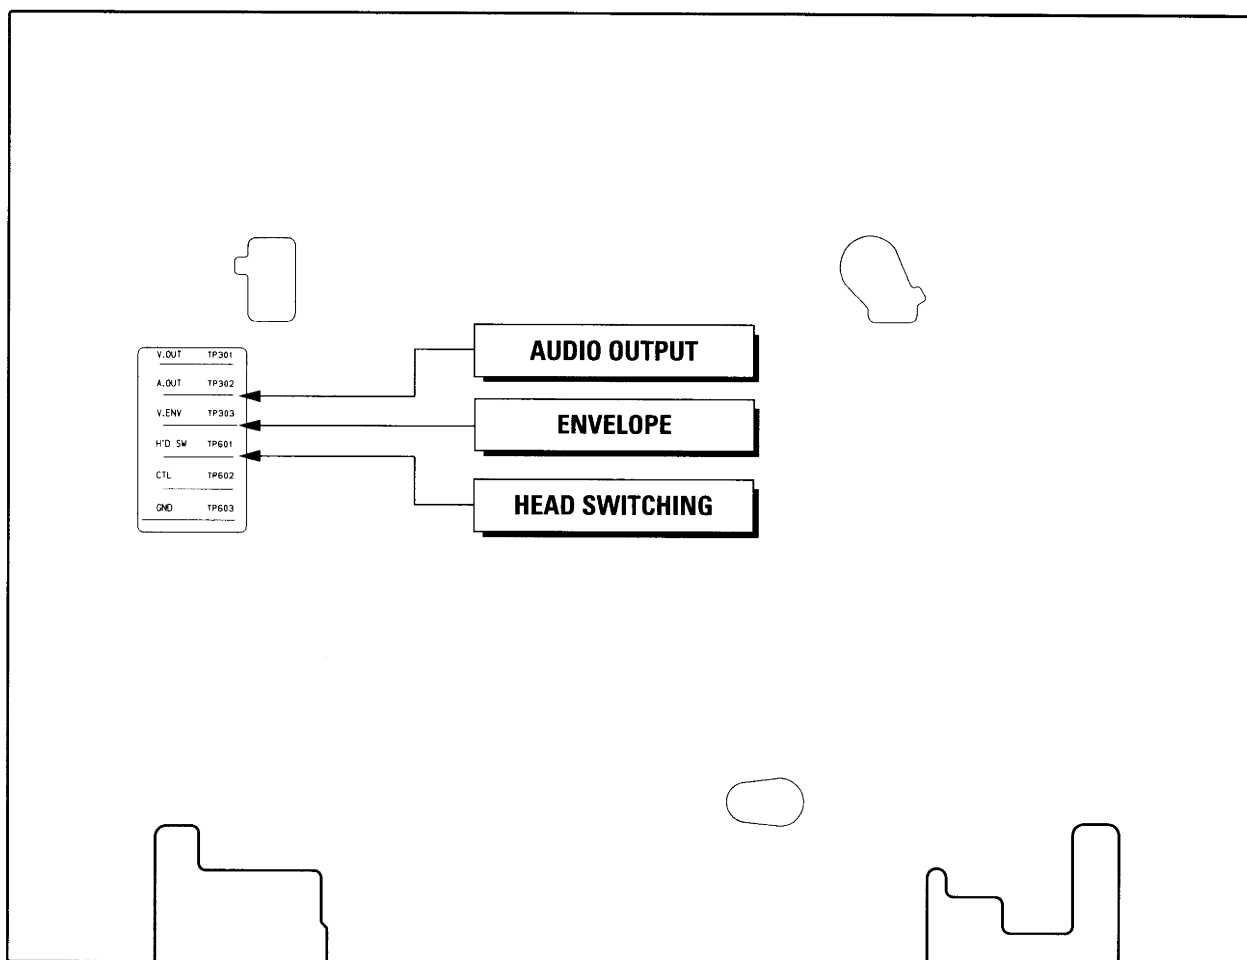


Fig. 5-5 Location of Test point (Main PCB-Top View)

## a. ACE HEAD HEIGHT ADJUSTMENT

- 1) Run the alignment tape (Color bar) in the playback mode.
- 2) Observe surface of the audio head using a dental mirror.
- 3) Turn screw (C) clockwise or counterclockwise until the gap of lower tape edge and the lower edge of the control head is about 0.25mm.  
(Refer to Fig. 5-6 and 5-7)

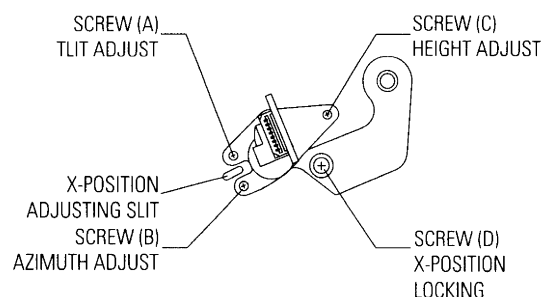


Fig. 5-6 Location of ACE Head Adjustment Screw

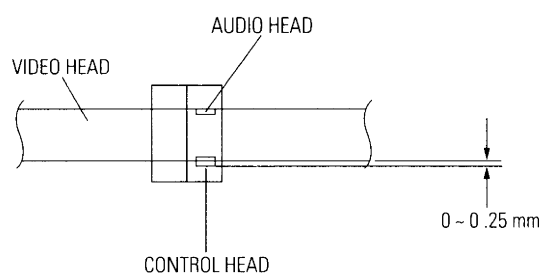


Fig. 5-7 ACE Head Height Adjustment

## b. ACE HEAD TILT ADJUSTMENT

- 1) Playback a blank tape and observe the position of the tape at the lower flange of tape guide.
- 2) Confirm that there is no curl or wrinkle at the lower flange of tape guide as shown in Fig. 5-8 (B).
- 3) If a curl or wrinkle of the tape occurs, slightly turn the screw (A) tilt adjust on the ACE head ass'y.
- 4) Reconfirm the ACE head height.

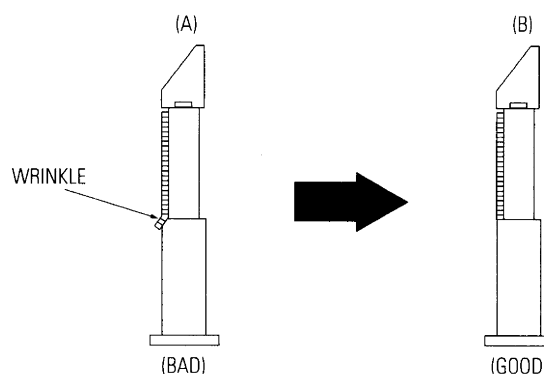


Fig. 5-8 Tape Guide Check

## c. AUDIO AZIMUTH ADJUSTMENT

- 1) Load alignment tape (Mono scope) and playback the NTSC : 7KHz (PAL : 6KHz) signal.
- 2) Connect channel-1 scope probe to audio output test point (TP302).
- 3) Adjust screw (B) to achieve maximum audio level.  
(See Fig. 5-6)

## d. ACE HEAD POSITION (X-POINT) ADJUSTMENT

- 1) Playback the alignment tape (Color bar).
- 2) Press the "SW701 (TEST)" button on Main PCB to set the adjustment mode. (See Fig. 5-2)
- 3) Press the "5" button of remote control then adjustment is operated automatically. (See Fig. 5-1)
- 4) Connect the CH-1 probe to TP303 (Envelope) the CH-2 probe to TP601 (H'D switching pulse) and then trigger to CH-1.
- 5) Insert the (-) driver into the X-Point adjustment hole and adjust it so that envelope waveform is maximum.
- 6) Turn the Power off.

## (2) Linearity adjustment (Guide roller S, T adjustment)

- 1) Playback the Mono Scope alignment tape (SP mode).
- 2) Observe the video envelope signal on an oscilloscope (triggered by the video switching pulse).
- 3) Make sure the video envelope waveform (at its minimum) meets the specification shown in Fig. 5-9.

If it does not, adjust as follows :

### Note :

- a=Maximum output of the video RF envelope.
  - b=Minimum output of the video RF envelope at the entrance side.
  - c=Minimum output of the video RF envelope at the center point.
  - d=Maximum output of the video RF envelope at the exit side.
- 4) If the section A in Fig. 5-10 does not meet the specification, adjust the guide roller S up or down.
  - 5) If the section B in Fig. 5-10 does not meet the specification, adjust the guide roller T up or down.

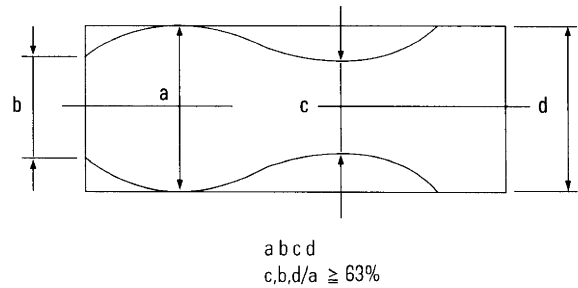


Fig. 5-9 Envelope Waveform Adjustment

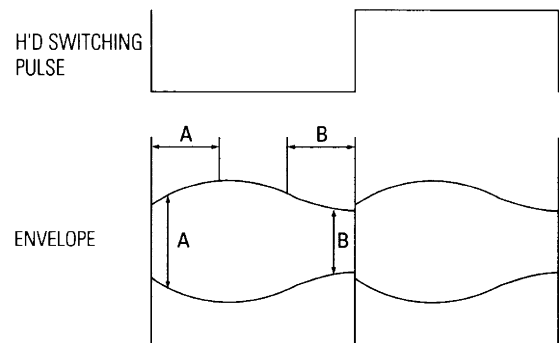


Fig. 5-10 Adjustment Points

- 6) Playback the Mono Scope alignment tape (SP mode).
- 7) Connect an oscilloscope CH-1 to the Envelope and CH-2 to the H'D SW Pulse for triggering.
- 8) Turn the guide roller heads with a flat head (■) driver to obtain a flat video RF envelope as shown in Fig. 5-11.

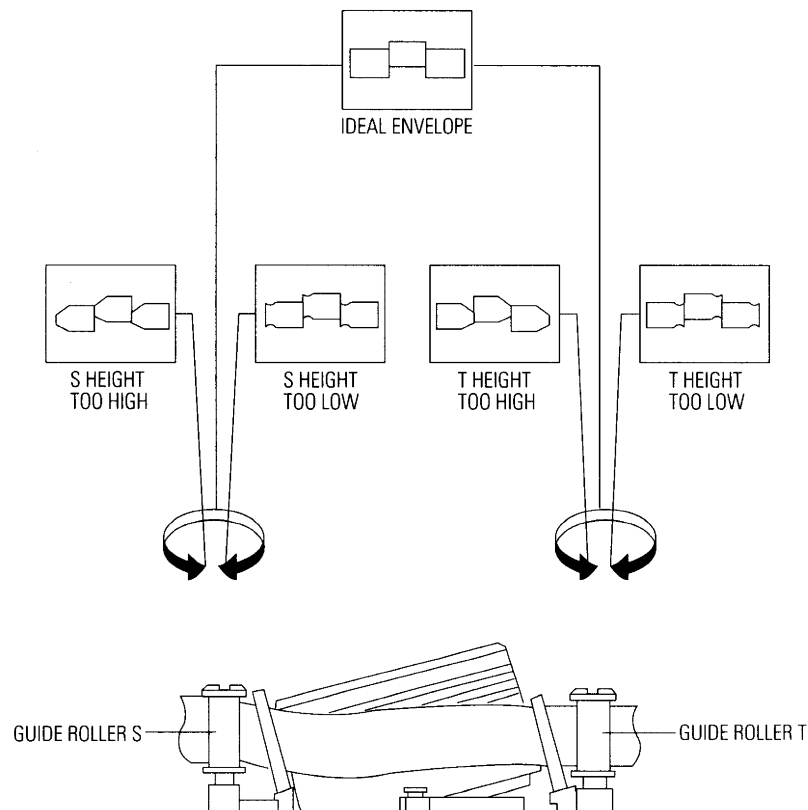


Fig. 5-11 Guide Roller S, T Height Adjustment



### (3) Check Transitional Operation from RPS to Play

Check transition from RPS mode to play mode :

Using a pre-recorded SP tape, make sure the entry side of envelope comes to an appropriate steady state within 3 seconds (as shown in Fig. 5-12).

If the envelope waveform does not reach specified peak-to-peak amplitude within 3 seconds, adjust as follows :

- 1) Make sure there is no gap between the supply roller lower flange and the tape.  
If there is a gap, adjust the supply guide roller again.
- 2) Change operation mode from the RPS to the play mode (again) and make sure the entry side of envelope rises within 3 second.

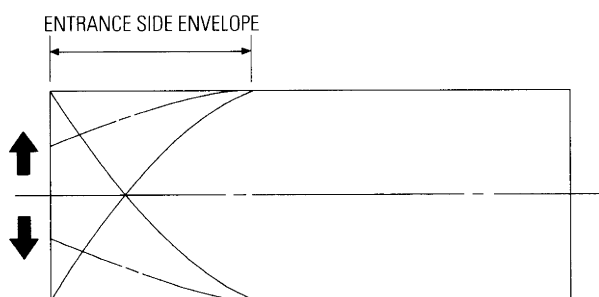


Fig. 5-12 Video Envelope Rising when Operation mode Changes from RPS to Play Mode

### (4) Envelope Check

- 1) Make recordings on T-120 (E-120) and T-160 (E-180) tape.  
Make sure the playback output envelope meets the specification as shown in Fig. 5-13.
- 2) Play back a self recorded tape (recording made on the unit using with T-120 (E-120)).  
The video envelope should meet the specification as shown in Fig. 5-13.  
In SP mode, (A) should equal (B).  
If the head gap is wide, upper cylinder should be checked.

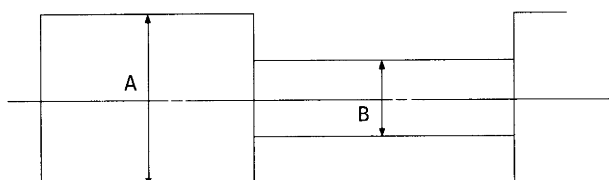


Fig. 5-13 Envelope Output and Output Level

### (5) Tape Wrinkle Check

- 1) Run the T-160 (E-180) tape in the playback, FPS, RPS and Pause modes and observe tape wrinkle at each guide.
- 2) If excessive tape wrinkle is observed, perform the following adjustments in Playback mode :
  - ◆ Tape wrinkle at the guide roller S, T section :  
Linearity adjustment.
  - ◆ Tape wrinkle at tape guide flange :  
ACE head assembly coarse adjustment.

### 5-2-3 Reel Torque

- 1) The rotation of the capstan motor causes the holder clutch ass'y to rotate through the belt pulley.
- 2) The spring wrap PLAY/REV of holder clutch ass'y drives the disk reel S, T through gear idle by rotation of gear center ass'y.
- 3) Brake is operated by slider cam at FF/REW mode.
- 4) Transportation of accurate driving force is done by gears. (Gear Center Ass'y)

**Note :** If the spec. does not meet the followings specifications, replace the holder clutch ass'y and then recheck.

<Table 5-1>

MODE	TORQUE g/cm		GAUGE
PB	NTSC	$82.5 \pm 27.5$	Cassette Torquemeter
	PAL	$79 \pm 27$	
RPS	$145 \pm 30$		Cassette Torquemeter

### 5-2-4 Location adjustment and Confirmation of Tension Post

- 1) Remove the holder cassette ass'y and then push the lever FL Arm-R to the direction of loading.
- 2) Push the lever tension drive ① in the direction of arrow. (See Fig. 5-14)
- 3) Turn the gear worm wheel ② clockwise so that "Timing Point" of the slider FL drive ③ and gear FL cam ④ can be aligned (See Fig. 5-15)

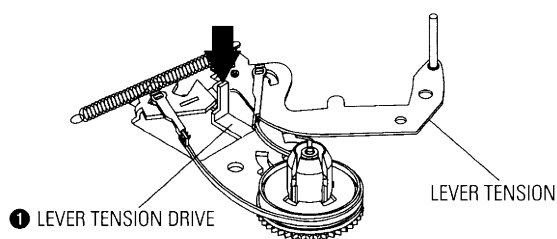


Fig. 5-14

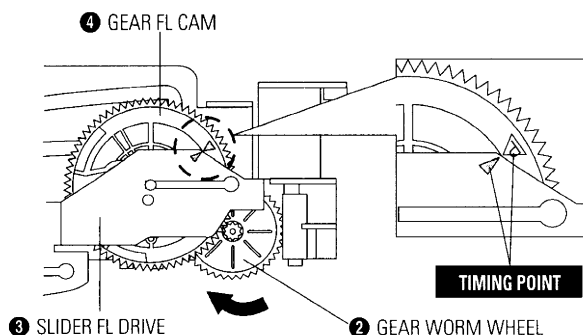


Fig. 5-15

- 4) As rotating Disk S Reel ① clockwise and the region of adjusting in the Main Base (in shape of slit) clockwise or counterclockwise after inserting screw driver in the slit on Main Base. Adjust the left end edge of Lever Tension Ass'y ③ to  $1.3 \pm 1.5 / -0.5$ mm from the location of mark in the Main Base.
- 5) As rotating Disk S Reel ①, double-check the location of the left end edge of Lever Tension Ass'y and the quantity of crossing from mark on Main Base. ( $\pm 1.0 / -0.5$ mm)

**Counterclockwise :** Torque UP

**Clockwise :** Torque DOWN

Back Tension should be  $56 \pm 15$ g.cm at inspecting it with Back Tension Meter.

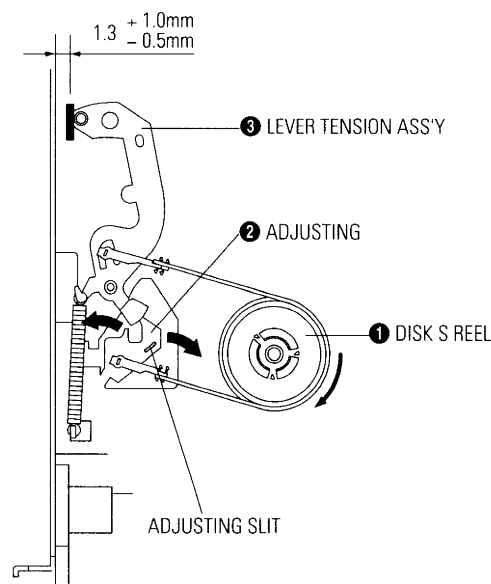


Fig. 5-16 Tension Pole and Back Tension Adjustment

**Note :**

- 1) Mark on Main Base is located in about 1.3mm from inside of bending line.
- 2) Be careful not to deform the region of adjusting on Main Base up and down at adjusting.

### 5-3 Head Switching Point Adjustment

- 1) Playback the alignment tape.
- 2) Press the "SW701 (TEST)" button on Main PCB to set the adjustment mode. (See Fig. 5-2)
- 3) Press the "SP/SLP" button of remote control then adjustment is operated automatically. (See Fig. 5-1)
- 4) Turn the Power off.

### 5-4 NVRAM Option Setting

- 1) NVRAM Option is adjusted at production line basically.
- 2) In case Micom (IC601) and NVRAM (IC605 ; EEPROM) is replaced, be sure to set the corresponding option number of the repaired model. (If the option is not set, the unit is not operated.)
- 1) Press the "SW701 (TEST)" button on Main PCB to set the adjustment mode. (See Fig. 5-2)
- 2) Press the "MENU (OSP)" button on the remote control about 5 seconds then option setting display is appeared. (See Fig. 5-17)
- 3) Select the option number (See Table 5-2) of corresponding model with "SHIFT  $\rightarrow$   $\leftarrow$ " button on the remote control.
- 4) If selecting the option number is completed, press the "CH/TRK (PROG.TV)  $\wedge$ " button of remote control. (If "CH/TRK (PROG.TV)  $\wedge$ " button is pressed, the selected number is changes reversed color. ; See Fig. 5-17)
- 5) Press the "ENTER (ENTRER)" button of remote control again to store the option number. ("SAVE" is displayed for a second as shown Fig. 5-18 and this setting is completed.)
- 6) Turn the Power off.

<Table 5-2>

MODELS	OPTION NUMBER
V-730EF	2, 4, 5, 6, 7, 8, 9, 12, 13, 14, 15, 16, 18, 19, 21, 22, 23, 24, 25, 29, 33, 36, 40, 44, 46, 48
V-610EF	2, 4, 5, 7, 8, 9, 12, 13, 14, 15, 16, 18, 19, 21, 22, 23, 24, 25, 29, 34, 36, 40, 44, 46, 48
V-510EF	5, 8, 9, 12, 13, 14, 15, 18, 19, 21, 22, 23, 25, 29, 34, 36, 39, 40, 44, 46, 48
V-430EF	2, 5, 6, 7, 8, 9, 12, 16, 18, 19, 22, 24, 25, 29, 33, 36, 40, 46, 48
V-230EF	2, 5, 6, 7, 9, 16, 18, 19, 22, 24, 25, 29, 33, 40, 46, 48
V-220EF	2, 5, 9, 18, 19, 22, 25, 29, 34, 39, 40, 46, 48
V-730UK	3, 4, 5, 6, 7, 8, 12, 13, 15, 21, 22, 23, 24, 33, 36, 40, 44, 46, 48
V-720UK/710UK	3, 5, 7, 8, 12, 13, 15, 21, 22, 23, 24, 34, 36, 39, 40, 44, 46, 48
V-430UK	3, 4, 5, 7, 8, 12, 22, 23, 24, 33, 36, 37, 46, 48
V-230UK	3, 4, 5, 7, 8, 22, 23, 24, 33, 36, 37, 46, 48
V-220UK	3, 4, 5, 7, 8, 22, 23, 24, 33, 36, 37, 46, 48
V-210UK	3, 8, 22, 34, 36, 46
V-740EG/730EG	2, 4, 5, 6, 7, 8, 10, 12, 13, 14, 15, 16, 18, 21, 22, 23, 24, 26, 30, 33, 36, 40, 44, 46, 48
V-430EG	2, 4, 5, 7, 8, 10, 12, 16, 18, 22, 23, 24, 26, 30, 33, 36, 37, 46, 48
V-230EG	2, 4, 5, 7, 8, 10, 16, 18, 22, 23, 24, 26, 30, 33, 36, 37, 46, 48
V-210EG	5, 7, 8, 10, 16, 18, 22, 26, 30, 34, 36, 46, 48
V-720W	5, 6, 8, 10, 12, 13, 14, 15, 18, 21, 22, 23, 26, 29, 30, 34, 36, 40, 44, 46, 48
V-710W	5, 6, 8, 10, 12, 13, 14, 15, 18, 21, 22, 23, 26, 29, 30, 34, 36, 40, 44, 46, 48
V-420W	5, 6, 8, 10, 12, 18, 22, 26, 29, 30, 34, 36, 37, 46, 48
V-410W	5, 6, 8, 10, 12, 18, 22, 26, 29, 30, 34, 36, 37, 46, 48
V-220W	6, 8, 10, 17, 18, 22, 26, 29, 30, 34, 36, 37, 46, 48
V-210W	6, 8, 10, 17, 18, 22, 26, 29, 30, 34, 36, 37, 46, 48

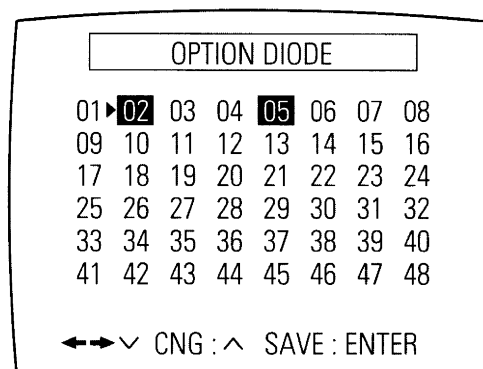


Fig. 5-17

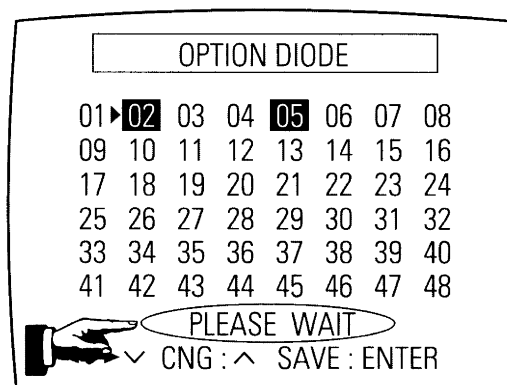


Fig. 5-18


---

## 6. Exploded View


---

<b>6-1 Packing Assembly</b>	<b>6-2</b>
<b>6-2 Instrument Assembly</b>	<b>6-3</b>
<b>6-3 Mechanical Parts (Top Side)</b>	<b>6-4</b>
<b>6-4 Mechanical Parts (Bottom Side)</b>	<b>6-5</b>


# 6-1 Packing Assembly

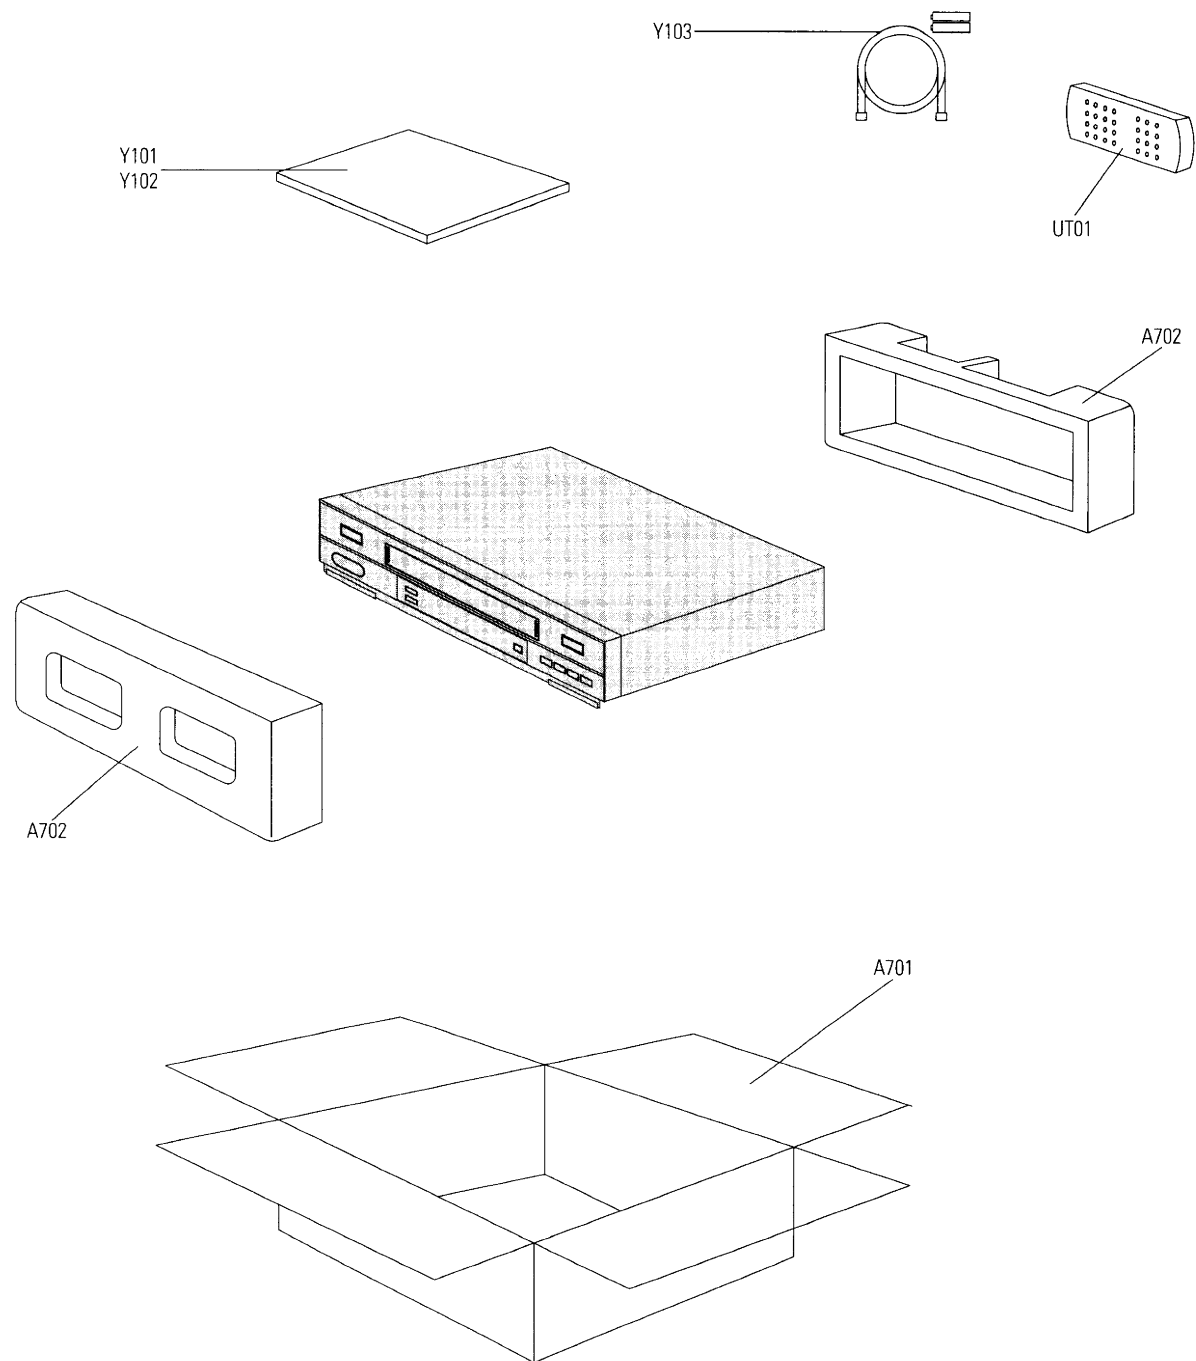

## 6-2 Instrument Assembly

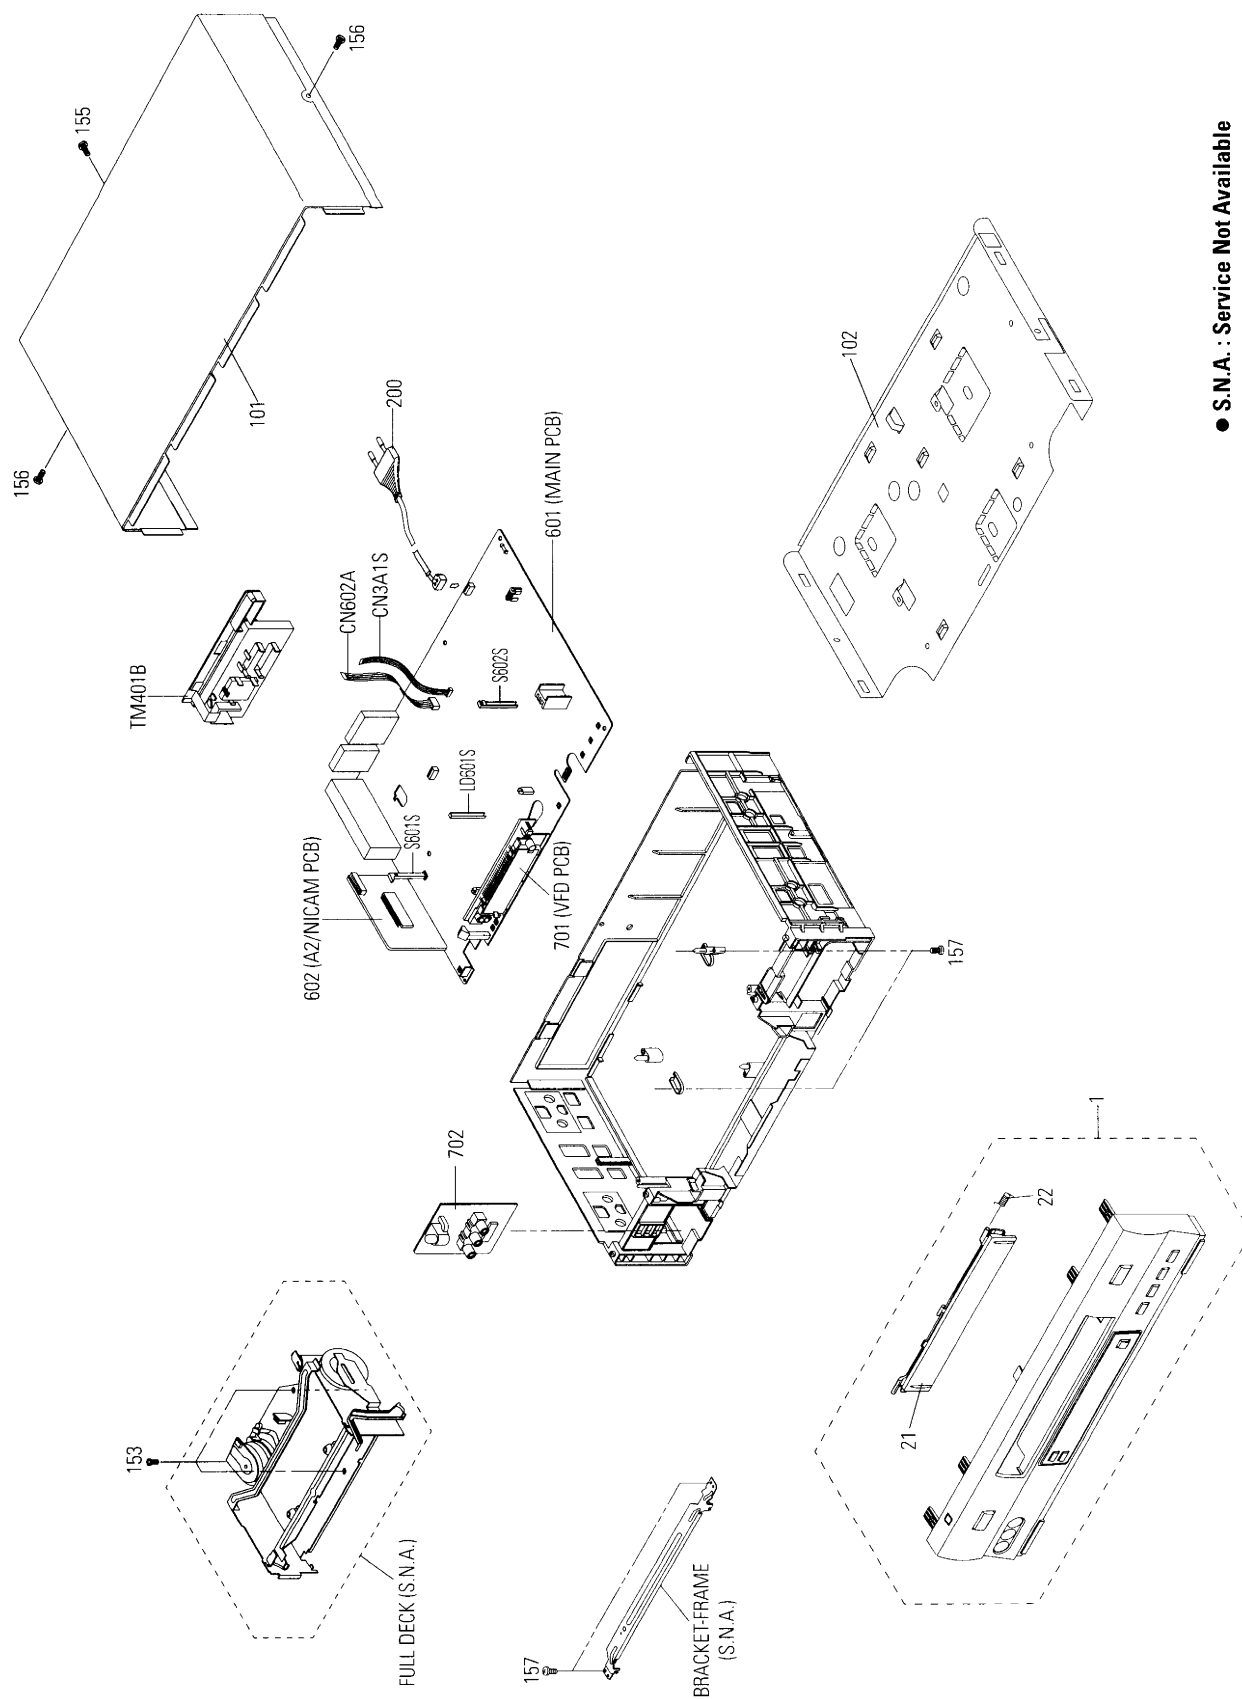


6-3 Mechanical Parts (Top Side)

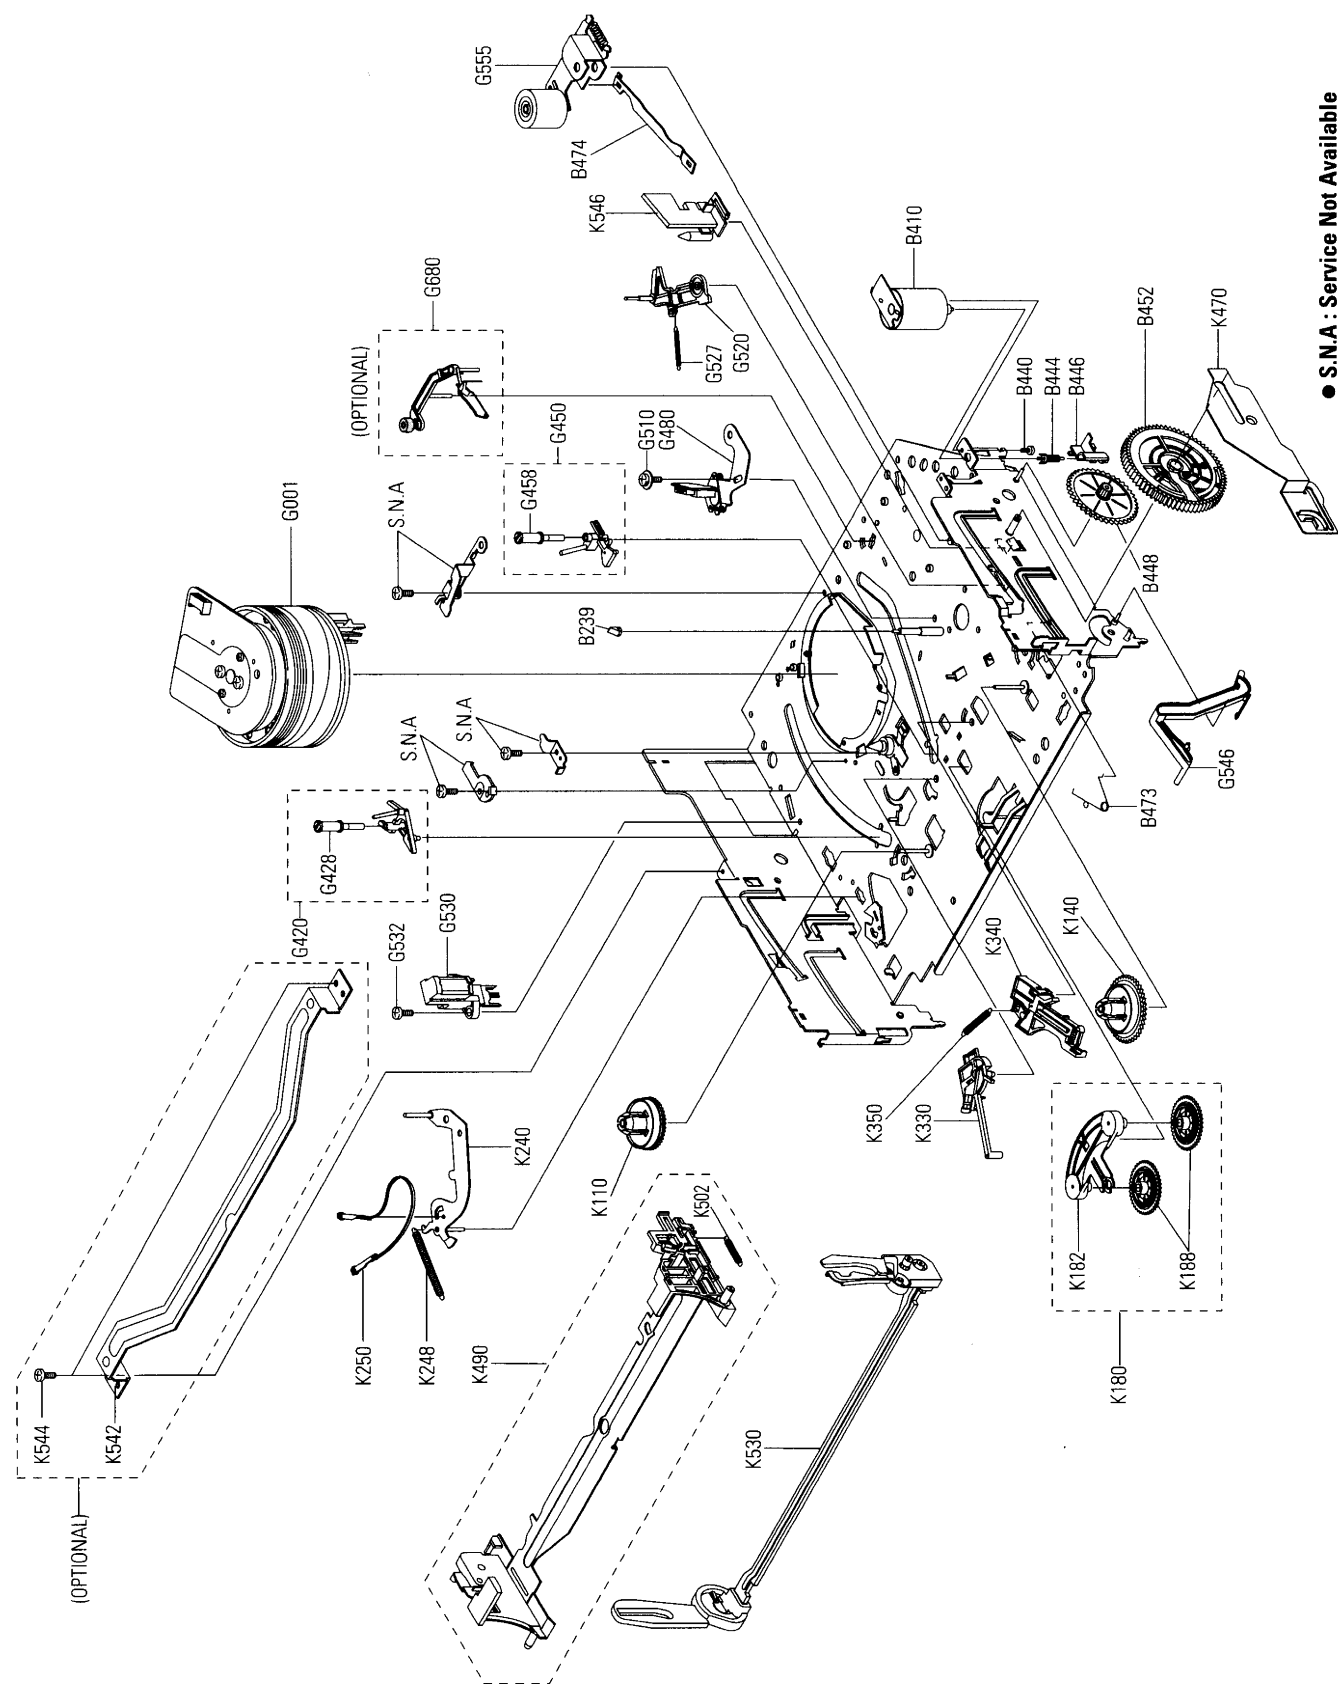

● S.N.A : Service Not Available

# 6-4 Mechanical Parts (Bottom Side)

● S.N.A : Service Not Available

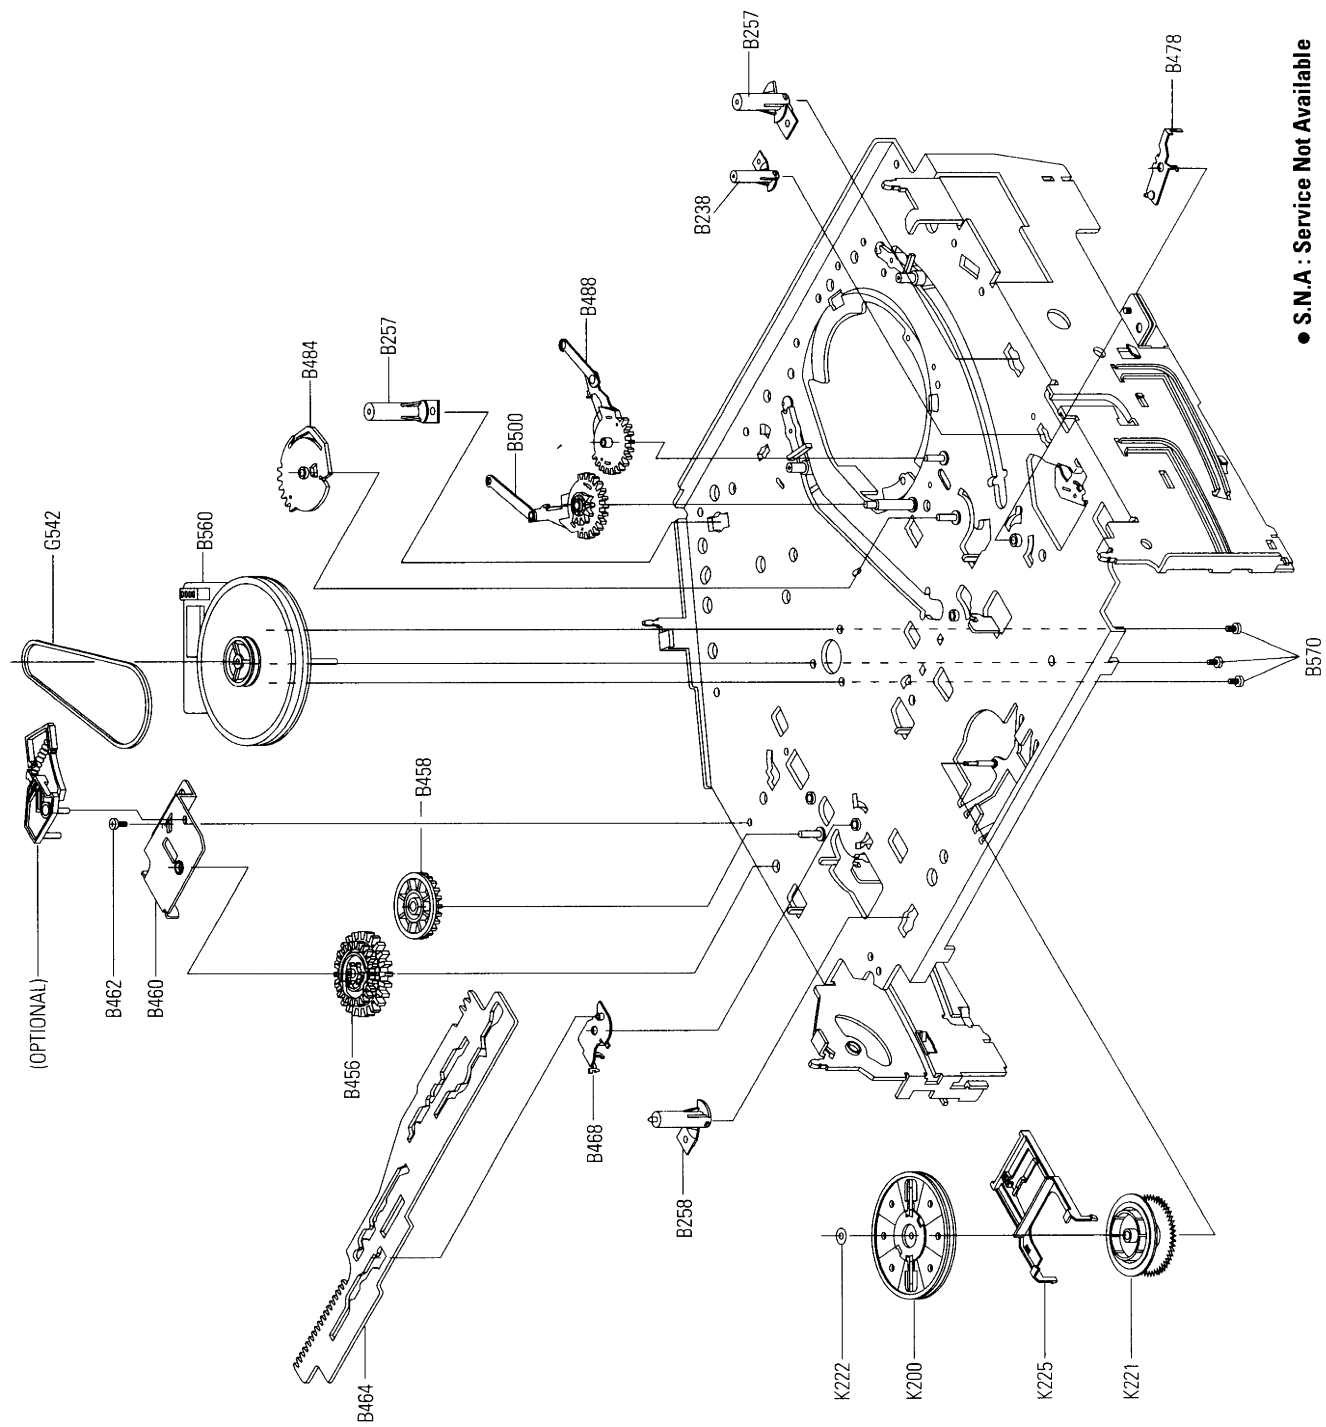



## 7. Replacement Parts List

### 7-1 Hi-Fi Models (V-730EF/610EF/510EF/730UK/720UK/710UK/740EG/730EG/720W/710W)

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
<b>- PACKING PARTS -</b>				
A701	BY730492	AC69-00067A	PACKING-CASE;V-730F,-,-,-,SW2+YEL,-,-	V-730EF
	BY730466	AC69-00067B	PACKING-CASE;V-610EF,-,-,-,SW2+YEL,-,-	V-610EF
	BY730521	AC69-00067C	PACKING-CASE;V-510EF,-,-,-,SW2+YEL,-,-	V-510EF
	BY730522	AC69-00067H	PACKING-CASE;V-730UK,-,-,-,SW2+YEL,-,-	V-730UK
	BY730523	AC69-00067U	PACKING CASE;V-720UK,SW2,-,-,-,YEL,-,-	V-720UK
	BY730524	AC69-00067J	PACKING-CASE;V-710UK,-,-,-,SW2+YEL,-,-	V-710UK
	BY730525	AC69-00067K	PACKING-CASE;V-740EG,-,-,-,SW2+YEL,-,-	V-740EG
	BY730526	AC69-00067L	PACKING-CASE;V-730EG,-,-,-,SW2+YEL,-,-	V-730EG
	BY730527	AC69-00067V	PACKING CASE;V-720W,SW2,-,-,-,YEL,-,-	V-720W
	BY730528	AC69-00067G	PACKING-CASE;V-710W,-,-,-,SW2+YEL,-,-	V-710W
A702	BY730464	AC69-00041A	CUSHION-F/B;M-656/TSB,EPS,-,-,-,-	ALL Models
UT01	BY634283	AC59-00015J	REMOCON-ASSY;-VT-730EF(70148444),-,-,V-	V-730EF
	BY634276	AC59-00015K	REMOCON-ASSY;-VT-610EF(70148445),-,-,V-	V-610EF
	BY634290	AC59-00015L	REMOCON-ASSY;-VT-510EF(70148446),-,-,V-	V-510EF
	BY634291	AC59-00015A	REMOCON-ASSY;-VT-730UK(70148439),-,-,V-	V-730UK
	BY634292	AC59-00015B	REMOCON-ASSY;-VT-710UK(70148440),-,-,V-	V-720UK/710UK
	BY634293	AC59-00015F	REMOCON-ASSY;-VT-730EG(70148436),-,-,V-	V-740EG/730EG
	BY634294	AC59-00015P	REMOCON-ASSY;-VT-710W(70148449),-,-,V-7	V-720W/710W
Y101	BY634282	AC68-00639A	MANUAL USERS;V-730EF/TSB,-,-,-,-,-	V-730EF
	BY634280	AC68-00640A	MANUAL USERS;V-610EF/TSB,-,-,-,-,-	V-610EF
	BY634295	AC68-00641A	MANUAL USERS;V-510EF/TSB,-,-,-,-,-	V-510EF
	BY634296	AC68-00648A	MANUAL USERS;V-730UK/TSB,-,-,-,-,-	V-730UK
	BY634297	AC68-00649A	MANUAL USERS;V-710UK/TSB,-,-,-,-,-	V-720UK/710UK
	BY634298	AC68-00654A	MANUAL USERS;V-740EG/TSB,-,-,-,-,-	V-740EG
	BY634298	AC68-00654A	MANUAL USERS;V-740EG/TSB,-,-,-,-,-	V-730EG
	BY634300	AC68-00660A	MANUAL USERS;V-710W/TSB,ENG+ITA,-,-,-,-	V-720W/710W
Y102	BY634302	AC68-00663A	MANUAL USERS;V-710W/TSB,RUSIA+SPA,-,-,-,-	V-710W
Y103	BY634253	AC39-00017A	CABLE-ETC-RF(PAL);-,MALE/FEMALE,1200MM,R	ALL Models
<b>- INSTRUMENT PARTS -</b>				
1	BY730496	AC97-00491A	ASSY-PANEL FRONT;V-730EG ,HIPS 94HB,-	V-730EF
	BY730469	AC97-00520A	ASSY-PANEL FRONT;V-610EF,HIPS 94HB,-	V-610EF
	BY730529	AC97-00521A	ASSY-PANEL FRONT;V-510EF,HIPS 94HB,-	V-510EF
	BY730530	AC97-00522A	ASSY-PANEL FRONT;V-730UK,HIPS 94HB,-	V-730UK
	BY730531	AC97-00763A	ASSY-PANEL FRONT;V-720UK,HIPS 94HB,-	V-720UK
	BY730532	AC97-00523A	ASSY-PANEL FRONT;V-710UK,HIPS 94HB,-	V-710UK
	BY730533	AC97-00755A	ASSY-PANEL FRONT;V-740EG,HIPS 94HB,-	V-740EG
	BY730534	AC97-00524A	ASSY-PANEL FRONT;V-730EG,HIPS 94HB,-	V-730EG
	BY730535	AC97-01025A	ASSY-PANEL FRONT;HIPS 94HB,V-720W/TSB,-	V-720W
	BY730536	AC97-00525A	ASSY-PANEL FRONT;V-710W,HIPS 94HB,-	V-710W
21	BY730484	AC64-00135A	DOOR-CASSETTE;-ABS94HB BRN,-,-,-,SILVER	V-730EF
	BY730460	AC64-00135B	DOOR-CASSETTE;-ABS94HB BLK,-,-,-,8746D/	V-610EF
	BY730537	AC64-00135C	DOOR-CASSETTE;-ABS94HB BROWN,-,-,-,SILV	V-510EF
	BY730538	AC64-00135D	DOOR-CASSETTE;-ABS94HB BROWN,-,-,-,SILV	V-730UK
	BY730539	AC64-00135U	DOOR-CASSETTE;-ABS94HB BRN,-,-,-,SILVER	V-720UK
	BY730540	AC64-00135E	DOOR-CASSETTE;-ABS94HB BROWN,-,-,-,SILV	V-710UK
	BY730541	AC64-00135L	DOOR-CASSETTE;-ABS94HB BRN,-,-,-,SILVER	V-740EG
	BY730542	AC64-00135F	DOOR-CASSETTE;-ABS94HB BROWN,-,-,-,SILV	V-730EG
	BY730543	AC64-00135V	DOOR-CASSETTE;-ABS94HB BRN,-,-,-,BLK,-,-	V-720W
	BY730544	AC64-00135G	DOOR-CASSETTE;-ABS94HB BROWN,-,-,-,SILV	V-710W
22	BY730093	AC61-62032A	SPRING-MASK;X-9,-,SUS,-,4 4,-,SV-C130	ALL Models
101	BY730313	AC64-30899C	CABINET-TOP-ASSY;-PCM(SECC),-.0.525,380	V-730EF/610EF/510EF/730UK/720UK/740EG
	BY730312	AC64-30899B	CABINET-TOP;V-629G/TSB,PCM MD552,SECC,TO	V-710UK/710W
	BY730314	AC64-30899D	CABINET-TOP-ASSY;-PCM(SECC),-.0.525,380	V-730EG/720W
102	BY730280	AC63-32128A	COVER-BOTTOM;SV-C140F,SECC,387.7X197.6,T	ALL Models
153	70790218	AC60-12126A	SCREW-BH;-BH,-,4*12,FE,FZY,-,-,-	ALL Models
155	70790082	AC60-12134A	SCREW-TAP BH;-BH,-,2-4X16,-,FE	ALL Models
156	BY730204	AC60-00001A	SCREW-MACHINE;-BH,-,4X12,M4,L12,BLK,SMC	ALL Models
157	70790002	AC60-10063A	SCREW-TAPTITE;BH,-,M3,L12,ZPC3,SWRCH18	ALL Models
200	BY634124	AC39-10019A	POWER CORD;KKP-419C,H03VVH2-F,VDE/KEMA-K	"EF/EG/W" Models Only
	BY634126	AC39-12022K	POWER-CORD;Y352160,H03VVH2-F,-,BS6500,1,	"UK" Models Only
CN3A1S	BY634118	3809-001111	CABLE-FLAT;30V,80C,130mm,7P,1.25mm,UL289	ALL Models
CN602A	BY634007	3809-001049	CABLE-FLAT;30V,80C,100MM,5P,1.25MM,UL289	ALL Models
LD601S	BY730082	AC61-21009A	HOLDER-LED;-POM(M90-44),-BLK,-,X-9	ALL Models
S601S	BY730080	AC61-21008A	HOLDER-SENSOR;-POM(M90-44),-BLK,-,X-9	ALL Models
S602S	BY730080	AC61-21008A	HOLDER-SENSOR;-POM(M90-44),-BLK,-,X-9	ALL Models
TM401B	BY730219	AC61-11061A	CONNECTOR BOARD-ASSY;SV-C140F,HIPS94,HB,	"EF" Models Only
	BY730221	AC61-11061C	CONNECTOR BOARD-ASSY;V-629F/TSB,HIPS94,H	"UK" Models Only
	BY730220	AC61-11061B	CONNECTOR BOARD-ASSY;V-629G/TSB,HIPS94,H	"EG/W" Models Only

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
<b>- MECHANICAL PARTS -</b>				
B238	BY730087	AC61-50660A	SLEEVE-TENSION;-POM M90-44,-,-,ID3,-,-,	
B239	BY730234	AC61-21004A	CAP-#8 GUIDE;-POM M90-44,-,-,NTR,-,-,X-9	
B257	BY730247	AC61-50661A	POST-MAIN PCB;-POM M90-44,-,-,NTR,-,-,X-9	
B258	BY730266	AC61-50684A	GUIDE-MAIN PCB;-POM,OD7,L20,-,BLACK,X-9	
B410	BY730456	AC31-12016D	MOTOR-LOADING ASSY;-,-,SNHNE,-,-,	
B440	BY730072	AC60-10515A	SCREW-MACHINE;-,-,PH,+,-,M3,L3,ZPC,-,-,YEL	
B444	BY730104	AC66-20571A	GEAR-WORM;-,-POM SW-01,0.5,2,-,-,4.5,X-9	
B446	BY730079	AC61-21005A	HOLDER-WORM;-,-POM M90-44,-,-,X-9	
B448	BY730105	AC66-20573A	GEAR-WORM WHEEL;-,-POM SW-01,0.6,11,-,-,6.6	
B452	BY730107	AC66-20575A	GEAR-FL CAM;-,-POM SW-01,M0.6,Z88,-,-,PCD58	
B456	BY730108	AC66-20576A	GEAR-JOINT 1;-,-POM SW-01,M1.0,Z22,-,-,PCD2	
B458	BY730106	AC66-20574A	GEAR-JOINT 2;-,-POM SW-01,M1.0,Z14,-,-,PCD1	
B460	BY730447	AC61-11045A	BRACKET-GEAR;-,-SECC20/20,-,T1.2,-,-,X-9	
B462	BY730073	AC60-10517A	SCREW-TAP TITE;-,-,PH,+,-,M2.6,L5,ZPC,-,-,YE	
B464	BY730381	AC66-80140A	SLIDER-CAM;-,-SECC20/20,T1.2,-,-,X-9	
B468	BY730450	AC66-30541A	LEVER-PINCH DR ASSY;-,-,-,-,X-9	
B473	BY730090	AC61-60559A	SPRING-PINCH DRIVE;-,-,TS,SUS304,PI0.5,OD4	
B474	BY730244	AC61-30180A	PLATE-JOINT;-,-SECC20/20,T0.8,-,-,X-9	
B478	BY730449	AC66-30540A	LEVER-TENS DR ASSY;-,-,-,-,X-9	
B484	BY730110	AC66-20580A	GEAR-LOADING DRIVE;-,-POM SW-01,M1.0,Z32,	
B488	BY730117	AC66-30543A	LEVER-S LOAD ASSY;-,-,-,-,X-9	
B500	BY730116	AC66-30542A	LEVER-T LOAD ASSY;-,-,-,-,X-9	
B560	BY730455	AC31-00005A	MOTOR-CAPSTAN;-,-,F2QSB02,-,-,	
B570	BY730071	AC60-10514A	SCREW-CAPSTAN;-,-,PH,+,-,M2.6,L6,-	
G001	BY730471	AC97-00566A	ASSY-CYLINDER;CX-9T,SECAM,6HD	
	BY730545	AC97-00551A	ASSY-CYLINDER;CX-9T,PAL,6HD	"EF" Models "UK/EG/W" Models
G420	BY730124	AC66-80142A	SLIDER-SUPPLY ASSY;-,-,X-9(TS),-,-,-,X-9	
G428	BY730451	AC66-40153A	ROLLER-SUPPLY ASSY;-,-,VW-32,OD7,-,-,X-9	
G450	BY730123	AC66-80141A	SLIDER-TAKE UP ASSY;-,-,X-9(TS),-,-,-,X-9	
G458	BY730452	AC66-40154A	ROLLER-TAKE UP ASSY;-,-,VW-32,OD7,-,-,X-9	
G480	BY730052	AC33-00003A	HEAD-ACE-ASSY;SHINHEUNG,-,-,-,-,X-9	
G510	BY730479	6006-001075	SCREW-ASS'Y TAPT;WSP,PH,+,-,M2.6,L5.0,ZPC(	
G520	BY730115	AC66-30539A	LEVER-#9 GUIDE ASSY;-,-,X-9(TS),-,-,-,X-9	
G527	BY730088	AC61-60553A	SPRING-#9 GUIDE;-,-,ES,SUS304-WPB,OD3.1,0.	
G530	BY730053	AC33-00002A	HEAD-FE;-,-,HVFP0038A,-,-,-,-,X-9	
G532	BY730075	AC60-10519A	SCREW-TAP TITE;-,-,PH,+,-,M2.6,L8,ZPC	
G542	BY730122	AC66-60051A	BELT-PULLEY;-,-5CM-70,2 * 2,-,-,71.3,-,-,X-9	
G546	BY730113	AC66-30535A	LEVER-FL DOOR;-,-POM M90-44,-,-,BLK,X-9	
G555	BY730070	AC59-90403A	UNIT-PINCH ASSY;X-9,-	
G680	BY730372	AC66-30557A	LEVER-H/CLEANER ASSY;-,-,POM+URETHANE,-,-,	
K110	BY730102	AC66-10267A	REEL-DISK S;-,-POM M90-44,-,-,X-9	
K140	BY730103	AC66-10268A	REEL-DISK T;-,-POM M90-44,-,-,X-9	
K180	BY730369	AC66-30548A	LEVER-IDLER ASSY;-,-POM+NYLON,-,-,-,X-9	
K182	BY730112	AC66-30524A	LEVER-IDLER;-,-POM9044,-,-,-,-	
K188	BY730109	AC66-20577A	GEAR-IDLER;-,-PEBAX 7033,-,-,-,-,X-9	
K200	BY730084	AC61-21012A	HOLDER-CLUTCH ASSY;-,-,-,-,-,X-9	
K221	BY730111	AC66-20581A	GEAR-CENTER ASSY;-,-POM,M=0.5,-,-,HIGHT T.,	
K222	BY730076	AC60-30306A	WASHER-SLIT;-,-,ID2.1,OD5.0,T0.5,-,-,POLYS	
K225	BY730119	AC66-30547A	LEVER-UP DOWN ASSY;-,-POM+SUS,-,-,-,-,X-9	
K240	BY730114	AC66-30538A	LEVER-TENSION ASSY;-,-,X-9(TS),-,-,-,-,X-9	
K248	BY730089	AC61-60554A	SPRING-TENSION LEVER;-,-,ES,SUS304-WPB,OD3	
K250	BY730094	AC63-12029A	BAND-BRAKE ASSY;-,-,X-9(TS),-,-,-,-,X-9	
K330	BY730121	AC66-30550A	LEVER-S BRAKE ASSY;-,-POM+SUS,-,-,-,-,X-9	
K340	BY730120	AC66-30549A	LEVER-T BRAKE ASSY;-,-POM+SUS,-,-,-,-,X-9	
K350	BY730092	AC61-60564A	SPRING-BRAKE;-,-TENSION,SWP-A,0.25,3,-,-,X-	
K470	BY730454	AC66-80139A	SLIDER-FL DRIVE;-,-SECC E20/20,T1.2,-,-,X	
K490	BY730083	AC61-21010B	HOLDER-CASS ASSY;-,-SECC+POM+SUS,-,-,-,SEIN	
K502	BY730091	AC61-60561A	SPRING-FL LEVER-LR;-,-,ES,SUS304 WPB,PI2.7	
K530	BY730118	AC66-30546A	LEVER-FL ARM ASS'Y;-,-SECC+POM+SUS,-,-,-,-	
K546	BY730086	AC61-50658A	GUIDE-CASS. DOOR;-,-POM M90-44,-,-,NTR,-,-,	
<b>- ELECTRICAL PARTS -</b>				
601	BY630098	AC92-00305A	ASSY-PCB-MAIN;V-730EF/TSB,HI-FI	V-730EF
	BY630088	AC92-00306A	ASSY-PCB-MAIN;V-610EF/TSB,HI-FI	V-610EF
	BY630108	AC92-00307A	ASSY-PCB-MAIN;V-510EF/TSB,HI-FI	V-510EF
	BY630109	AC92-00313A	ASSY-PCB-MAIN;V-730UK/TSB,HI-FI	V-730UK
	BY630110	AC92-00314A	ASSY-PCB-MAIN;V-710UK/TSB,HI-FI	V-720UK/710UK
	BY630111	AC92-00321A	ASSY-PCB-MAIN;V-730EG/TSB,HI-FI	V-740EG/730EG
	BY630112	AC92-00310A	ASSY-PCB-MAIN;V-710W/TSB,HI-FI	V-720W/710W
602	BY630092	AC92-00504A	ASSY-PCB-SUB;SV-633F,V-730EF,A2/NICAM	
701	BY630099	AC92-00325A	ASSY-PCB-VFD-AVLINK;V-730EF/TSB,VFD-AVLI	V-730EF/730UK/740EG/730EG
	BY630090	AC92-00324A	ASSY-PCB-VFD-Only;V-610EF/TSB,VFD-Only	V-610EF
	BY630113	AC92-00509A	ASSY-PCB-VFD;V-510EF,V-720UK,VFD-Only,TS	V-510EF/720UK/710UK/720W/710W
702	BY630100	AC92-00326A	ASSY-PCB-F/AV-SRC;V-730EF/TSB,F/AV-SRC	V-730EF/740EG/730EG
	BY630114	AC92-00428A	ASSY-PCB-SRC;V-610EF/TSB,SRC Only	V-610EF
	BY630078	AC92-00091A	ASSY-PCB-SUB;V-729EG/TSB,CBC2	V-730UK
	BY630115	AC92-00454A	ASSY-PCB-F/AV;V-W57H/TSB,F/AV-HIFI	V-720W/710W

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
<b>&lt;INTERGRATED CIRCUITS&gt;</b>				
IC1SF1	BY631087	1203-001802	IC-PWM CONTROLLER;STR-G6551,TO-220F,5P-	△
IC1SS1	BY530004	0604-001028	PHOTO-COUPLER;TR,50-600%,250mW,DIP-4,ST	
IC1SS2	BY631008	AC14-12006D	IC;KA431Z,TO-92,TAPING	
IC301	BY631049	1204-001649	IC-VIDEO PROCESS;LA71598M,QFP,100P,-,PLA	"EF" Models Only
IC3S01	BY631062	1204-001437	IC-CHROMA;LA7359,DIP,28P,400MIL,PLASTIC,	
IC4N01	BY631063	1204-001516	IC-AUDIO PROCESSOR;MSP3417D,DIP,52P,551M	
IC501	BY631023	1204-001479	IC-AUDIO PROCESSOR;LA72634AM,QFP,64P,400	"EF/EG" Models Only "UK" Models Only "W" Models Only
IC601	BY631092	AC09-00109A	IC-MICOM;uPD784927GF-155-3BA,784927GF-1	
IC601	BY631098	AC09-00105A	IC-MICOM;uPD784927GF-156-3BA,784927GF-1	
IC601	BY631099	AC09-00107A	IC-MICOM;uPD784927GF-158-3BA,784927GF-1	V-510EF Only "W" Models Only
IC602	BY631022	1003-001162	IC-MOTOR DRIVER;KA3082,SIP,10PIN,25MIL,D	
IC604	70795269	AC14-12006C	IC;KA7533,DIP,-	
IC605	BY631082	1103-001150	IC-EEPROM;24C081,8KBIT,DIP,8P,300MIL,10M	
IC608	BY631059	1203-000515	IC-VOL. DETECTOR;7042,TO-92,3P,177MIL,PL	
IC6P01	BY631068	AC09-12014Z	IC-MCU;LC74776M,30P,MFP,OSD/VPS/PDC I	
IC6P01	BY631066	AC09-10459G	IC-MCU;LC74789YJM-9771,24P,MFP,OSD IC	
IC6P01	BY631100	AC09-00115A	IC-OSD;LC74759JM-9792,LC74759JM-9792,	
IC701	BY631094	AC09-00092A	IC MCU;uPD780232GC-014-8BT,uPD780232G	
IC801	BY631064	1205-001484	IC-SWITCH;LA7147M,SOP,36PIN,375MIL,PLAST	
<b>&lt;TRANSISTORS&gt;</b>				
Q1P101	70693265	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
Q1P102	70693265	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
Q1P103	70693265	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
Q1P104	70693410	0501-000610	TR-SMALL SIGNAL;KSA928A-Y,PNP,1W,TO-92L,	
Q1P105	70795137	0504-000116	TR-DIGITAL;KSR1001,NPN,300MW,4.7K/4.7K,T	
Q1P106	70795142	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,TO-9	
Q1P107	70795818	0501-000290	TR-SMALL SIGNAL;KSA643-Y,PNP,500mW,TO-92	
Q1P110	70795137	0504-000116	TR-DIGITAL;KSR1001,NPN,300MW,4.7K/4.7K,T	
Q1P111	70693084	0504-000142	TR-DIGITAL;KSR2001,PNP,300MW,4.7K/4.7K,T	
Q1P112	70795818	0501-000290	TR-SMALL SIGNAL;KSA643-Y,PNP,500mW,TO-92	
Q1P114	70693265	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
Q1P115	70693084	0504-000142	TR-DIGITAL;KSR2001,PNP,300MW,4.7K/4.7K,T	
Q1P116	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q1P117	70795142	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,TO-9	
Q302	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q303	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q304	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q308	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q309	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q3A01	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q3A03	70795142	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,TO-9	
Q3A04	70795142	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,TO-9	
Q3A05	70795142	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,TO-9	
Q3A06	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q3D01	70795142	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,TO-9	
Q3D02	70693084	0504-000142	TR-DIGITAL;KSR2001,PNP,300MW,4.7K/4.7K,T	
Q3D03	BY530014	0504-000119	TR-DIGITAL;KSR1004,NPN,300MW,47K/47K,TO-	
Q3S01	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	"EF" Models Only "EF" Models Only
Q3S02	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q3S03	70693084	0504-000142	TR-DIGITAL;KSR2001,PNP,300MW,4.7K/4.7K,T	
Q3S04	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	"EF" Models Only "EF" Models Only
Q3S05	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q602	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q6B01	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	V-730EF/610EF/730UK/740EG/730EG Only V-730EF/610EF/730UK/740EG/730EG Only V-730EF/610EF/730UK/740EG/730EG Only
Q6B03	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q6B04	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q6P01	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q6P02	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q6P03	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q701	70693084	0504-000142	TR-DIGITAL;KSR2001,PNP,300MW,4.7K/4.7K,T	
<b>&lt;DIODES&gt;</b>				
D1P101	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1P103	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D1P105	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D1P108	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D1P109	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1P110	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1P111	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1P113	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D1P114	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1P115	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1P117	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1P119	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D1P120	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D1P125	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1SD11	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	

Loc.No.	TSB Parts No.	Reference No.	Description, Specification	Remark
D1SD31	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
D1SD32	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
D1SF05	BY430012	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
D1SF12	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
D1SS01	BY430012	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
D1SS02	BY430012	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
D1SS03	BY430012	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
D1SS04	BY430012	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
D1SS11	BY430008	0402-000276	DIODE-RECTIFIER;UF4007,1KV,1A,DO-41,TP	
D1SS31	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
D1SS32	BY430010	0402-001194	DIODE-RECTIFIER;UG2D,200V,2A,DO-204AC,TP	
D1SS33	BY430065	0404-001069	DIODE-SCHOTTKY;B10A45VI,45V,10A,TO-220IS	
D1SS44	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
D302	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	"EF" Models Only
D3S02	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D401	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D4N01	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D4N02	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D603	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D604	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D605	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D611	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D620	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D701	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D702	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D702	BY430014	0403-001141	DIODE-ZENER;MTZJ24D,24V,23.63-24.85V,500	
D703	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D704	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D705	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D706	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D706	BY430004	0403-000509	DIODE-ZENER;MTZJ5.6B,5.6V,5.45-5.73V,500	
D707	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D708	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D709	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D805	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
LD601	BY430016	0601-000517	LED-IR;RECTANGULA,4x6.0mm,75mW,6V,950	
LD6B01	70796042	0601-000494	LED-IR;ROUND,5mm,140mW,5V,940nm,-	
LD701	70796042	0601-000494	LED-IR;ROUND,5mm,140mW,5V,940nm,-	
LD702	70796042	0601-000494	LED-IR;ROUND,5mm,140mW,5V,940nm,-	
LD703	BY430066	0601-001201	LED;ROUND,RED,3mm,635nm	
W167	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
W532	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
ZD1P01	BY430015	0403-001211	DIODE-ZENER;MTZJ12B,11.44-12.03V,500MW,D	
ZD1P02	BY430005	0403-000717	DIODE-ZENER;MTZJ5.1B,5.1V,4.94-5.2V,500m	
ZD1P03	BY430013	0403-000720	DIODE-ZENER;MTZJ9.1B,9.1V,8.57-9.01V,500	
ZD1P06	BY430015	0403-001211	DIODE-ZENER;MTZJ12B,11.44-12.03V,500MW,D	
ZD401	70795272	0403-000390	DIODE-ZENER;UZP33B,33V,31.4-34.6V,1W,DO-	
<b>&lt;INDUCTORS&gt;</b>				
BD1SD1	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-,-	
BD1SF1	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-,-	
BD1SF3	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-,-	
BD1SR1	BY330003	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	
BD1SS2	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-,-	
BD1SS3	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-,-	
FL3A01	BY330004	AC27-80100A	COIL-OSC;126QN-K5272YHC=K,-,AM	
FL3D01	BY330055	AC27-82001C	COIL-BIAS OSC;B02,W(TOKO)VX1850,-	
L1SS02	BY634272	AC29-00002A	FILTER LINE NOISE;-,-,30mH,-,-,BLF-2116	
L1SS31	70796213	AC27-12001N	COIL-CHOKE;10UH-15%,RA,K-30,Q80,150KHZ,-	
L1SS32	70796213	AC27-12001N	COIL-CHOKE;10UH-15%,RA,K-30,Q80,150KHZ,-	
L301	70795841	2701-000206	INDUCTOR-AXIAL;56uH,5%,2.4x3.4mm	
L302	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L304	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L305	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L306	70796361	2701-000119	INDUCTOR-AXIAL;120uH,5%,2.4x3.4mm	
L310	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L3A01	70795171	2702-000120	INDUCTOR-RADIAL;15mH,5%,6.2x7.4mm	
L3A02	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L3A03	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L3D01	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L3S01	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L3S02	70795863	2702-000179	INDUCTOR-RADIAL;6.8uH,5%,6x6.4mm	"EF" Models Only
L3S03	BY330052	2701-000165	INDUCTOR-AXIAL;27uH,5%,2.4x3.4mm	"EF" Models Only
L3S04	70795843	2701-000195	INDUCTOR-AXIAL;47uH,5%,2.4x3.4mm	"EF" Models Only
L3S05	70795162	2701-000160	INDUCTOR-AXIAL;22uH,5%,2.4x3.4mm	"EF" Models Only
L401	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L402	BY330003	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	
L4N01	70796075	2701-000188	INDUCTOR-AXIAL;4.7uH,5%,2.4x3.4mm	
L4N02	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
L4N03	70796075	2701-000188	INDUCTOR-AXIAL;4.7uH,5%,2.4x3.4mm	
L4N04	BY330003	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	
L502	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L503	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L601	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L603	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L604	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L605	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L6B01	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	V-730EF/610EF/730UK/740EG/730EG Only
L6B02	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L6P03	70795162	2701-000160	INDUCTOR-AXIAL;22uH,5%,2.4x3.4mm	
L6P04	BY330054	2701-000201	INDUCTOR-AXIAL;5.6uH,5%,2.4x3.4mm	
L6P05	BY330052	2701-000165	INDUCTOR-AXIAL;27uH,5%,2.4x3.4mm	
L701	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	V-730EF/730UK/740EG/730EG/720W/710W Only
L702	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	V-730EF/730UK/740EG/730EG/720W/710W Only
L702	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L801	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L802	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L803	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L804	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L805	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L806	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	"UK" Models Not used
L807	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	"UK" Models Not used
L808	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L809	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L810	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L811	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L812	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L813	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-	
L814	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-	

**<CAPACITORS>**

C1P101	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5.5mm	
C1P102	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11.5	
C1P103	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C1P104	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	
C1P105	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C1P106	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C1P107	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C1P108	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5.5mm	
C1P110	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C1P114	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C1P115	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C1P116	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C1SD03	BY130219	2201-000812	C-CERAMIC,DISC;2.2nF,20%,400V,Y5U,BK,12.	
C1SD04	BY130219	2201-000812	C-CERAMIC,DISC;2.2nF,20%,400V,Y5U,BK,12.	
C1SD11	BY130283	2401-003302	C-AL;47uF,20%,400V,GP,TP,18X31.5,7.	
C1SD12	BY130226	2305-001029	C-FILM,MPEF;10nF,10%,630V,TP,12x9x12.5,5	
C1SD13	70795070	2201-000376	C-CERAMIC,DISC;0.22nF,5%,50V,SL,TP,6.3x3	
C1SF12	BY130296	2401-001200	C-AL;33uF,20%,50V,WT,TP,6.3x11.5	
C1SS01	BY130272	2305-001021	C-FILM,MPEF;100nF,20%,275V,TP,17.5x7x13.	
C1SS02	BY130272	2305-001021	C-FILM,MPEF;100nF,20%,275V,TP,17.5x7x13.	
C1SS12	BY130258	2201-000129	C-CERAMIC,DISC;0.1nF,10%,1kV,Y5P,TP,7x4,	
C1SS31	70795431	2401-000385	C-AL;10uF,20%,100V,GP,TP,6.3x11.5	
C1SS32	BY130281	2401-003046	C-AL;47uF,20%,50V,WT,TP,6.3x11.2,5	
C1SS33	BY130251	2401-003477	C-AL;330UF,20%,25V,LZ,TP,10X12.5MM,	
C1SS34	BY130338	2401-003478	C-AL;100UF,20%,25V,LZ,TP,8X11.5MM,5	
C1SS35	BY130339	2401-003480	C-AL;1000UF,20%,10V,LZ,TP,10X16MM,5	
C1SS36	BY130015	2401-001479	C-AL;470uF,20%,10V,GP,-,-,TP	
C1SS37	BY130281	2401-003046	C-AL;47uF,20%,50V,WT,TP,6.3x11.2,5	
C1SS38	BY130015	2401-001479	C-AL;470uF,20%,10V,GP,-,-,TP	
C1SS39	70796098	2301-000129	C-FILM,PEF;100nF,5%,50V,TP,10X9X4.3X5,5m	
C1SS40	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
C301	70795769	2401-001919	C-AL;2.2UF,20%,50V,-,TP,4X7MM,5	
C302	BY130024	2301-000283	C-FILM,PEF;47nF,5%,100V,TP,7.3X7X3.2X5,5	
C303	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C304	70795080	2202-000216	C-CERAMIC,MLC-AXIAL;0.27NF,5%,50V,SL,TP,	
C305	70697011	2202-000164	C-CERAMIC,MLC-AXIAL;18NF,10%,50V,Y5P,TP	
C306	BY130263	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
C307	70795076	2202-000162	C-CERAMIC,MLC-AXIAL;0.15NF,5%,50V,SL,TP,	
C308	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C309	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C310	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C311	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C312	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	V-730EF/730UK/740EG/730EG/720W/710W Only
C313	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	
C314	BY130278	2401-001775	C-AL;470nF,20%,50V,GP,TP,4x7,5	
C315	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C316	BY130167	2202-002055	C-CERAMIC,MLC-AXIAL;47nF,+80-20%,50V,Y5V	

## Replacement Parts List

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
C318	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C320	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C321	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C322	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C323	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C324	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C325	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C326	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C327	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C328	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C329	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C330	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C331	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C332	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C333	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C334	70693249	2202-000807	C-CERAMIC,MLC-AXIAL;22nF,+80-20%,25V,Y5V	
C335	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C336	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C337	70693249	2202-000807	C-CERAMIC,MLC-AXIAL;22nF,+80-20%,25V,Y5V	
C338	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C339	BY130167	2202-002055	C-CERAMIC,MLC-AXIAL;47nF,+80-20%,50V,Y5V	
C340	70693249	2202-000807	C-CERAMIC,MLC-AXIAL;22nF,+80-20%,25V,Y5V	
C341	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C342	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C343	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C345	BY130260	2201-002031	C-CERAMIC,DISC;0.005nF,0.5pF,50V,NP0,TP,	
C346	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C347	BY130173	2202-000286	C-CERAMIC,MLC-AXIAL;56pF,5%,50V,SL,TP,1.	
C348	BY130173	2202-000286	C-CERAMIC,MLC-AXIAL;56pF,5%,50V,SL,TP,1.	
C349	BY130265	2202-000849	C-CERAMIC,MLC-AXIAL;18pF,5%,50V,CH,TP,3.	
C350	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C360	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C380	70795616	2202-000243	C-CERAMIC,MLC-AXIAL;33pF,5%,50V,SL,TP,3.	
C381	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C390	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C399	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3A01	70795626	2401-003122	C-AL;4.7uF,20%,50V,LL,TP,4X7,1.5	
C3A02	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3A04	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3A07	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
C3A08	BY130041	2301-001014	C-FILM,PEF;6.8nF,5%,50V,TP,7x3x6,5mm	
C3A09	BY130041	2301-001014	C-FILM,PEF;6.8nF,5%,50V,TP,7x3x6,5mm	
C3A10	BY130085	2301-000314	C-FILM,PEF;8.2nF,5%,50V,TP,6.5x3.0x5.5mm	
C3A11	70693281	2301-000392	C-FILM,PEF;15nF,5%,50V,TP,6.5x8.5x3.2mm,	
C3A12	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C3A13	BY130269	2301-000161	C-FILM,PEF;12nF,5%,50V,TP,6.5X5.5X3.0X5,	
C3A14	BY130041	2301-001014	C-FILM,PEF;6.8nF,5%,50V,TP,7x3x6,5mm	
C3A15	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
C3A16	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	
C3A17	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C3A18	70795094	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
C3A21	BY130267	2301-000008	C-FILM,PEF;2.2nF,5%,50V,TP,5.5X7X3,5mm	
C3A23	BY130250	2401-002068	C-AL;33uF,20%,16V,GP,TP,5x11,5	
C3A24	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3A25	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C3A29	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3A30	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C3D01	BY130024	2301-000283	C-FILM,PEF;47nF,5%,100V,TP,7.3X7X3.2X5,5	
C3D02	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C3D03	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C3D04	70699067	2301-000445	C-FILM,PEF;4.7nF,5%,50V,TP,5.5x7x3mm,5mm	
C3D05	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
C3S01	70697011	2202-000164	C-CERAMIC,MLC-AXIAL;18NF,10%,50V,Y5P,TP	"EF" Models Only
C3S02	70795769	2401-001919	C-AL;2.2UF,20%,50V,-,TP,4X7MM,5	"EF" Models Only
C3S03	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	"EF" Models Only
C3S04	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	"EF" Models Only
C3S05	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	"EF" Models Only
C3S06	70795363	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	"EF" Models Only
C3S07	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	"EF" Models Only
C3S08	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	"EF" Models Only
C3S09	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	"EF" Models Only
C3S11	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	"EF" Models Only
C3S13	BY130278	2401-001775	C-AL;470nF,20%,50V,GP,TP,4x7,5	"EF" Models Only
C3S14	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	"EF" Models Only
C3S15	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	"EF" Models Only
C3S17	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	"EF" Models Only
C3S19	70795070	2201-000376	C-CERAMIC,DISC;0.22nF,5%,50V,SL,TP,6.3x3	"EF" Models Only
C3S20	BY130082	2301-000224	C-FILM,PEF;22nF,5%,50V,TP,7.4x3.9x13mm,5	"EF" Models Only
C3S21	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	"EF" Models Only

V-730EF/730UK/740EG/730EG/720W/710W Only

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
C3S22	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	"EF" Models Only
C3S23	70693492	2201-000941	C-CERAMIC,DISC;51pF,5%,50V,SL,TP,5x3,5	"EF" Models Only
C3S25	70693215	2202-000787	C-CERAMIC,MLC-AXIAL;10PF,5%,50V,Y5P,TP,3	"EF" Models Only
C3S26	70795729	2201-000681	C-CERAMIC,DISC;0.082nF,5%,50V,SL,TP,5x3,	"EF" Models Only
C3S27	70693237	2202-000825	C-CERAMIC,MLC-AXIAL;680pF,10%,50V,Y5P,TP	"EF" Models Only
C402	70693249	2202-000807	C-CERAMIC,MLC-AXIAL;22nF,+80-20%,25V,Y5V	
C403	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C404	70795123	2401-001085	C-AL;330NF,20%,50V,GP,-,5X9,2MM	
C405	BY130281	2401-003046	C-AL;47uF,20%,50V,WT,TP,6.3x11,2.5	
C407	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C410	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C4N01	70795338	2202-000848	C-CERAMIC,MLC-AXIAL;1.5NF,30%,50V,Y5S,TP	
C4N02	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C4N03	70693317	2202-000806	C-CERAMIC,MLC-AXIAL;220pF,10%,50V,Y5P,TP	
C4N04	BY130274	2401-000661	C-AL;2.2uF,20%,50V,GP,TP,5x11,5	
C4N05	70795585	2301-000383	C-FILM,PEF;10nF,5%,50V,TP,6x7x3.2mm,5mm	
C4N06	70795585	2301-000383	C-FILM,PEF;10nF,5%,50V,TP,6x7x3.2mm,5mm	
C4N07	BY130172	2202-000263	C-CERAMIC,MLC-AXIAL;470pF,10%,50V,Y5P,TP	
C4N08	70795338	2202-000848	C-CERAMIC,MLC-AXIAL;1.5NF,30%,50V,Y5S,TP	
C4N09	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C4N10	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C4N11	BY130279	2401-002062	C-AL;3.3UF,20%,50V,GP,TP,5X11,2.5	
C4N12	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C4N13	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C4N14	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C4N15	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C4N16	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C4N17	BY130172	2202-000263	C-CERAMIC,MLC-AXIAL;470pF,10%,50V,Y5P,TP	
C4N18	BY130172	2202-000263	C-CERAMIC,MLC-AXIAL;470pF,10%,50V,Y5P,TP	
C4N19	70693047	2202-000279	C-CERAMIC,MLC-AXIAL;47pF,5%,50V,SL,TP,3.	
C4N21	BY130261	2201-002069	C-CERAMIC,DISC;1.5pF,0.25pF,50V,NPO,TP,4	
C4N22	BY130261	2201-002069	C CERAMIC,DISC;1.5pF,0.25pF,50V,NPO,TP,4	
C4N23	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C4N24	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C4N25	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C501	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C502	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C503	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C504	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	
C505	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
C506	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C507	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C508	70699067	2301-000445	C-FILM,PEF;4.7nF,5%,50V,TP,5.5x7x3mm,5mm	
C509	BY130270	2301-000423	C-FILM,PEF;3.3NF,5%,100V,TP,7X10X4.5MM,5	
C510	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C511	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C512	BY130266	2202-000863	C-CERAMIC,MLC-AXIAL;560pF,10%,50V,Y5P,TP	
C513	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C514	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C515	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C516	BY130270	2301-000423	C-FILM,PEF;3.3NF,5%,100V,TP,7X10X4.5MM,5	
C517	70699067	2301-000445	C-FILM,PEF;4.7nF,5%,50V,TP,5.5x7x3mm,5mm	
C518	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C519	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
C520	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	
C521	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C522	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C523	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C524	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	
C525	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	
C526	BY130280	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
C527	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C529	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
C530	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C531	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	
C532	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	
C601	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C602	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C603	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5,5mm	
C604	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C605	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C607	BY130278	2401-001775	C-AL;470nF,20%,50V,GP,TP,4x7,5	
C608	BY130131	2401-002259	C-AL;0.1F,+80-20%,5.5V,-,TP,12.5x11	"EF" Models Only
C608	70796210	2401-000118	C-AL;1000uF,20%,10V,GP,TP,10x12.5,5	
C610	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C611	70693281	2301-000392	C-FILM,PEF;15nF,5%,50V,TP,6.5x8.5x3.2mm,	
C612	70796210	2401-000118	C-AL;1000uF,20%,10V,GP,TP,10x12.5,5	
C614	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C618	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5,5mm	

# Replacement Parts List

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
C619	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C620	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C621	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5,5mm	
C622	70693497	2301-000471	C-FILM,PEF;68nF,5%,50V,TP,9x12x4.5mm,5mm	
C623	70693249	2202-000807	C-CERAMIC,MLC-AXIAL;22nF,+80-20%,25V,Y5V	
C624	70795614	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
C625	70795614	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
C626	70795614	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
C627	70795614	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
C628	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C633	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C634	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C635	BY130072	2202-000183	C-CERAMIC,MLC-AXIAL;2.2NF,20%,16V,Y5R,TP	
C636	BY130072	2202-000183	C-CERAMIC,MLC-AXIAL;2.2NF,20%,16V,Y5R,TP	
C637	BY130172	2202-000263	C-CERAMIC,MLC-AXIAL;470pF,10%,50V,Y5P,TP	
C638	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C639	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	
C640	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C641	BY130280	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
C642	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5,5mm	
C643	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5,5mm	
C645	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C646	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C691	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C692	70693497	2301-000471	C-FILM,PEF;68nF,5%,50V,TP,9x12x4.5mm,5mm	
C6B02	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	V-730EF/610EF/730UK/740EG/730EG Only
C6B03	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	V-730EF/610EF/730UK/740EG/730EG Only
C6B04	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	V-730EF/610EF/730UK/740EG/730EG Only
C6B05	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C6B07	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	
C6B08	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	
C6B09	BY130280	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
C6P01	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C6P02	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C6P03	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C6P04	70795080	2202-000216	C-CERAMIC,MLC-AXIAL;.027NF,5%,50V,SL,TP,	
C6P05	70795080	2202-000216	C-CERAMIC,MLC-AXIAL;.027NF,5%,50V,SL,TP,	
C6P06	BY130271	2301-000458	C-FILM,PEF;56nF,5%,50V,TP,8x12x4.5mm,5mm	"EF/UK/EG" Models Only
C6P07	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	"EF/UK/EG" Models Only
C6P08	BY130173	2202-000286	C-CERAMIC,MLC-AXIAL;56pF,5%,50V,SL,TP,1.	
C6P09	BY130170	2202-000145	C-CERAMIC,MLC-AXIAL;.12NF,10%,50V,Y5P,TP	V-510EF/720W/710W Only
C6P10	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C6P11	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C6P12	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C6P13	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C6P14	70693047	2202-000279	C-CERAMIC,MLC-AXIAL;47pF,5%,50V,SL,TP,3.	
C6P20	70693047	2202-000279	C-CERAMIC,MLC-AXIAL;47pF,5%,50V,SL,TP,3.	
C6P20	70795082	2202-000295	C-CERAMIC,MLC-AXIAL;68pF,5%,50V,SL,TP,3.	V-510EF/720W/710W Only
C701	BY130280	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
C702	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C703	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	
C706	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C707	70795626	2401-003122	C-AL;4.7uF,20%,50V,LL,TP,4x7,1.5	
C708	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C711	70795362	2202-000789	C-CERAMIC,MLC-AXIAL;12PF,5%,50V,SL,TP,3.	
C712	70795362	2202-000789	C-CERAMIC,MLC-AXIAL;12PF,5%,50V,SL,TP,3.	
C801	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
C802	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
C803	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
C804	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
C805	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
C806	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
C807	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C808	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C809	70795769	2401-001919	C-AL;2.2UF,20%,50V,-,TP,4X7MM,5	
C810	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	"UK" Models Not used
C811	BY130263	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	"UK" Models Not used
C812	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	"UK" Models Not used
C813	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
C814	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
C815	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
C816	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	"EF" Models Only
C816	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C817	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C818	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C819	BY130280	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
C820	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C821	BY130015	2401-001479	C-AL;470uF,20%,10V,GP,-,TP	
C822	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	



Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
C823	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	"UK" Models Not used
C826	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	
C827	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	
C828	70693047	2202-000279	C-CERAMIC,MLC-AXIAL;47pF,5%,50V,SL,TP,3	
C829	70693047	2202-000279	C-CERAMIC,MLC-AXIAL;47pF,5%,50V,SL,TP,3	"UK" Models Not used
C830	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7.5	
C831	BY130263	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
C832	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7.5	
C833	BY130263	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	"UK" Models Not used
C834	BY130263	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
C837	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	
C838	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	
C840	BY130015	2401-001479	C-AL;470uF,20%,10V,GP,-,-,TP	"UK" Models Not used

**<RESISTORS>**

R1P103	70795019	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R1P105	70795007	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P106	70795036	2001-000613	R-CARBON;3.9KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P107	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P108	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R1P109	70796067	2001-000362	R-CARBON;150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P110	70796067	2001-000362	R-CARBON;150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P111	70795003	2001-000302	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P112	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R1P115	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P116	70795029	2001-000633	R-CARBON;30KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P117	70796067	2001-000362	R-CARBON;150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P119	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R1P121	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P122	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P123	70795007	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P125	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R1P127	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P128	70795013	2001-000241	R-CARBON;1.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P129	BY230106	2001-000938	R-CARBON;680OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P130	BY230019	2001-000221	R-CARBON;1.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R1SD12	70796067	2001-000362	R-CARBON;150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1SD13	70795318	2001-000319	R-CARBON;120KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1SD14	70795318	2001-000319	R-CARBON;120KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1SD15	70795318	2001-000319	R-CARBON;120KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R1SD16	70796274	2003-000273	R-METAL OXIDE;33Kohm,5%,2W,AA,TP,6x16mm	
R1SD31	70795039	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1SD32	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1SF11	70795318	2001-000319	R-CARBON;120KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R1SF15	70795031	2001-000591	R-CARBON;3.3KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1SF19	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1SF20	BY230147	2003-000105	R-METAL OXIDE;0.33ohm,5%,2W,AD,TP,6x16mm	
R1SF21	BY230036	2001-000096	R-CARBON(S);1MOHM,5%,1/2W,AA,TP,2.4X6.4M	"EF" Models Only
R1SS10	BY230170	2006-000262	R-CEMENT;2.7ohm,10%,2W,CB,TP,7.5x11x20.	
R1SS11	70796274	2003-000273	R-METAL OXIDE;33Kohm,5%,2W,AA,TP,6x16mm	
R1SS13	BY230003	2003-000148	R-METAL OXIDE;100OHM,5%,2W,AE,TP,6X16MM	
R1SS31	70795009	2001-000440	R-CARBON;1OHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R1SS32	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1SS33	70795640	2004-000869	R-METAL;3Kohm,1%,1/8W,AA,TP,1.8x3.2mm	
R1SS34	70795638	2004-000459	R-METAL;2.2Kohm,1%,1/8W,AA,TP,1.8x3.2m	
R301	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R302	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R303	70795357	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R304	70795058	2001-000977	R-CARBON;8.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R305	70795357	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R306	70795012	2001-000232	R-CARBON;1.3KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R308	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R309	BY230037	2001-000723	R-CARBON;4.3KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R311	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R312	70795013	2001-000241	R-CARBON;1.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R313	70795019	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R314	70795050	2001-000924	R-CARBON;680OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R315	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R316	BY230019	2001-000221	R-CARBON;1.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R317	70795030	2001-000003	R-CARBON;330ohm,5%,1/8W,AA,TP,1.8x3.2mm	
R318	70795030	2001-000003	R-CARBON;330ohm,5%,1/8W,AA,TP,1.8x3.2mm	
R320	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R321	BY230096	2001-000009	R-CARBON;20KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R322	70795319	2001-000539	R-CARBON;24KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R325	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R326	70795043	2001-000832	R-CARBON;510OHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R327	70795043	2001-000832	R-CARBON;510OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R328	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R329	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
R330	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R331	70795019	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R332	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R333	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R334	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R335	70795044	2001-000800	R-CARBON;5.1KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R336	70795014	2001-000008	R-CARBON;15KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R341	70795059	2001-001000	R-CARBON;82KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R342	70795046	2001-000802	R-CARBON;5.6Kohm,5%,1/8W,AA,TP,1.8x3.2m	
R344	70795054	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	V-730EF/730UK/740EG/730EG/720W/710W Only
R347	70795049	2001-000904	R-CARBON;620OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R348	70795609	2001-000605	R-CARBON;3.6KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A01	70795011	2001-000331	R-CARBON;12KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A04	70795012	2001-000232	R-CARBON;1.3KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A05	70795032	2001-000660	R-CARBON;33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A06	70795607	2001-000405	R-CARBON;180OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A07	70795033	2001-000645	R-CARBON;330KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A08	70795011	2001-000331	R-CARBON;12KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A09	70795046	2001-000802	R-CARBON;5.6Kohm,5%,1/8W,AA,TP,1.8x3.2m	
R3A10	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A11	70795357	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A12	70796025	2001-000458	R-CARBON;2.20HM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A13	70795039	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A14	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A16	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A17	70795036	2001-000613	R-CARBON;3.9KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A18	70795036	2001-000613	R-CARBON;3.9KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A19	70795607	2001-000405	R-CARBON;180OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A21	70795049	2001-000904	R-CARBON;620OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A22	BY230037	2001-000723	R-CARBON;4.3KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A23	70795058	2001-000977	R-CARBON;8.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A24	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A25	BY230019	2001-000221	R-CARBON;1.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A26	70795011	2001-000331	R-CARBON;12KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A28	70795013	2001-000241	R-CARBON;1.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A30	70795354	2001-000773	R-CARBON;470KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A37	70795055	2001-000947	R-CARBON;7.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3D01	70796129	2001-000793	R-CARBON;470HM,5%,1/8W,AA,TP,1.8X3.2MM	
R3D02	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3D03	70795042	2001-000745	R-CARBON;4.70HM,5%,1/8W,AA,TP,1.8X3.2MM	
R3S01	70795319	2001-000539	R-CARBON;24KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S02	70795058	2001-000977	R-CARBON;8.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S03	70795663	2001-001015	R-CARBON;9.1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S04	70795319	2001-000539	R-CARBON;24KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S05	70795041	2001-000786	R-CARBON;47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S11	70795045	2001-000837	R-CARBON;51KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S12	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S13	70795029	2001-000633	R-CARBON;30KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S14	70795051	2001-000890	R-CARBON;6.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S15	70795055	2001-000947	R-CARBON;7.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S16	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S17	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S20	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S21	70795034	2001-000674	R-CARBON;360OHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S22	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S23	70795319	2001-000539	R-CARBON;24KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S24	70795015	2001-000356	R-CARBON;150KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S25	70795357	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S27	70795318	2001-000319	R-CARBON;120KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R401	70795041	2001-000786	R-CARBON;47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R402	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R403	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R404	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R406	70795026	2001-000563	R-CARBON;27KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R407	70795058	2001-000977	R-CARBON;8.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R408	BY230019	2001-000221	R-CARBON;1.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R4N01	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R4N02	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R4N03	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R4N04	70795026	2001-000563	R-CARBON;27KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R4N05	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R4N06	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R501	70795038	2001-000766	R-CARBON;43KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R502	70795663	2001-001015	R-CARBON;9.1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R503	70795039	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R504	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R505	70795038	2001-000766	R-CARBON;43KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R506	70795663	2001-001015	R-CARBON;9.1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R507	70795038	2001-000766	R-CARBON;43KOHM,5%,1/8W,AA,TP,1.8X3.2MM	V-730EF/730UK/740EG/730EG/720W/710W Only

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
R508	70795447	2001-000878	R-CARBON;6.2KOHM,5%,1/8W,AA,TP,	V-730EF/730UK/740EG/730EG/720W/710W Only
R509	70795447	2001-000878	R-CARBON;6.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R510	70795038	2001-000766	R-CARBON;43KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R511	70795011	2001-000331	R-CARBON;12KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R512	70795032	2001-000660	R-CARBON;33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R514	70795041	2001-000786	R-CARBON;47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R516	70795041	2001-000786	R-CARBON;47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R517	70795447	2001-000878	R-CARBON;6.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R518	70795038	2001-000766	R-CARBON;43KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R519	70795447	2001-000878	R-CARBON;6.2KOHM,5%,1/8W,AA,TP,	V-730EF/730UK/740EG/730EG/720W/710W Only
R520	70795038	2001-000766	R-CARBON;43KOHM,5%,1/8W,AA,TP,	V-730EF/730UK/740EG/730EG/720W/710W Only
R521	70795447	2001-000878	R-CARBON;6.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R522	70795447	2001-000878	R-CARBON;6.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R523	70795022	2001-000508	R-CARBON;220KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R524	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R525	70795506	2001-000577	R-CARBON;2KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R533	70795038	2001-000766	R-CARBON;43KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R540	70795038	2001-000766	R-CARBON;43KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R570	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R571	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R602	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R603	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R603	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R604	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R605	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"UK/EG/W" Models Only
R608	70795047	2001-000864	R-CARBON;56KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R609	70795047	2001-000864	R-CARBON;56KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R613	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R641	70795039	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R642	70795039	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R644	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R650	70796369	2003-000259	R-METAL OXIDE;3.90HM,5%,2W,AE,TP,6X16MM	
R651	70795052	2001-000010	R-CARBON;68KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R652	70795024	2001-000568	R-CARBON;27OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R654	70795046	2001-000802	R-CARBON;5.6Kohm,5%,1/8W,AA,TP,1.8x3.2m	
R655	70795041	2001-000786	R-CARBON;47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R656	70795013	2001-000241	R-CARBON;1.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R657	70795052	2001-000010	R-CARBON;68KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R660	70795041	2001-000786	R-CARBON;47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R661	70795032	2001-000660	R-CARBON;33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R666	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R667	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R668	70795039	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R669	70795039	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R670	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R671	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R672	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R673	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R674	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R675	70795607	2001-000405	R-CARBON;180OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R676	70795029	2001-000633	R-CARBON;30KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R677	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R678	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R679	70795019	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R682	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R685	70795032	2001-000660	R-CARBON;33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R687	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R690	70795047	2001-000864	R-CARBON;56KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R691	70795019	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R692	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R693	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R694	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R6B01	70796024	2001-000384	R-CARBON;160OHM,5%,1/8W,AA,TP,	V-730EF/610EF/730UK/740EG/730EG Only
R6B02	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,	V-730EF/610EF/730UK/740EG/730EG Only
R6B03	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,	V-730EF/610EF/730UK/740EG/730EG Only
R6B10	70796067	2001-000362	R-CARBON;150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R6B11	70796067	2001-000362	R-CARBON;150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R6P01	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	V-510EF/720W/710W Not used
R6P02	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	V-510EF/720W/710W Not used
R6P03	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	V-510EF/720W/710W Not used
R6P04	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	V-510EF/720W/710W Not used
R6P05	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R6P06	70795046	2001-000802	R-CARBON;5.6Kohm,5%,1/8W,AA,TP,1.8x3.2m	V-510EF/720W/710W Not used
R6P07	70796356	2001-000490	R-CARBON;200OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R6P08	70795028	2001-000007	R-CARBON;3KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R6P09	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	V-510EF/720W/710W Only
R6P10	70795019	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R6P11	BY230090	2001-000005	R-CARBON;390ohm,5%,1/8W,AA,TP,1.8x3.2mm	
R706	70795029	2001-000633	R-CARBON;30KOHM,5%,1/8W,AA,TP,1.8X3.2MM	

## Replacement Parts List

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
R707	70795013	2001-000241	R-CARBON;1.5KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R708	70795026	2001-000563	R-CARBON;27KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R709	70795019	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R710	70795008	2001-000435	R-CARBON;1MOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R727	70795014	2001-000008	R-CARBON;15KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R728	70795014	2001-000008	R-CARBON;15KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R731	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R732	BY230100	2001-000666	R-CARBON;330OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R801	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R802	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R803	70795057	2001-000995	R-CARBON;820OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R805	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R806	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R807	70795054	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R808	70795054	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R809	70795054	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	"UK" Models Not used
R810	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R811	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R812	70795054	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R813	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R814	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R815	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R816	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R819	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	"UK" Models Not used
R820	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	"UK" Models Not used
R821	70795032	2001-000660	R-CARBON;33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R822	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R823	70795026	2001-000563	R-CARBON;27KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R824	70795026	2001-000563	R-CARBON;27KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
S601	BY530003	0603-001011	PHOTO-TR;NPN,35V,6V,50mA,75mW,BK	
S602	BY530003	0603-001011	PHOTO-TR;NPN,35V,6V,50mA,75mW,BK	
W229	70795609	2001-000605	R-CARBON;3.6KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
W421	70795004	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,	V-730EF/730UK/740EG/730EG/720W/710W Only
<b>&lt;MISCELLANEOUS&gt;</b>				
CN1SS1	70796223	3711-000178	CONNECTOR-HEADER;1WALL,2P,1R,3.96mm,STRA	
CN301	70796387	3708-000391	CONNECTOR-FPC/FC/PIC;10P,1.25MM,STRAIGHT	
CN3A01	BY634038	3708-001302	CONNECTOR-FPC/FC/PIC;7P,1.25mm,STRAIGHT,	
CN3A02	70796246	3711-002445	CONNECTOR-HEADER;BOX,2P,2R,1.5MM,STRAIGH	
CN4N01	BY634116	3711-003176	CONNECTOR-HEADER;NOWALL,10P,1R,2.5mm,ANG	
CN601	BY634047	AC39-20817S	LEAD CONNECTOR-ASSY;DP,SMH200-02,YBH200-	
CN602	BY634003	3708-001163	CONNECTOR-FPC/FC/PIC;5P,1.25mm,STRAIGHT,	
CN604	BY634026	3711-003749	CONNECTOR-HEADER;BOX,8P,2R,2mm,STRAIGHT,	
CN701	70795274	3711-001198	CONNECTOR-HEADER;NOWALL,10P,1R,2mm,ANGLE	
CN702	70795274	3711-001198	CONNECTOR-HEADER;NOWALL,10P,1R,2mm,ANGLE	
CN704	BY634040	3711-004013	CONNECTOR-HEADER;3WALL,10P,1R,2mm	V-730EF/730UK/740EG/730EG/720W/710W Only
CN705	BY634039	3710-001385	CONNECTOR-SOCKET;10P,1R,2mm,ANGLE,SN	
DT701	BY634119	AC07-20051C	VF-DISPLAY;SVV-07SS27,15SEG,20.5X75.0,SV	
F1SS01	BY634268	3601-001208	FUSE-CARTRIDGE;250V,1.6A,TIME-LAG,GLASS	△
JC801	BY634117	3722-001093	JACK-RCA;42P,3.81MM,SN,BLU/BLK,#20-28	
JC802	BY634121	AC37-22002E	JACK-PIN;3.5MM,DPAE9634,2P,TR,-	
JK701	BY634045	AC37-22002H	JACK-PIN;3.2mm,DPSE-9826,3P,10mm,ARREY	
PT1SS1	BY634271	AC26-00001L	TRANS-SWITCHING;-,-,-,230V,DEMCO,EE2821,	△
PT601	BY530005	0604-001122	PHOTO-INTERRUPTER;TR,0.065%,150mW,DIP-4,	
PT602	BY530005	0604-001122	PHOTO-INTERRUPTER;TR,0.065%,150mW,DIP-4,	
RM701	BY634036	AC59-60060A	MODULE-REMOCON;GP1U281R,SHARP,38KHZ,-,-,	
SW601	BY632004	AC34-20100A	SWITCH-MODE;-,-,X-9,-	
SW602	BY632005	AC34-20100B	SWITCH-REC;-,-,X-9,-	
SW701	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW703	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW708	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW709	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW712	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW714	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW715	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW716	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW719	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW720	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW721	70795181	3404-001008	SWITCH-TACT;12V,20mA,160+-50,6x7.9x3.5mm	
SW801	BY632010	3404-000135	SWITCH-TACT;12V,50mA,160+-50gf,7.4x7.1mm	
TM401	BY630052	AC40-30072F	TM-BLOCK;TCMM0601PD08A,SECAM-L/G/I/K,181	"EF" Models Only
TM401	BY630053	AC40-30072H	TM-BLOCK;TCMK0601PD08A,PAL-BG/I/DK,HI-F	"UK/EG/W" Models Only
VA1SS1	BY634022	1405-001026	VARIATOR;470V,600A,9x7mm,TP	△
XT301	BY633009	2801-001397	CRYSTAL-UNIT;4.433619MHZ,HC-49/U-S 15PPM	
XT4N01	BY633011	2801-003171	CRYSTAL-UNIT;18.432MHz,20PPM,28-AAM,4PF,	
XT601	BY633003	2801-003318	CRYSTAL-UNIT;32.768KHz,20ppm,28-AAP,12.5	
XT602	BY633010	2801-003139	CRYSTAL-UNIT;8MHz,50ppm,28-AAA,22pf,80oh	
XT701	BY633014	2801-003868	CRYSTAL-UNIT;5MHz,30ppm,28-AAA,12pf,100o	

## 7-2 MONO Models (V-430EF/230EF/220EF/430YK/230UK/220UK/210UK/430EG/230EG/210EG/420W/410W/220W/210W)

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
<b>- PACKING PARTS -</b>				
A701	BY730586	AC69-00067D	PACKING-CASE;V-430EF,-,-,-,SW2+YEL,-,-	V-430EF
	BY730587	AC69-00067E	PACKING-CASE;V-230EF,-,-,-,SW2+YEL,-,-	V-230EF
	BY730467	AC69-00067F	PACKING-CASE;V-220EF,-,-,-,SW2+YEL,-,-	V-220EF
	BY730575	AC69-00042B	PACKING CASE;V-430UK,-,-,428,150,YEL,-,-	V-430UK
	BY730576	AC69-00042C	PACKING CASE;V-230UK,-,-,428,150,YEL,-,-	V-230UK
	BY730577	AC69-00042D	PACKING CASE;V-220UK,-,-,428,150,YEL,-,-	V-220UK
	BY730578	AC69-00042E	PACKING CASE;V-210UK,-,-,428,150,YEL,-,-	V-210UK
	BY730579	AC69-00042F	PACKING CASE;V-430EG,-,-,428,150,YEL,-,-	V-430EG
	BY730580	AC69-00042G	PACKING CASE;V-230EG,-,-,428,150,YEL,-,-	V-230EG
	BY730581	AC69-00042H	PACKING CASE;V-210EG,-,-,428,150,YEL,-,-	V-210EG
	BY730584	AC69-00042L	PACKING CASE;V-420W,-,-,428,150,YEL,-,-	V-420W
	BY730582	AC69-00042J	PACKING CASE;V-410W,-,-,428,150,YEL,-,-	V-410W
	BY730585	AC69-00042M	PACKING CASE;V-220W,-,-,428,150,YEL,-,-	V-220W
	BY730583	AC69-00042K	PACKING CASE;V-210W,-,-,428,150,YEL,-,-	V-210W
A702	BY730464	AC69-00041A	CUSHION-F/B;M-656/TSB,EPS,-,-,-,-	"EF" Models Only
	BY730125	AC69-20362A	CUSHION-F/B;M-685,EPS 58,-,-,-,-,M-685	"UK/EG/W" Models Only
UT01	BY634317	AC59-00015M	REMOCON-ASSY;-VT-430EF(70148447),-,-,V-	V-430EF
	BY634277	AC59-00015N	REMOCON-ASSY;-VT-230EF(70148448),-,-,V-	V-230EF/220EF
	BY634312	AC59-00015C	REMOCON-ASSY;-VT-430UK(70148441),-,-,V-	V-430UK/230UK
	BY634313	AC59-00015D	REMOCON-ASSY;-VT-220UK(70148442),-,-,V-	V-220UK
	BY634314	AC59-00015E	REMOCON-ASSY;-VT-210UK(70148443),-,-,V-	V-210UK
	BY634315	AC59-00015G	REMOCON-ASSY;-VT-430EG(70148437),-,-,V-	V-430EG/230EG
	BY634316	AC59-00015H	REMOCON-ASSY;-VT-210EG(70148438),-,-,V-	V-210EG
	BY634318	AC59-00015Q	REMOCON-ASSY;-VT-410W(70148450),-,-,V-4	V-420W/410W
	BY634319	AC59-00015R	REMOCON-ASSY;-VT-210W(70148451),-,-,V-2	V-220W/210W
Y101	BY634303	AC68-00642A	MANUAL USERS;V-230EF/TSB,-,-,-,-,-	V-430EF/230EF
	BY634281	AC68-00643A	MANUAL USERS;V-220EF/TSB,-,-,-,-,-	V-220EF
	BY634304	AC68-00650A	MANUAL USERS;V-430UK/TSB,-,-,-,-,-	V-430UK/230UK
	BY634301	AC68-00661A	MANUAL USERS;V-220UK/TSB,-,-,-,-,-	V-220UK
	BY634305	AC68-00653A	MANUAL USERS;V-210UK/TSB,-,-,-,-,-	V-210UK
	BY634306	AC68-00656A	MANUAL USERS;V-430EG/TSB,-,-,-,-,-	V-430EG/230EG
	BY634307	AC68-00658A	MANUAL USERS;V-210EG/TSB,-,-,-,-,-	V-210EG
	BY634309	AC68-00667A	MANUAL USERS;V-410W/TSB,ENG+ITA,-,-,-,-	V-420W/410W
	BY634310	AC68-00668A	MANUAL USERS;V-210W/TSB,ENG+ITA,-,-,-,-	V-220W/210W
Y102	BY634308	AC68-00664A	MANUAL USERS;V-410W/TSB,RUSIA+SPA,-,-,-,-	V-410W
	BY634311	AC68-00671A	MANUAL USERS;V-210W/TSB,RUSIA+SPA,-,-,-,-	V-210W
Y103	BY634253	AC39-00017A	CABLE-ETC-RF(PAL);-,MALE/FEMALE,1200MM,R	ALL Models
<b>- INSTRUMENT PARTS -</b>				
1	BY730549	AC97-00672A	ASSY-PANEL FRONT;V-430EF,HIPS 94HB,-	V-430EF
	BY730550	AC97-00673A	ASSY-PANEL FRONT;V-230EF,HIPS 94HB,-	V-230EF
	BY730472	AC97-00674A	ASSY-PANEL FRONT;V-220EF,HIPS 94HB,-	V-220EF
	BY730551	AC97-00685A	ASSY-PANEL FRONT;V-430UK/TSB,HIPS94HB,GR	V-430UK
	BY730552	AC97-00685B	ASSY-PANEL FRONT;V-230UK/TSB,HIPS94HB,GR	V-230UK
	BY730553	AC97-00685C	ASSY-PANEL FRONT;V-220UK/TSB,HIPS94HB,GR	V-220UK
	BY730554	AC97-00685D	ASSY-PANEL FRONT;V-210UK/TSB,HIPS94HB,GR	V-210UK
	BY730555	AC97-00685E	ASSY-PANEL FRONT;V-430EG/TSB,HIPS94HB,87	V-430EG
	BY730556	AC97-00685F	ASSY-PANEL FRONT;V-230EG/TSB,HIPS94HB,87	V-230EG
	BY730557	AC97-00685G	ASSY-PANEL FRONT;V-210EG/TSB,HIPS94HB,87	V-210EG
	BY730560	AC97-00685N	ASSY-PANEL FRONT;HIPS94HB,V-420W/TSB,874	V-420W
	BY730558	AC97-00685H	ASSY-PANEL FRONT;V-410W/TSB,HIPS94HB,GRA	V-410W
	BY730561	AC97-00685P	ASSY-PANEL FRONT;HIPS94HB,V-220W/TSB,87	V-220W
	BY730559	AC97-00685J	ASSY-PANEL FRONT;V-210W/TSB,HIPS94HB,GRA	V-210W
21	BY730562	AC64-00135H	DOOR-CASSETTE;-ABS94HB BRN,-,-,-,SILVER	V-430EF
	BY730563	AC64-00135J	DOOR-CASSETTE;-ABS94HB BRN,-,-,-,SILVER	V-230EF
	BY730461	AC64-00135K	DOOR-CASSETTE;-ABS94HB BRN,-,-,-,SILVER	V-220EF
	BY730568	AC64-52175T	DOOR-CASSETTE;-ABS94HB,-,T2.5,-,BLK,-,V	V-430UK
	BY730569	AC64-52175U	DOOR-CASSETTE;-ABS94HB,-,T2.5,-,BLK,-,V	V-230UK
	BY730570	AC64-52175V	DOOR-CASSETTE;-ABS94HB,-,T2.5,-,BLK,-,V	V-220UK
	BY730571	AC64-52175W	DOOR-CASSETTE;-ABS94HB,-,T2.5,-,BLK,-,V	V-210UK
	BY730572	AC64-52175X	DOOR-CASSETTE;-ABS94HB,-,T2.5,-,BLK,-,V	V-430EG
	BY730573	AC64-52175Y	DOOR-CASSETTE;-ABS94HB,-,T2.5,-,BLK,-,V	V-230EG
	BY730574	AC64-52175Z	DOOR-CASSETTE;-ABS94HB,-,T2.5,-,BLK,-,V	V-210EG
	BY730566	AC64-00310F	DOOR-CASSETTE;-ABS94HB,-,T2.5,-,BLK,-,V	V-420W
	BY730564	AC64-00310A	DOOR-CASSETTE;-ABS94HB,-,T2.5,-,BLK,-,V	V-410W
	BY730567	AC64-00310G	DOOR-CASSETTE;-ABS94HB,-,T2.5,-,BLK,-,V	V-220W
	BY730565	AC64-00310B	DOOR-CASSETTE;-ABS94HB,-,T2.5,-,BLK,-,V	V-210W
22	BY730093	AC61-62032A	SPRING-MASK;X-9,-,SUS,-,4.4,-,SV-C130	ALL Models
101	BY730313	AC64-30899C	CABINET-TOP-ASSY;-PCM(SECC),-.0.525,380	V-430EF/230EF/220EF
	BY730312	AC64-30899B	CABINET-TOP;V-629G/TSB,PCM MD552,SECC,T0	V-430UK/230UK/220UK/210UK
	BY730314	AC64-30899D	CABINET-TOP-ASSY;-PCM(SECC),-.0.525,380	V-430EG/230EG/210EG
	BY730314	AC64-30899D	CABINET-TOP-ASSY;-PCM(SECC),-.0.525,380	V-420W/220W
	BY730312	AC64-30899B	CABINET-TOP;V-629G/TSB,PCM MD552,SECC,T0	V-410W/210W
102	BY730280	AC63-32128A	COVER-BOTTOM;SV-C140F,SECC,387.7X197.6,T	ALL Models

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
153	70790218	AC60-12126A	SCREW-BH;-BH,-,4*12,FE,FZY,-,-	ALL Models
155	70790082	AC60-12134A	SCREW-TAP BH;-BH,-,2-4X16,-,FE	ALL Models
156	BY730204	AC60-00001A	SCREW-MACHINE;-BH,-,4X12,M4,L12,BLK,SMC	ALL Models
157	70790002	AC60-10063A	SCREW-TAPTITE;BH,-,M3,L12,ZPC3,SWRCH18	ALL Models
200	BY634124	AC39-10019A	POWER CORD;KKP-419C,H03VVH2-F,VDE/KEMA-K	"EF/EG/W" MODEL Only
	BY634126	AC39-12022K	POWER-CORD;Y352160,H03VVH2-F,-,BS6500,1.	"UK" MODEL Only
CN3A1S	BY634118	3809-001111	CABLE-FLAT;30V,80C,130mm,7P,1.25mm,UL289	ALL Models
CN602A	BY634007	3809-001049	CABLE-FLAT;30V,80C,100MM,5P,1.25MM,UL289	ALL Models
LD601S	BY730082	AC61-21009A	HOLDER-LED;-POM(M90-44)-,BLK,-,X-9	ALL Models
S601S	BY730080	AC61-21008A	HOLDER-SENSOR;-POM(M90-44)-,BLK,-,X-9	ALL Models
S602S	BY730080	AC61-21008A	HOLDER-SENSOR;-POM(M90-44)-,BLK,-,X-9	ALL Models
TM401B	BY730222	AC61-11061D	CONNECTOR BOARD-ASSY;V-629B/TSB,HIPS94,H	V-430EF/230EF/220EF
	BY730224	AC61-11061F	CONNECTOR BOARD-ASSY;V-429B/TSB,HIPS94,H	V-430UK/230UK,220UK
	BY730225	AC61-11061G	CONNECTOR BOARD-ASSY;V-209B/TSB,HIPS94,H	V-210UK
	BY730223	AC61-11061E	CONNECTOR BOARD-ASSY;V-429G/TSB,HIPS94,H	V-430EG/230EG/210EG
	BY730223	AC61-11061E	CONNECTOR BOARD-ASSY;V-429G/TSB,HIPS94,H	V-420W/410W
	BY730225	AC61-11061G	CONNECTOR BOARD-ASSY;V-209B/TSB,HIPS94,H	V-220W/210W

## - MECHANICAL PARTS -

B238	BY730087	AC61-50660A	SLEEVE-TENSION;-POM M90-44,-,ID3,-,-	
B239	BY730234	AC61-21004A	CAP-#8 GUIDE;-POM M90-44,-,NTR,-,X-9	
B257	BY730247	AC61-50661A	POST-MAIN PCB;-POM M90-44,-,NTR,-,X-9	
B258	BY730266	AC61-50684A	GUIDE-MAIN PCB;-POM,OD7,L20,-,BLACK,X-9	
B410	BY730456	AC31-12016D	MOTOR-LOADING ASSY;-SNHNE,-,-	
B440	BY730072	AC60-10515A	SCREW-MACHINE;-PH,-,M3,L3,ZPC,-,YEL	
B444	BY730104	AC66-20571A	GEAR-WORM;-POM SW-01,0.5,2,-,4.5,X-9	
B446	BY730079	AC61-21005A	HOLDER-WORM;-POM M90-44,-,X-9	
B448	BY730105	AC66-20573A	GEAR-WORM WHEEL;-POM SW-01,0.6,11,-,6.6	
B452	BY730107	AC66-20575A	GEAR-FL CAM;-POM SW-01,M0.6,Z88,-,PCD58	
B456	BY730108	AC66-20576A	GEAR-JOINT 1;-POM SW-01,M1.0,Z22,-,PCD2	
B458	BY730106	AC66-20574A	GEAR-JOINT 2;-POM SW-01,M1.0,Z14,-,PCD1	
B460	BY730447	AC61-11045A	BRACKET-GEAR;-SECC20/20,-,T1.2,-,X-9	
B462	BY730073	AC60-10517A	SCREW-TAP TITE;-PH,-,M2.6,L5,ZPC,-,YE	
B464	BY730381	AC66-80140A	SLIDER-CAM;-SECC20/20,T1.2,-,X-9	
B468	BY730450	AC66-30541A	LEVER-PINCH DR ASSY;-,-,-,X-9	
B473	BY730090	AC61-60559A	SPRING-PINCH DRIVE;-TS,SUS304,PI0.5,OD4	
B474	BY730244	AC61-30180A	PLATE-JOINT;-SECC20/20,T0.8,-,X-9	
B478	BY730449	AC66-30540A	LEVER-TENS DR ASSY;-,-,-,X-9	
B484	BY730110	AC66-20580A	GEAR-LOADING DRIVE;-POM SW-01,M1.0,Z32,	
B488	BY730117	AC66-30543A	LEVER-S LOAD ASSY;-,-,-,X-9	
B500	BY730116	AC66-30542A	LEVER-T LOAD ASSY;-,-,-,X-9	
B560	BY730455	AC31-00005A	MOTOR-CAPSTAN;-F2QSB02,-,-	
B570	BY730071	AC60-10514A	SCREW-CAPSTAN;-PH,-,M2.6,L6,-	
G001	BY730548	AC97-00564A	ASSY-CYLINDER;CX-9T,SECAM,4HD	V-430EF
	BY730470	AC97-00547A	ASSY-CYLINDER;CX-9T,PAL,2HD	V-230EF/220EF
	BY730546	AC97-00549A	ASSY-CYLINDER;CX-9T,PAL,4HD	V-430UK/430EG/420W/410W
	BY730547	AC97-00555A	ASSY-CYLINDER;CX-9T,PAL,2HD(LP)	V-230UK/220UK/210UK/230EG/210EG/220W/210W
G420	BY730124	AC66-80142A	SLIDER-SUPPLY ASSY;-X-9(TS)-,-,X-9	
G428	BY730451	AC66-40153A	ROLLER-SUPPLY ASSY;-VW-32,OD7,-,X-9	
G450	BY730123	AC66-80141A	SLIDER-TAKE UP ASSY;-X-9(TS)-,-,X-9	
G458	BY730452	AC66-40154A	ROLLER-TAKE UP ASSY;-VW-32,OD7,-,X-9	
G480	BY730052	AC33-00003A	HEAD-ACE-ASSY;SHINHEUNG,-,-,X-9	
G510	BY730479	6006-001075	SCREW-ASS'Y TAPT;WSP,PH,-,M2.6,L5.0,ZPC	
G520	BY730115	AC66-30539A	LEVER-#9 GUIDE ASSY;-X-9(TS)-,-,X-9	
G527	BY730088	AC61-60553A	SPRING-#9 GUIDE;-ES,SUS304-WPB,OD3.1,0.	
G530	BY730053	AC33-00002A	HEAD-FE;-HVHFP0038A,-,-,X-9	
G532	BY730075	AC60-10519A	SCREW-TAP TITE;-PH,-,M2.6,L8,ZPC	
G542	BY730122	AC66-60051A	BELT-PULLEY;-5CM-70.2 * 2,-,71.3,-,X-9	
G546	BY730113	AC66-30535A	LEVER-FL DOOR;-POM M90-44,-,BLK,X-9	
G555	BY730070	AC59-90403A	UNIT-PINCH ASSY;X-9,-	
G680	BY730372	AC66-30557A	LEVER-H/CLEANER ASSY;-POM+URETHANE,-,-	
K110	BY730102	AC66-10267A	REEL-DISK S;-POM M90-44,-,X-9	
K140	BY730103	AC66-10268A	REEL-DISK T;-POM M90-44,-,X-9	
K180	BY730369	AC66-30548A	LEVER-IDLER ASSY;-POM+NYLON,-,-,X-9	
K182	BY730112	AC66-30524A	LEVER-IDLER;-POM9044,-,-	
K188	BY730109	AC66-20577A	GEAR-IDLER;-PEBAX 7033,-,-,X-9	
K200	BY730084	AC61-21012A	HOLDER-CLUTCH ASSY;-,-,-,X-9	
K221	BY730111	AC66-20581A	GEAR-CENTER ASSY;-POM,M=0.5,-,HIGHT T.,	
K222	BY730076	AC60-30306A	WASHER-SLIT;-ID2.1,OD5.0,T0.5,-,POLYS	
K225	BY730119	AC66-30547A	LEVER-UP DOWN ASSY;-POM+SUS,-,-,X-9	
K240	BY730114	AC66-30538A	LEVER-TENSION ASSY;-X-9(TS)-,-,X-9	
K248	BY730089	AC61-60554A	SPRING-TENSION LEVER;-ES,SUS304-WPB,OD3	
K250	BY730094	AC63-12029A	BAND-BRAKE ASSY;-X-9(TS)-,-,X-9	
K330	BY730121	AC66-30550A	LEVER-S BRAKE ASSY;-POM+SUS,-,-,X-9	
K340	BY730120	AC66-30549A	LEVER-T BRAKE ASSY;-POM+SUS,-,-,X-9	
K350	BY730092	AC61-60564A	SPRING-BRAKE;-TENSION,SWP-A,0.25,3,-,X-	
K470	BY730454	AC66-80139A	SLIDER-FL DRIVE;-SECC E20/20,T1.2,-,X	
K490	BY730083	AC61-21010B	HOLDER-CASS ASSY;-SECC+POM+SUS,-,-,SEIN	
K502	BY730091	AC61-60561A	SPRING-FL LEVER-LR;-ES,SUS304 WPB,PI2.7	

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
K530	BY730118	AC66-30546A	LEVER-FL.ARM ASS'Y,-,SECC+POM+SUS,-,-,-,	
K546	BY730086	AC61-50658A	GUIDE-CASS. DOOR;-,-,POM M90-44,-,-,NTR,-,-,	
<b>- ELECTRICAL PARTS -</b>				
601	BY630116	AC92-00308A	ASSY-PCB-MAIN;V-430EF/TSB,MONO	V-430EF
	BY630127	AC92-00555A	ASSY-PCB-MAIN;V-230EF/TSB,MONO	V-230EF
	BY630089	AC92-00309A	ASSY-PCB-MAIN;V-220EF/TSB,MONO	V-220EF
	BY630119	AC92-00315A	ASSY-PCB-MAIN;V-430UK/TSB,MONO	V-430UK
	BY630120	AC92-00316A	ASSY-PCB-MAIN;V-230UK/TSB,MONO	V-230UK/220UK
	BY630121	AC92-00317A	ASSY-PCB-MAIN;V-210UK/TSB,MONO	V-210UK
	BY630124	AC92-00320A	ASSY-PCB-MAIN;V-430EG/TSB,MONO	V-430EG
	BY630123	AC92-00319A	ASSY-PCB-MAIN;V-230EG/TSB,MONO	V-230EG
	BY630122	AC92-00318A	ASSY-PCB-MAIN;V-210EG/TSB,MONO	V-210EG
	BY630117	AC92-00311A	ASSY-PCB-MAIN;V-410W/TSB,MONO	V-420W/410W
	BY630118	AC92-00312A	ASSY-PCB-MAIN;V-210W/TSB,MONO	V-220W/210W
701	BY630126	AC92-00430A	ASSY-PCB-VFD-AVLINK;V-430EF/TSB,VFD AVLI	V-430EF/230EF
	BY630090	AC92-00324A	ASSY-PCB-VFD-Only;V-610EF/TSB,VFD-Only	V-220EF
	BY630099	AC92-00325A	ASSY-PCB-VFD-AVLINK;V-730EF/TSB,VFD-AVLI	V-430UK/230UK/220UK/430EG/230EG
	BY630113	AC92-00509A	ASSY-PCB-VFD;V-510EF,V-720UK,VFD-Only,TS	V-210UK/210EG/420W/410W/220W/210W
702	BY630125	AC92-00429A	ASSY-PCB-F/AV-MONO;V-430EF/TSB,F/AV MONO	V-430EF/230EF
	BY630065	AC92-00033A	ASSY-OPT PCB-MAIN;CBC FRONT,TSB PAL COBR	V-430UK/230UK/220UK/430EG/230EG
	BY630079	AC92-00101A	ASSY-PCB-SUB;V-429F/TSB,CBC3	V-420W/410W/220W/210W
<b>&lt;INTERGATED CIRCUITS&gt;</b>				
IC1SF1	BY631087	1203-001802	IC-PWM CONTROLLER;STR-G6551,TO-220F,5P,-	
IC1SS1	BY530004	0604-001028	PHOTO-COUPLER;TR,50-600%,250mW,DIP-4,ST	
IC1SS2	BY631008	AC14-12006D	IC;KA431Z,TO-92,TAPING	△
IC301	BY631049	1204-001649	IC-VIDEO PROCESS;LA71598M,QFP,100P,-,PLA	
IC3S01	BY631062	1204-001437	IC-CHROMA;LA7359,DIP,28P,400MIL,PLASTIC,	"EF" Models Only
IC601	BY631092	AC09-00109A	IC-MICOM;uPD784927GF-155-3BA,784927GF-1	
IC602	BY631022	1003-001162	IC-MOTOR DRIVER;KA3082,SIP,10PIN,25MIL,D	
IC604	70795269	AC14-12006C	IC;KA7533,DIP,-	
IC605	BY631082	1103-001150	IC-EEPROM;24C081,8KBIT,DIP,8P,300MIL,10M	
IC608	BY631059	1203-000515	IC-VOL. DETECTOR;7042,TO-92,3P,177MIL,PL	
IC6P01	BY631068	AC09-12014Z	IC-MCU;LC74776M,30P,MFP,OSD/VPS/PDC I	
IC6P01	BY631066	AC09-10459G	IC-MCU;LC74789Y,JM-9771,24P,MFP,OSD IC	V-220EF/210UK Only
IC6P01	BY631100	AC09-00115A	IC-OSD;LC74759,JM-9792,LC74759,JM-9792,	"W" Models Only
IC701	BY631094	AC09-00092A	IC-MCU;uPD780232GC-014-8BT,uPD780232G	
IC801	BY631064	1205-001484	IC-SWITCH;LA7147M,SOP,36PIN,375MIL,PLAST	V-220W/210W/210UK Not used
<b>&lt;TRANSISTORS&gt;</b>				
Q1P101	70693265	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
Q1P102	70693265	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
Q1P104	70693410	0501-000610	TR-SMALL SIGNAL;KSA928A-Y,PNP,1W,TO-92L,	
Q1P105	70795137	0504-000116	TR-DIGITAL;KSR1001,NPN,300MW,4.7K/4.7K,T	
Q1P106	70795142	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,TO-9	
Q1P107	70795818	0501-000290	TR-SMALL SIGNAL;KSA643-Y,PNP,500mW,TO-92	
Q1P110	70795137	0504-000116	TR-DIGITAL;KSR1001,NPN,300MW,4.7K/4.7K,T	
Q1P111	70693084	0504-000142	TR-DIGITAL;KSR2001,PNP,300MW,4.7K/4.7K,T	
Q1P112	70795818	0501-000290	TR-SMALL SIGNAL;KSA643-Y,PNP,500mW,TO-92	
Q1P114	70693265	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
Q1P115	70693084	0504-000142	TR-DIGITAL;KSR2001,PNP,300MW,4.7K/4.7K,T	
Q1P116	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q1P117	70795142	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,TO-9	
Q302	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q303	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q304	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q307	BY530014	0504-000119	TR-DIGITAL;KSR1004,NPN,300MW,47K	V-220W/210W/230UK/220UK/210UK/230EG/210EG Only
Q308	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q309	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q3A01	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q3A03	70795142	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,TO-9	
Q3A04	70795142	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,TO-9	
Q3A05	70795142	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,TO-9	
Q3A06	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q3S01	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	"EF" Models Only
Q3S02	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	"EF" Models Only
Q3S03	70693084	0504-000142	TR-DIGITAL;KSR2001,PNP,300MW,4.7K/4.7K,T	"EF" Models Only
Q3S04	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	"EF" Models Only
Q3S05	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	"EF" Models Only
Q602	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q6B01	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	V-430UK/230UK/220UK/430EG/230EG Only
Q6B03	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	V-430UK/230UK/220UK/430EG/230EG Only
Q6B04	70795136	0501-000398	TR-SMALL SIGNAL;KSC945,NPN,250mW,TO-92,T	
Q6P01	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q6P02	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q6P03	70795134	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
Q701	70693084	0504-000142	TR-DIGITAL;KSR2001,PNP,300MW,4.7K/4.7K,T	
Q802	BY530014	0504-000119	TR-DIGITAL;KSR1004,NPN,300MW,47K/47K,TO-	V-210UK/220W/210W Only

## Replacement Parts List

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
Q804	70693084	0504-000142	TR-DIGITAL;KSR2001,PNP,300MW,4.7K/4.7K,T	V-210UK/220W/210W Only
S601	BY530003	0603-001011	PHOTO-TR;NPN,35V,6V,50mA,75mW,BK	
S602	BY530003	0603-001011	PHOTO-TR;NPN,35V,6V,50mA,75mW,BK	
<DIODES>				
D1P101	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	V-220W/210W/210UK Not used
D1P103	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D1P105	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D1P108	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	V-220W/210W/210UK Not used
D1P109	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1P110	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1P111	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	V-220W/210W/210UK Not used
D1P113	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D1P114	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1P115	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	V-220W/210W/210UK Not used
D1P117	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1P119	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D1P120	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	V-220W/210W/210UK Not used
D1P125	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D1SD11	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
D1SD31	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	V-220W/210W/210UK Not used
D1SD32	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
D1SF05	BY430012	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
D1SF12	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	V-220W/210W/210UK Not used
D1SS01	BY430012	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
D1SS02	BY430012	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
D1SS03	BY430012	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	V-220W/210W/210UK Not used
D1SS04	BY430012	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
D1SS11	BY430008	0402-000276	DIODE-RECTIFIER;UF4007,1KV,1A,DO-41,TP	
D1SS31	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	V-220W/210W/210UK Not used
D1SS32	BY430010	0402-001194	DIODE-RECTIFIER;UG2D,200V,2A,DO-204AC,TP	
D1SS33	BY430065	0404-001069	DIODE-SCHOTTKY;B10A45VI,45V,10A,TO-220IS	
D1SS44	BY430011	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	V-220W/210W/210UK Not used
D302	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D3S02	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D401	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	"EF" Models Only
D603	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D604	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D605	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	V-220W/210W/210UK Not used
D611	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D620	70796385	0402-000127	DIODE-RECTIFIER;1N4002,100V,1A,DO-41,TP	
D701	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	V-220W/210W/210UK Not used
D702	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D702	BY430014	0403-001141	DIODE-ZENER;MTZJ24D,24V,23.63-24.85V,500	
D703	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	V-220W/210W/210UK Not used
D704	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D705	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D706	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	V-220W/210W/210UK Not used
D706	BY430004	0403-000509	DIODE-ZENER;MTZJ5.6B,5.6V,5.45-5.73V,500	
D707	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D708	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	V-220W/210W/210UK Not used
D709	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
D805	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
LD601	BY430016	0601-000517	LED-IR;RECTANGULA,4x6.0mm,75mW,6V,950	V-220W/210W/210UK Not used
LD703	BY430066	0601-001201	LED;ROUND,RED,3mm,635nm	
W167	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
W532	70795150	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	V-220W/210W/210UK Not used
ZD1P01	BY430015	0403-001211	DIODE-ZENER;MTZJ12B,11.44-12.03V,500MW,D	
ZD1P02	BY430005	0403-000717	DIODE-ZENER;MTZJ5.1B,5.1V,4.94-5.2V,500m	
ZD1P03	BY430013	0403-000720	DIODE-ZENER;MTZJ9.1B,9.1V,8.57-9.01V,500	V-220W/210W/210UK Not used
ZD1P06	BY430015	0403-001211	DIODE-ZENER;MTZJ12B,11.44-12.03V,500MW,D	
ZD401	70795272	0403-000390	DIODE-ZENER;UZP33B,33V,31.4-34.6V,1W,DO-	
<INDUCTORS>				
BD1SD1	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-,-	V-220W/210W/210UK Not used
BD1SF1	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-,-	
BD1SF3	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-,-	
BD1SR1	BY330003	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	V-220W/210W/210UK Not used
BD1SS2	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-,-	
BD1SS3	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-,-	
FL3A01	BY330004	AC27-80100A	COIL-OSC;126QN-K5272YHC=K,-,AM	V-220W/210W/210UK Not used
L1SS02	BY634272	AC29-00002A	FILTER LINE NOISE;- ,30mH,-,-,BLF-2116	
L1SS31	70796213	AC27-12001N	COIL-CHOKE;10UH-15%,RA,K-30,Q80,150KHZ,-	
L1SS32	70796213	AC27-12001N	COIL-CHOKE;10UH-15%,RA,K-30,Q80,150KHZ,-	V-220W/210W/210UK Not used
L301	70795841	2701-000206	INDUCTOR-AXIAL;56uH,5%,2.4x3.4mm	
L302	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L304	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	V-220W/210W/210UK Not used
L305	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L306	70796361	2701-000119	INDUCTOR-AXIAL;120uH,5%,2.4x3.4mm	



Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
L310	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L3A01	70795171	2702-000120	INDUCTOR-RADIAL;15mH,5%,6.2x7.4mm	
L3A02	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L3A03	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	
L3S01	70796003	2702-000106	INDUCTOR-RADIAL;100uH,10%,6.2x7.4mm	"EF" Models Only
L3S02	70795863	2702-000179	INDUCTOR-RADIAL;6.8uH,5%,6x6.4mm	"EF" Models Only
L3S03	BY330052	2701-000165	INDUCTOR-AXIAL;27uH,5%,2.4x3.4mm	"EF" Models Only
L3S04	70795843	2701-000195	INDUCTOR-AXIAL;47uH,5%,2.4x3.4mm	"EF" Models Only
L3S05	70795162	2701-000160	INDUCTOR-AXIAL;22uH,5%,2.4x3.4mm	"EF" Models Only
L401	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L601	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L603	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L604	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L605	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L6B01	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	V-430UK/230YK/220UK/430EG/230EG Only
L6P03	70795162	2701-000160	INDUCTOR-AXIAL;22uH,5%,2.4x3.4mm	
L6P04	BY330054	2701-000201	INDUCTOR-AXIAL;5.6uH,5%,2.4x3.4mm	
L6P05	BY330052	2701-000165	INDUCTOR-AXIAL;27uH,5%,2.4x3.4mm	
L701	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	V-430EF/230EF/420W/410W/220W/210W Only
L702	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	
L801	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	V-220W/210W/210UK Not used
L802	BY330009	2701-000002	INDUCTOR-AXIAL;100uH,10%,4.2x9.8mm	V-220W/210W/210UK Not used
L803	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L804	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L805	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	V-220W/210W/430UK/230UK/220UK/210UK Not used
L806	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	V-220W/210W/430UK/230UK/220UK/210UK Not used
L807	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L808	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L809	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L810	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
L811	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	V-220W/210W/210UK Not used
L812	BY330053	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	V-220W/210W/210UK Not used
L813	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-	
L814	70795644	AC27-92001M	INDUCTOR;70UH-M RT BFS3565R2F,-,-,-	
<b>&lt;CAPACITORS&gt;</b>				
C1P101	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5.5mm	
C1P102	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11.5	
C1P103	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7.5	
C1P104	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7.5	
C1P105	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7.5	
C1P106	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7.5	
C1P108	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5.5mm	
C1P110	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7.5	
C1P114	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7.5	
C1P115	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7.5	
C1P116	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7.5	
C1SD03	BY130219	2201-000812	C-CERAMIC,DISC;2.2nF,20%,400V,Y5U,BK,12.	
C1SD04	BY130219	2201-000812	C-CERAMIC,DISC;2.2nF,20%,400V,Y5U,BK,12.	
C1SD11	BY130283	2401-003302	C-AL;47uF,20%,400V,GP,TP,18X31.5,7.	
C1SD12	BY130226	2305-001029	C-FILM,MPEF;10nF,10%,630V,TP,12x9x12.5,5	
C1SD13	70795070	2201-000376	C-CERAMIC,DISC;0.22nF,5%,50V,SL,TP,6.3x3	
C1SF12	BY130296	2401-001200	C-AL;33uF,20%,50V,WT,TP,6.3x11.5	
C1SS01	BY130272	2305-001021	C-FILM,MPEF;100nF,20%,275V,TP,17.5x7x13.	
C1SS02	BY130272	2305-001021	C-FILM,MPEF;100nF,20%,275V,TP,17.5x7x13.	
C1SS12	BY130258	2201-000129	C-CERAMIC,DISC;0.1nF,10%,1kV,Y5P,TP,7x4,	
C1SS31	70795431	2401-000385	C-AL;10uF,20%,100V,GP,TP,6.3x11.5	
C1SS32	BY130281	2401-003046	C-AL;47uF,20%,50V,WT,TP,6.3x11.2,5	
C1SS33	BY130251	2401-003477	C-AL;330UF,20%,25V,LZ,TP,10X12.5MM,	
C1SS34	BY130338	2401-003478	C-AL;100UF,20%,25V,LZ,TP,8X11.5MM,5	
C1SS35	BY130339	2401-003480	C-AL;1000UF,20%,10V,LZ,TP,10X16MM,5	
C1SS36	BY130015	2401-001479	C-AL;470uF,20%,10V,GP,-,-,TP	
C1SS37	BY130281	2401-003046	C-AL;47uF,20%,50V,WT,TP,6.3x11.2,5	
C1SS38	BY130015	2401-001479	C-AL;470uF,20%,10V,GP,-,-,TP	
C1SS39	70796098	2301-000129	C-FILM,PEF;100nF,5%,50V,TP,10X9X4.3X5,5m	
C1SS40	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
C301	70795769	2401-001919	C-AL;2.2UF,20%,50V,-,TP,4X7MM,5	
C302	BY130024	2301-000283	C-FILM,PEF;47nF,5%,100V,TP,7.3X7X3.2X5,5	
C303	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7.5	
C304	70795080	2202-000216	C-CERAMIC,MLC-AXIAL;.027NF,5%,50V,SL,TP,	
C305	70697011	2202-000164	C-CERAMIC,MLC-AXIAL;.18NF,10%,50V,Y5P,TP	
C306	BY130263	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
C307	70795076	2202-000162	C-CERAMIC,MLC-AXIAL;.015NF,5%,50V,SL,TP,	
C308	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C309	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7.5	
C310	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7.5	
C311	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7.5	
C312	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	V-430EF/230EF/420W/410W/220W/210W Only
C313	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	

Loc.No.	TSB Parts No.	Reference No.	Description : Specification	Remark
C314	BY130278	2401-001775	C-AL;470nF,20%,50V,GP,TP,4x7,5	
C315	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C316	BY130167	2202-002055	C-CERAMIC,MLC-AXIAL;47nF,+80-20%,50V,Y5V	
C318	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C320	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C321	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C322	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C323	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C324	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C325	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C326	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C327	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C328	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C329	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C330	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C331	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C332	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C333	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C334	70693249	2202-000807	C-CERAMIC,MLC-AXIAL;22nF,+80-20%,25V,Y5V	
C335	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C336	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C337	70693249	2202-000807	C-CERAMIC,MLC-AXIAL;22nF,+80-20%,25V,Y5V	
C338	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C339	BY130167	2202-002055	C-CERAMIC,MLC-AXIAL;47nF,+80-20%,50V,Y5V	
C340	70693249	2202-000807	C-CERAMIC,MLC-AXIAL;22nF,+80-20%,25V,Y5V	
C341	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C342	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C343	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C345	BY130260	2201-002031	C-CERAMIC,DISC;0.005nF,0.5pF,50V,NP0,TP,	
C346	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C347	BY130173	2202-000286	C-CERAMIC,MLC-AXIAL;56pF,5%,50V,SL,TP,1.	
C348	BY130173	2202-000286	C-CERAMIC,MLC-AXIAL;56pF,5%,50V,SL,TP,1.	
C349	BY130265	2202-000849	C-CERAMIC,MLC-AXIAL;18pF,5%,50V,CH,TP,3.	
C350	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C360	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C380	70795616	2202-000243	C-CERAMIC,MLC-AXIAL;33pF,5%,50V,SL,TP,3.	
C381	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C390	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C399	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3A01	70795626	2401-003122	C-AL;4.7uF,20%,50V,LL,TP,4X7,1.5	
C3A02	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3A04	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3A07	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
C3A08	BY130041	2301-001014	C-FILM,PEF;6.8nF,5%,50V,TP,7x3x6,5mm	
C3A09	BY130041	2301-001014	C-FILM,PEF;6.8nF,5%,50V,TP,7x3x6,5mm	
C3A10	BY130085	2301-000314	C-FILM,PEF;8.2nF,5%,50V,TP,6.5x3.0x5.5mm	
C3A11	BY130145	2301-000253	C-FILM,PEF;39NF,5%,100V,TP,7.5X4.5X12.5M	
C3A12	BY130282	2401-003107	C-AL;47uF,20%,16V,GP,TP,5x7,5	
C3A13	BY130269	2301-000161	C-FILM,PEF;12nF,5%,50V,TP,6.5X5.5X3.0X5,	
C3A14	BY130041	2301-001014	C-FILM,PEF;6.8nF,5%,50V,TP,7x3x6,5mm	
C3A15	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
C3A16	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	
C3A17	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C3A18	70795094	2301-000404	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
C3A21	BY130267	2301-000008	C-FILM,PEF;2.2nF,5%,50V,TP,5.5X7X3,5mm	
C3A22	70699002	2202-000780	C-CERAMIC,MLC-AXIAL;100nF,+80-20%,50V,Y5	
C3A23	BY130250	2401-002068	C-AL;33uF,20%,16V,GP,TP,5x11,5	
C3A24	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3A25	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C3A29	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3A30	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C3A31	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3S01	70697011	2202-000164	C-CERAMIC,MLC-AXIAL;18NF,10%,50V,Y5P,TP	
C3S02	70795769	2401-001919	C-AL;2.2UF,20%,50V,-,TP,4X7MM,5	
C3S03	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
C3S04	70796389	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
C3S05	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3S06	70795363	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	
C3S07	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C3S08	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C3S09	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C3S11	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C3S13	BY130278	2401-001775	C-AL;470nF,20%,50V,GP,TP,4x7,5	
C3S14	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	
C3S15	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
C3S17	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C3S19	70795070	2201-000376	C-CERAMIC,DISC;0.22nF,5%,50V,SL,TP,6.3x3	
C3S20	BY130082	2301-000224	C-FILM,PEF;22nF,5%,50V,TP,7.4x3.9x13mm,5	
C3S21	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	

V-430EF/230EF/420W/410W/220W/210W Only

V-220W/210W/210UK Only

V-430EF/230EF/420W/410W/220W/410W Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

"EF" Models Only

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
C3S22	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	"EF" Models Only
C3S23	70693492	2201-000941	C-CERAMIC,DISC;51pF,5%,50V,SL,TP,5x3,5	"EF" Models Only
C3S25	70693215	2202-000787	C-CERAMIC,MLC-AXIAL;10PF,5%,50V,Y5P,TP,3	"EF" Models Only
C3S26	70795729	2201-000681	C-CERAMIC,DISC;0.082nF,5%,50V,SL,TP,5x3,	"EF" Models Only
C3S27	70693237	2202-000825	C-CERAMIC,MLC-AXIAL;680pF,10%,50V,Y5P,TP	"EF" Models Only
C402	70693249	2202-000807	C-CERAMIC,MLC-AXIAL;22nF,+80-20%,25V,Y5V	
C403	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C404	70795123	2401-001085	C-AL;330NF,20%,50V,GP,-,5X9,2MM	
C405	BY130281	2401-003046	C-AL;47uF,20%,50V,WT,TP,6.3x11,2.5	
C407	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C410	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C529	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
C601	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C602	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C603	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5,5mm	
C604	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C605	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C607	BY130278	2401-001775	C-AL;470nF,20%,50V,GP,TP,4x7,5	
C608	BY130131	2401-002259	C-AL;0.1F,+80-20%,5.5V,-,TP,12.5x11	"EF" Models Only
C608	70796210	2401-000118	C-AL;1000uF,20%,10V,GP,TP,10x12.5,5	
C610	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C611	70693281	2301-000392	C-FILM,PEF;15nF,5%,50V,TP,6.5x8.5x3.2mm,	
C612	70796210	2401-000118	C-AL;1000uF,20%,10V,GP,TP,10x12.5,5	
C614	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C618	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5,5mm	
C619	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C620	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C621	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5,5mm	
C622	70693497	2301-000471	C-FILM,PEF;68nF,5%,50V,TP,9x12x4.5mm,5mm	
C623	70693249	2202-000807	C-CERAMIC,MLC-AXIAL;22nF,+80-20%,25V,Y5V	
C624	70795614	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
C625	70795614	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
C626	70795614	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
C627	70795614	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
C628	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C633	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C634	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C635	BY130072	2202-000183	C-CERAMIC,MLC-AXIAL;2.2NF,20%,16V,Y5R,TP	
C636	BY130072	2202-000183	C-CERAMIC,MLC-AXIAL;2.2NF,20%,16V,Y5R,TP	
C637	BY130172	2202-000263	C-CERAMIC,MLC-AXIAL;470pF,10%,50V,Y5P,TP	
C638	70699092	2401-000918	C-AL;22uF,20%,16V,GP,-,6.3x7,5	
C639	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	
C640	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C641	BY130280	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
C642	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5,5mm	
C643	BY130048	2401-002095	C-AL;47uF,20%,25V,GP,TP,6.3x5,5mm	
C645	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C646	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C691	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C692	70693497	2301-000471	C-FILM,PEF;68nF,5%,50V,TP,9x12x4.5mm,5mm	
C6B02	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	V-430UK/230UK/220UK/430EG/230EG Only
C6B03	70795621	2401-001507	C-AL;47uF,20%,16V,GP,TP,6.3x5,5	V-430UK/230UK/220UK/430EG/230EG Only
C6B04	70699002	2202-000780	C-CERAMIC,MLC-AXIAL;100nF,+80-20%,50V,Y5	V-430UK/230UK/220UK/430EG/230EG Only
C6B07	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	
C6B08	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	
C6P01	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C6P02	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C6P03	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C6P04	70795080	2202-000216	C-CERAMIC,MLC-AXIAL;027NF,5%,50V,SL,TP,	
C6P05	70795080	2202-000216	C-CERAMIC,MLC-AXIAL;027NF,5%,50V,SL,TP,	
C6P06	BY130271	2301-000458	C-FILM,PEF;56nF,5%,50V,TP,8x12x4.5mm,5mm	V-220EF/420W/410W/220W/210W/210UK Not used
C6P07	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	V-220EF/420W/410W/220W/210W/210UK Not used
C6P08	BY130173	2202-000286	C-CERAMIC,MLC-AXIAL;56pF,5%,50V,SL,TP,1.	
C6P09	BY130170	2202-000145	C-CERAMIC,MLC-AXIAL;12NF,10%,50V,Y5P,TP	V-220EF/420W/410W/220W/210W/210UK Only
C6P10	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C6P11	BY130042	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
C6P12	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
C6P13	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
C6P14	70693047	2202-000279	C-CERAMIC,MLC-AXIAL;47pF,5%,50V,SL,TP,3.	
C6P20	70693047	2202-000279	C-CERAMIC,MLC-AXIAL;47pF,5%,50V,SL,TP,3.	
C6P20	70795082	2202-000295	C-CERAMIC,MLC-AXIAL;68pF,5%,50V,SL,TP,3.	V-220EF/420W/410W/220W/210W/210UK Only
C701	BY130280	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
C702	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C703	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	
C706	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C707	70795626	2401-003122	C-AL;4.7uF,20%,50V,LL,TP,4X7,1.5	
C708	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
C711	70795362	2202-000789	C-CERAMIC,MLC-AXIAL;12PF,5%,50V,SL,TP,3.	
C712	70795362	2202-000789	C-CERAMIC,MLC-AXIAL;12PF,5%,50V,SL,TP,3.	

## Replacement Parts List

Loc.No.	TSB Parts No.	Reference No.	Description : Specification	Remark
C801	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	V-220W/210W/210UK Not used
C803	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	V-220W/210W/210UK Not used
C805	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	V-220W/210W/210UK Not used
C807	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	V-220W/210W/210UK Not used
C808	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	V-220W/210W/210UK Not used
C809	70795769	2401-001919	C-AL;2.2uF,20%,50V,-,TP,4X7MM,5	V-220W/210W/210UK Not used
C810	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	V-220W/210W/210UK Not used
C814	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	V-220W/210W/210UK Not used
C815	BY130047	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	V-220W/210W/210UK Not used
C816	BY130273	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	V-220W/210W/210UK Not used
C817	BY130049	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	V-220W/210W/210UK Not used
C818	70795075	2202-000797	C-CERAMIC,MLC-AXIAL;10nF,30%,16V,Y5S,TP	V-220W/210W/210UK Not used
C819	BY130280	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	V-220W/210W/210UK Not used
C820	BY130027	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	V-220W/210W/210UK Not used
C821	BY130015	2401-001479	C-AL;470uF,20%,10V,GP,-,TP	
C822	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	
C823	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	V-220W/210W/210UK Not used
C826	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	V-220W/210W/210UK Not used
C827	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	V-220W/210W/210UK Not used
C828	70693047	2202-000279	C-CERAMIC,MLC-AXIAL;47pF,5%,50V,SL,TP,3	
C829	70693047	2202-000279	C-CERAMIC,MLC-AXIAL;47pF,5%,50V,SL,TP,3	
C830	BY130136	2401-002299	C-AL;4.7uF,20%,50V,GP,TP,5x7,5	
C831	BY130263	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
C834	BY130263	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	V-220W/210W/430UK/230UK/220UK/210UK Not used
C837	BY130262	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1	
C840	BY130015	2401-001479	C-AL;470uF,20%,10V,GP,-,TP	V-220W/210W/430UK/230UK/220UK/210UK Not used
C841	BY130069	2202-000121	C-CERAMIC,MLC-AXIAL;100pF,10%,50V,Y5P,TP	V-220W/210W/210UK Only

## &lt;RESISTORS&gt;

R1P103	70795019	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P105	70795007	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P106	70795036	2001-000613	R-CARBON;3.9KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P107	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P108	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P109	70796067	2001-000362	R-CARBON;150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P110	70796067	2001-000362	R-CARBON;150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P111	70795003	2001-000302	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P112	70795025	2001-000554	R-CARBON;270OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P115	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P116	70795029	2001-000633	R-CARBON;30KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P117	70796067	2001-000362	R-CARBON;150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P119	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P121	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1P122	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P123	70795007	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P125	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P127	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P128	70795013	2001-000241	R-CARBON;1.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1P129	BY230106	2001-000938	R-CARBON;68OHM,5%,1/8W,AA,TP,1.8X3.2MM	V-220W/210W/210UK Not used
R1P130	BY230019	2001-000221	R-CARBON;1.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1SD12	70796067	2001-000362	R-CARBON;150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1SD13	70795318	2001-000319	R-CARBON;120KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1SD14	70795318	2001-000319	R-CARBON;120KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1SD15	70795318	2001-000319	R-CARBON;120KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1SD16	70796274	2003-000273	R-METAL OXIDE;33Kohm,5%,2W,AA,TP,6x16mm	
R1SD31	70795039	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1SD32	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1SF11	70795318	2001-000319	R-CARBON;120KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1SF15	70795031	2001-000591	R-CARBON;3.3KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R1SF19	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1SF20	BY230147	2003-000105	R-METAL OXIDE;0.33ohm,5%,2W,AD,TP,6x16mm	
R1SF21	BY230036	2001-000096	R-CARBON(S);1MOHM,5%,1/2W,AA,TP,2.4X6.4M	
R1SS10	BY230170	2006-000262	R-CEMENT;2.7ohm,10%,2W,CB,TP,7.5x11x20	
R1SS11	70796274	2003-000273	R-METAL OXIDE;33Kohm,5%,2W,AA,TP,6x16mm	
R1SS13	BY230003	2003-000148	R-METAL OXIDE;100OHM,5%,2W,AE,TP,6X16MM	
R1SS31	70795009	2001-000440	R-CARBON;1OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1SS32	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R1SS33	70795640	2004-000869	R-METAL;3Kohm,1%,1/8W,AA,TP,1.8x3.2mm	
R1SS34	70795638	2004-000459	R-METAL;2.2Kohm,1%,1/8W,AA,TP,1.8x3.2m	
R301	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R302	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R303	70795357	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R304	70795058	2001-000977	R-CARBON;8.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R305	70795357	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R306	70795012	2001-000232	R-CARBON;1.3KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R308	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R309	BY230037	2001-000723	R-CARBON;4.3KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R311	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R312	70795013	2001-000241	R-CARBON;1.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	

"EF" Models Only


Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
R313	70795019	2001-000515	R-CARBON;2200HM,5%,1/8W,AA,TP,1.8X3.2MM	
R314	70795050	2001-000924	R-CARBON;6800HM,5%,1/8W,AA,TP,1.8X3.2MM	
R315	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R316	BY230019	2001-000221	R-CARBON;1.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R317	70795030	2001-000003	R-CARBON;330ohm,5%,1/8W,AA,TP,1.8x3.2mm	
R318	70795030	2001-000003	R-CARBON;330ohm,5%,1/8W,AA,TP,1.8x3.2mm	
R320	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R321	BY230096	2001-000009	R-CARBON;20KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R322	70795319	2001-000539	R-CARBON;24KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R324	70795025	2001-000554	R-CARBON;2700HM,5%,1/8W,AA,TP	V-220W/210W/230UK/220UK/210UK/230EG/210EG Only
R325	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R326	70795043	2001-000832	R-CARBON;5100HM,5%,1/8W,AA,TP,1.8X3.2MM	
R327	70795043	2001-000832	R-CARBON;5100HM,5%,1/8W,AA,TP,1.8X3.2MM	
R328	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R329	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R329	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP	V-220W/210W/230UK/220UK/210UK/230EG/210EG Only
R330	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R331	70795019	2001-000515	R-CARBON;2200HM,5%,1/8W,AA,TP,1.8X3.2MM	
R332	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	
R333	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	
R334	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	
R335	70795044	2001-000800	R-CARBON;5.1KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R336	70795014	2001-000008	R-CARBON;15KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R341	70795059	2001-001000	R-CARBON;82KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R342	70795046	2001-000802	R-CARBON;5.6Kohm,5%,1/8W,AA,TP,1.8x3.2m	
R344	70795054	2001-000969	R-CARBON;750HM,5%,1/8W,AA,TP	V-430EF/230EF/420W/410W/220W/210W Only
R347	70795049	2001-000904	R-CARBON;6200HM,5%,1/8W,AA,TP,1.8X3.2MM	
R348	70795609	2001-000605	R-CARBON;3.6KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A01	70795011	2001-000331	R-CARBON;12KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A04	70795012	2001-000232	R-CARBON;1.3KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A05	70795032	2001-000660	R-CARBON;33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A06	70795607	2001-000405	R-CARBON;1800HM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A07	70795033	2001-000645	R-CARBON;330KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A08	70795011	2001-000331	R-CARBON;12KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A09	70795046	2001-000802	R-CARBON;5.6Kohm,5%,1/8W,AA,TP,1.8x3.2m	
R3A10	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A11	70795357	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A12	70796025	2001-000458	R-CARBON;2.20HM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A13	70795039	2001-000780	R-CARBON;4700HM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A14	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A16	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A17	70795036	2001-000613	R-CARBON;3.9KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A18	70795036	2001-000613	R-CARBON;3.9KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A19	70795607	2001-000405	R-CARBON;1800HM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A21	70795049	2001-000904	R-CARBON;6200HM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A22	BY230037	2001-000723	R-CARBON;4.3KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A23	70795058	2001-000977	R-CARBON;8.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A24	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A25	BY230019	2001-000221	R-CARBON;1.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A26	70795011	2001-000331	R-CARBON;12KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A27	70795447	2001-000878	R-CARBON;6.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	V-220W/210W/210UK Only
R3A28	70795447	2001-000878	R-CARBON;6.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A28	70795036	2001-000613	R-CARBON;3.9KOHM,5%,1/8W,AA,TP,1.8X3.2M	V-220W/210W/430UK/230UK/220UK/210UK Only
R3A29	70795036	2001-000613	R-CARBON;3.9KOHM,5%,1/8W,AA,TP,1.8X3.2M	V-430EF/230EF/420W/410W/220W/210W Only
R3A30	70795354	2001-000773	R-CARBON;470KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3A31	70795038	2001-000766	R-CARBON;43KOHM,5%,1/8W,AA,TP,1.8X3.2MM	V-220W/210W/210UK Only
R3A32	70795038	2001-000766	R-CARBON;43KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A33	70795038	2001-000766	R-CARBON;43KOHM,5%,1/8W,AA,TP,1.8X3.2MM	V-430EF/230EF/420W/410W/220W/210W Only
R3A37	70795055	2001-000947	R-CARBON;7.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R3S01	70795319	2001-000539	R-CARBON;24KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S02	70795058	2001-000977	R-CARBON;8.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S03	70795663	2001-001015	R-CARBON;9.1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S04	70795319	2001-000539	R-CARBON;24KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S05	70795041	2001-000786	R-CARBON;47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S11	70795045	2001-000837	R-CARBON;51KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S12	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S13	70795029	2001-000633	R-CARBON;30KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S14	70795051	2001-000890	R-CARBON;6.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S15	70795055	2001-000947	R-CARBON;7.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S16	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S17	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S20	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S21	70795034	2001-000674	R-CARBON;3600HM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S22	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S23	70795319	2001-000539	R-CARBON;24KOHM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only
R3S24	70795015	2001-000356	R-CARBON;150KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S25	70795357	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R3S27	70795318	2001-000319	R-CARBON;120KOHM,5%,1/8W,AA,TP,1.8X3.2M	"EF" Models Only
R401	70795041	2001-000786	R-CARBON;47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	

# Replacement Parts List

Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
R402	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	
R403	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	
R404	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	
R406	70795026	2001-000563	R-CARBON;27KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R407	70795058	2001-000977	R-CARBON;8.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R408	BY230019	2001-000221	R-CARBON;1.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R602	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	"EF" Models Only "EF" Models Only
R603	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	
R603	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R604	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R605	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R608	70795047	2001-000864	R-CARBON;56KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R609	70795047	2001-000864	R-CARBON;56KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R613	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R641	70795039	2001-000780	R-CARBON;4700HM,5%,1/8W,AA,TP,1.8X3.2MM	
R642	70795039	2001-000780	R-CARBON;4700HM,5%,1/8W,AA,TP,1.8X3.2MM	
R644	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R650	70796369	2003-000259	R-METAL OXIDE;3.90HM,5%,2W,AE,TP,6X16MM	
R651	70795052	2001-000010	R-CARBON;68KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R652	70795024	2001-000568	R-CARBON;270HM,5%,1/8W,AA,TP,1.8X3.2MM	
R654	70795046	2001-000802	R-CARBON;5.6Kohm,5%,1/8W,AA,TP,1.8x3.2m	
R655	70795041	2001-000786	R-CARBON;47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R656	70795013	2001-000241	R-CARBON;1.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R657	70795052	2001-000010	R-CARBON;68KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R660	70795041	2001-000786	R-CARBON;47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R661	70795032	2001-000660	R-CARBON;33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R666	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R667	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R668	70795039	2001-000780	R-CARBON;4700HM,5%,1/8W,AA,TP,1.8X3.2MM	
R669	70795039	2001-000780	R-CARBON;4700HM,5%,1/8W,AA,TP,1.8X3.2MM	
R670	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R671	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R672	70795040	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R673	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R674	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R675	70795607	2001-000405	R-CARBON;1800HM,5%,1/8W,AA,TP,1.8X3.2MM	
R676	70795029	2001-000633	R-CARBON;30KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R677	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R678	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R679	70795019	2001-000515	R-CARBON;2200HM,5%,1/8W,AA,TP,1.8X3.2MM	
R682	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R685	70795032	2001-000660	R-CARBON;33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R687	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R690	70795047	2001-000864	R-CARBON;56KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R691	70795019	2001-000515	R-CARBON;2200HM,5%,1/8W,AA,TP,1.8X3.2MM	
R692	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R693	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R694	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R6B01	70796024	2001-000384	R-CARBON;1600HM,5%,1/8W,AA,TP,1.8X3.2MM	V-430UK/230UK/220UK/430EG/230EG Only
R6B02	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	V-430UK/230UK/220UK/430EG/230EG Only
R6B03	70795005	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	V-430UK/230UK/220UK/430EG/230EG Only
R6B07	70795019	2001-000515	R-CARBON;2200HM,5%,1/8W,AA,TP,1.8X3.2MM	V-430UK/230UK/220UK/430EG/230EG Only
R6P01	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,	V-220EF/420W/410W/220W/210W/210UK Not used
R6P02	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,	V-220EF/420W/410W/220W/210W/210UK Not used
R6P03	70699144	2001-000472	R-CARBON;2.7KOHM,5%,1/8W,AA,TP,	V-220EF/420W/410W/220W/210W/210UK Not used
R6P04	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,	V-220EF/420W/410W/220W/210W/210UK Not used
R6P05	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R6P06	70795046	2001-000802	R-CARBON;5.6Kohm,5%,1/8W,AA,TP,1.8x3.2m	V-220EF/420W/410W/220W/210W/210UK Not used
R6P07	70796356	2001-000490	R-CARBON;2000HM,5%,1/8W,AA,TP,1.8X3.2MM	
R6P07	70795659	2001-000027	R-CARBON;1000HM,5%,1/4W,AA,TP,2.4X6.4MM	V-220W/210W/210UK Only
R6P08	70795028	2001-000007	R-CARBON;3KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R6P09	70795020	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	V-220EF/420W/410W/220W/210W/210UK Only
R6P10	70795019	2001-000515	R-CARBON;2200HM,5%,1/8W,AA,TP,1.8X3.2MM	V-220W/210W/210UK Not used
R6P11	BY230090	2001-000005	R-CARBON;390ohm,5%,1/8W,AA,TP,1.8x3.2mm	
R706	70795029	2001-000633	R-CARBON;30KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R707	70795013	2001-000241	R-CARBON;1.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	
R708	70795026	2001-000563	R-CARBON;27KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R709	70795019	2001-000515	R-CARBON;2200HM,5%,1/8W,AA,TP,1.8X3.2MM	
R710	70795008	2001-000435	R-CARBON;1MOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R727	70795014	2001-000008	R-CARBON;15KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R728	70795014	2001-000008	R-CARBON;15KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R731	70795006	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R732	70795003	2001-000302	R-CARBON;100HM,5%,1/8W,AA,TP,1.8X3.2MM	
R801	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	V-220W/210W/210UK Not used
R802	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	V-220W/210W/210UK Not used
R803	70795057	2001-000995	R-CARBON;8200HM,5%,1/8W,AA,TP,1.8X3.2MM	
R805	70795025	2001-000554	R-CARBON;2700HM,5%,1/8W,AA,TP,1.8X3.2MM	
R806	70795025	2001-000554	R-CARBON;2700HM,5%,1/8W,AA,TP,1.8X3.2MM	
R807	70795054	2001-000969	R-CARBON;750HM,5%,1/8W,AA,TP,1.8X3.2MM	


Loc.No.	TSB Parts No.	Reference No.	Description ; Specification	Remark
R808	70795054	2001-000969	R-CARBON;750HM,5%,1/8W,AA,TP,1.8X3.2MM	
R809	70795054	2001-000969	R-CARBON;750HM,5%,1/8W,AA,TP,	V-220W/210W/430UK/230UK/220UK/210UK Not used
R810	70795025	2001-000554	R-CARBON;2700HM,5%,1/8W,AA,TP,1.8X3.2MM	V-220W/210W/210UK Not used
R811	70795025	2001-000554	R-CARBON;2700HM,5%,1/8W,AA,TP,1.8X3.2MM	V-220W/210W/210UK Not used
R812	70795054	2001-000969	R-CARBON;750HM,5%,1/8W,AA,TP,1.8X3.2MM	
R813	70795025	2001-000554	R-CARBON;2700HM,5%,1/8W,AA,TP,1.8X3.2MM	
R814	70795025	2001-000554	R-CARBON;2700HM,5%,1/8W,AA,TP,1.8X3.2MM	
R815	70795025	2001-000554	R-CARBON;2700HM,5%,1/8W,AA,TP,1.8X3.2MM	
R816	70795025	2001-000554	R-CARBON;2700HM,5%,1/8W,AA,TP,1.8X3.2MM	
R819	70795025	2001-000554	R-CARBON;2700HM,5%,1/8W,AA,TP,	V-220W/210W/430UK/230UK/220UK/210UK Not used
R820	70795025	2001-000554	R-CARBON;2700HM,5%,1/8W,AA,TP,	V-220W/210W/430UK/230UK/220UK/210UK Not used
R821	70795032	2001-000660	R-CARBON;33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	V-220W/210W/210UK Not used
R822	70795021	2001-000522	R-CARBON;22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	V-220W/210W/210UK Not used
R823	70795026	2001-000563	R-CARBON;27KOHM,5%,1/8W,AA,TP,1.8X3.2MM	V-220W/210W/210UK Not used
R824	70795026	2001-000563	R-CARBON;27KOHM,5%,1/8W,AA,TP,1.8X3.2MM	V-220W/210W/210UK Not used
W421	70795004	2001-000281	R-CARBON;1000HM,5%,1/8W,AA,TP,1.8X3.2MM	V-430EF/230EF/420W/410W/220W/210W Only
<b>&lt;MISCELLANEOUS&gt;</b>				
CN1SS1	70796223	3711-000178	CONNECTOR-HEADER;1WALL,2P,1R,3.96mm,STRA	
CN301	70796410	3708-000395	CONNECTOR-FPC/FC/PIC;8P,1.25MM,STRAIGHT,	
CN3A01	BY634038	3708-001302	CONNECTOR-FPC/FC/PIC;7P,1.25mm,STRAIGHT,	
CN3A02	70796246	3711-002445	CONNECTOR-HEADER;BOX,2P,2R,1.5MM,STRAIGH	
CN601	BY634047	AC39-20817S	LEAD CONNECTOR-ASSY;DP,SMH200-02,YBH200-	
CN602	BY634003	3708-001163	CONNECTOR-FPC/FC/PIC;5P,1.25mm,STRAIGHT,	
CN604	BY634026	3711-003749	CONNECTOR-HEADER;BOX,8P,2R,2mm,STRAIGHT,	
CN701	70795274	3711-001198	CONNECTOR-HEADER;NOWALL,10P,1R,2mm,ANGLE	
CN702	70795274	3711-001198	CONNECTOR-HEADER;NOWALL,10P,1R,2mm,ANGLE	
CN704	BY634040	3711-004013	CONNECTOR-HEADER;3WALL,10P,1R,2mm,STRAIG	V-220EF/210UK/210EG Not used
CN705	BY634039	3710-001385	CONNECTOR-SOCKET;10P,1R,2mm,ANGLE,SN	
DT701	BY634119	AC07-20051C	VF-DISPLAY;SVV-07SS27,15SEG,20.5X75.0,SV	
F1SS01	BY634268	3601-001208	FUSE-CARTRIDGE;250V,1.6A,TIME-LAG,GLASS	
JC801	BY634117	3722-001093	JACK-RCA;42P,3.81MM,SN,BLU/BLK,#20-28	2 SCART ⚠
<b>MODELS</b>				
JC801	BY634299	3710-000402	CONNECTOR-SOCKET;6P,2R,3.2mm,STRAIGHT,SN	1 SCART MODELS
JK701	BY634122	AC37-22002S	JACK;3.2mm,DPSM-9827,2P,10mm,ARREY	
PT1SS1	BY634271	AC26-00001L	TRANS-SWITCHING;--,-,230V,DEMCO,EE2821,	⚠
PT601	BY530005	0604-001122	PHOTO-INTERRUPTER;TR,0.065%,150mW,DIP-4,	
PT602	BY530005	0604-001122	PHOTO-INTERRUPTER;TR,0.065%,150mW,DIP-4,	
RM701	BY634036	AC59-60060A	MODULE-REMOCON;GP1U281R,SHARP,38KHZ,-,-,	
SW601	BY632004	AC34-20100A	SWITCH-MODE;--,-,X-9,-	
SW602	BY632005	AC34-20100B	SWITCH-REC;--,-,X-9,-	
SW701	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW703	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW708	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW709	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW711	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW712	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW713	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW714	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW715	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW716	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW717	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW718	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW719	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW720	BY632007	3404-000165	SWITCH-TACT;12V,50mA,160gf+-50gf,6x6mm,S	
SW721	70795181	3404-001008	SWITCH-TACT;12V,20mA,160+-50,6x7.9x3.5mm	
SW801	BY632010	3404-000135	SWITCH-TACT;12V,50mA,160+-50gf,7.4x7.1mm	
TM401	BY630052	AC40-30072F	TM-BLOCK;TCMM0601PD08A,SECAM-L/G/I/K,181	"EF" Models Only
TM401	BY630051	AC40-30072D	TM-BLOCK;TCMK0600PD08A,PAL-BG/I/DK,181C	
VA1SS1	BY634022	1405-001026	VARIATOR;470V,600A,9x7mm,TP	⚠
XT301	BY633009	2801-001397	CRYSTAL-UNIT;4.433619MHZ,HC-49/U-S 15PPM	
XT601	BY633003	2801-003318	CRYSTAL-UNIT;32.768KHz,20ppm,28-AAF,12.5	
XT602	BY633010	2801-003139	CRYSTAL-UNIT;8MHz,50ppm,28-AAA,22pF,80oh	
XT701	BY633014	2801-003868	CRYSTAL-UNIT;5MHz,30ppm,28-AAA,12pF,100o	

## 8. Block Diagrams

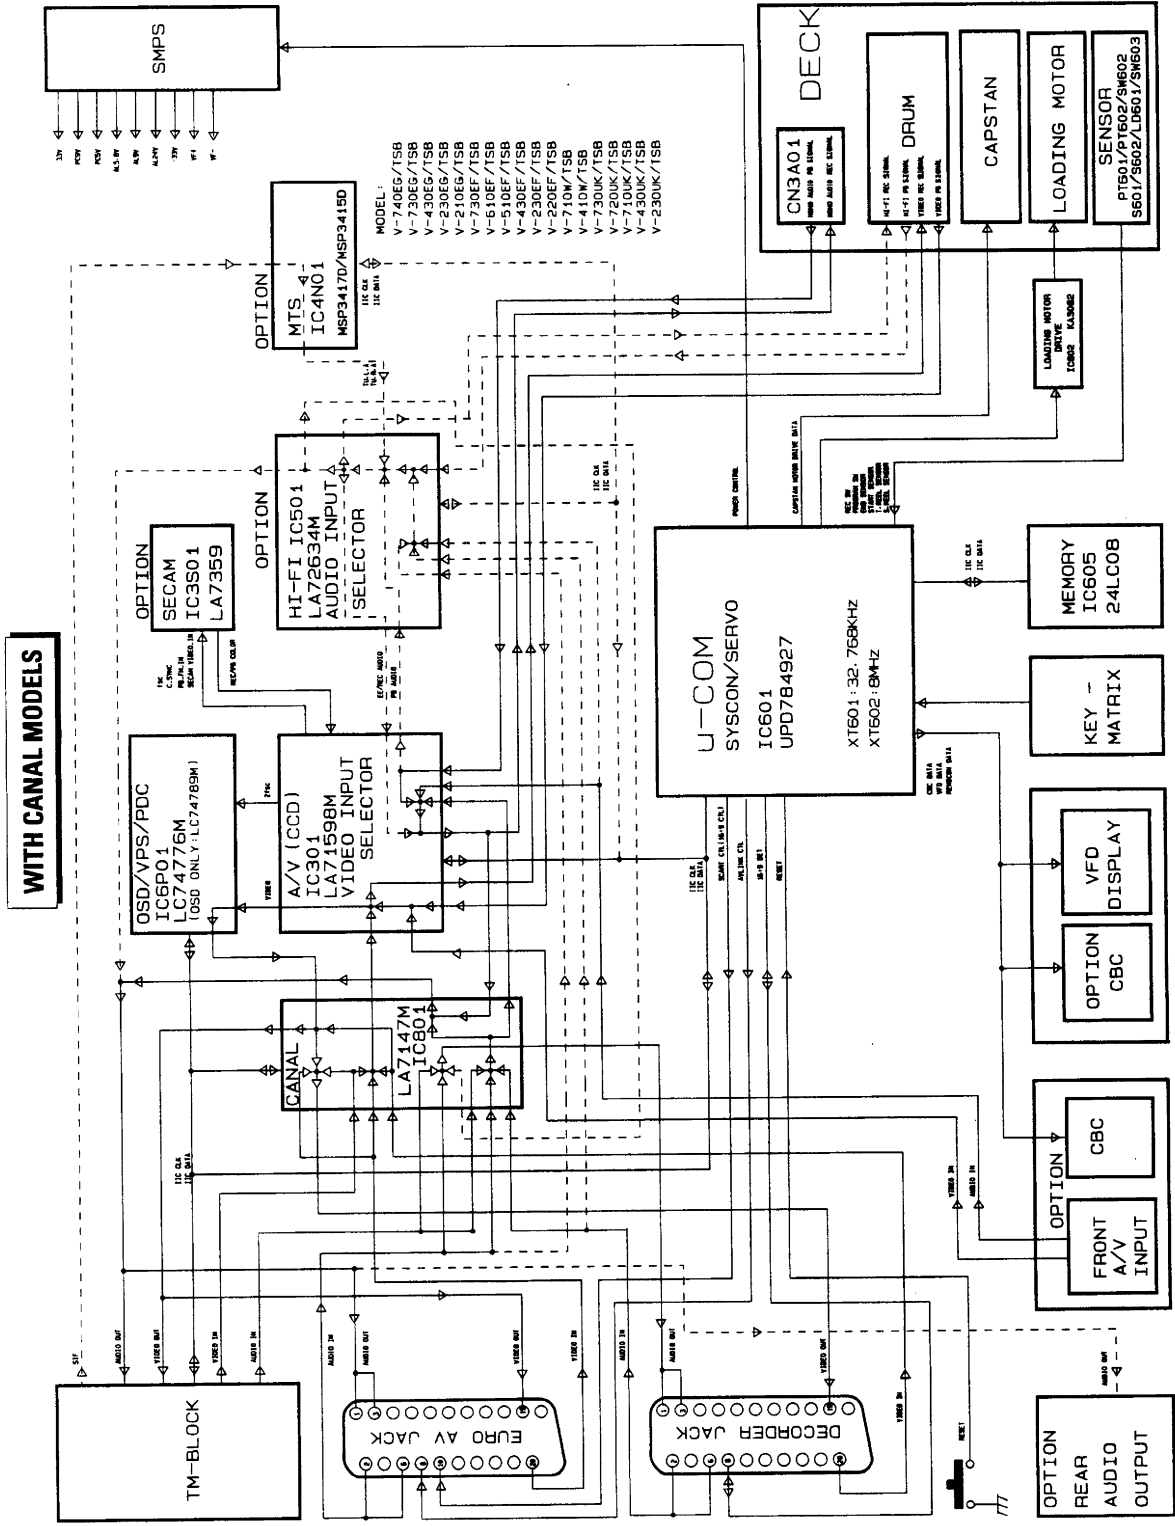





## 8. Block Diagrams

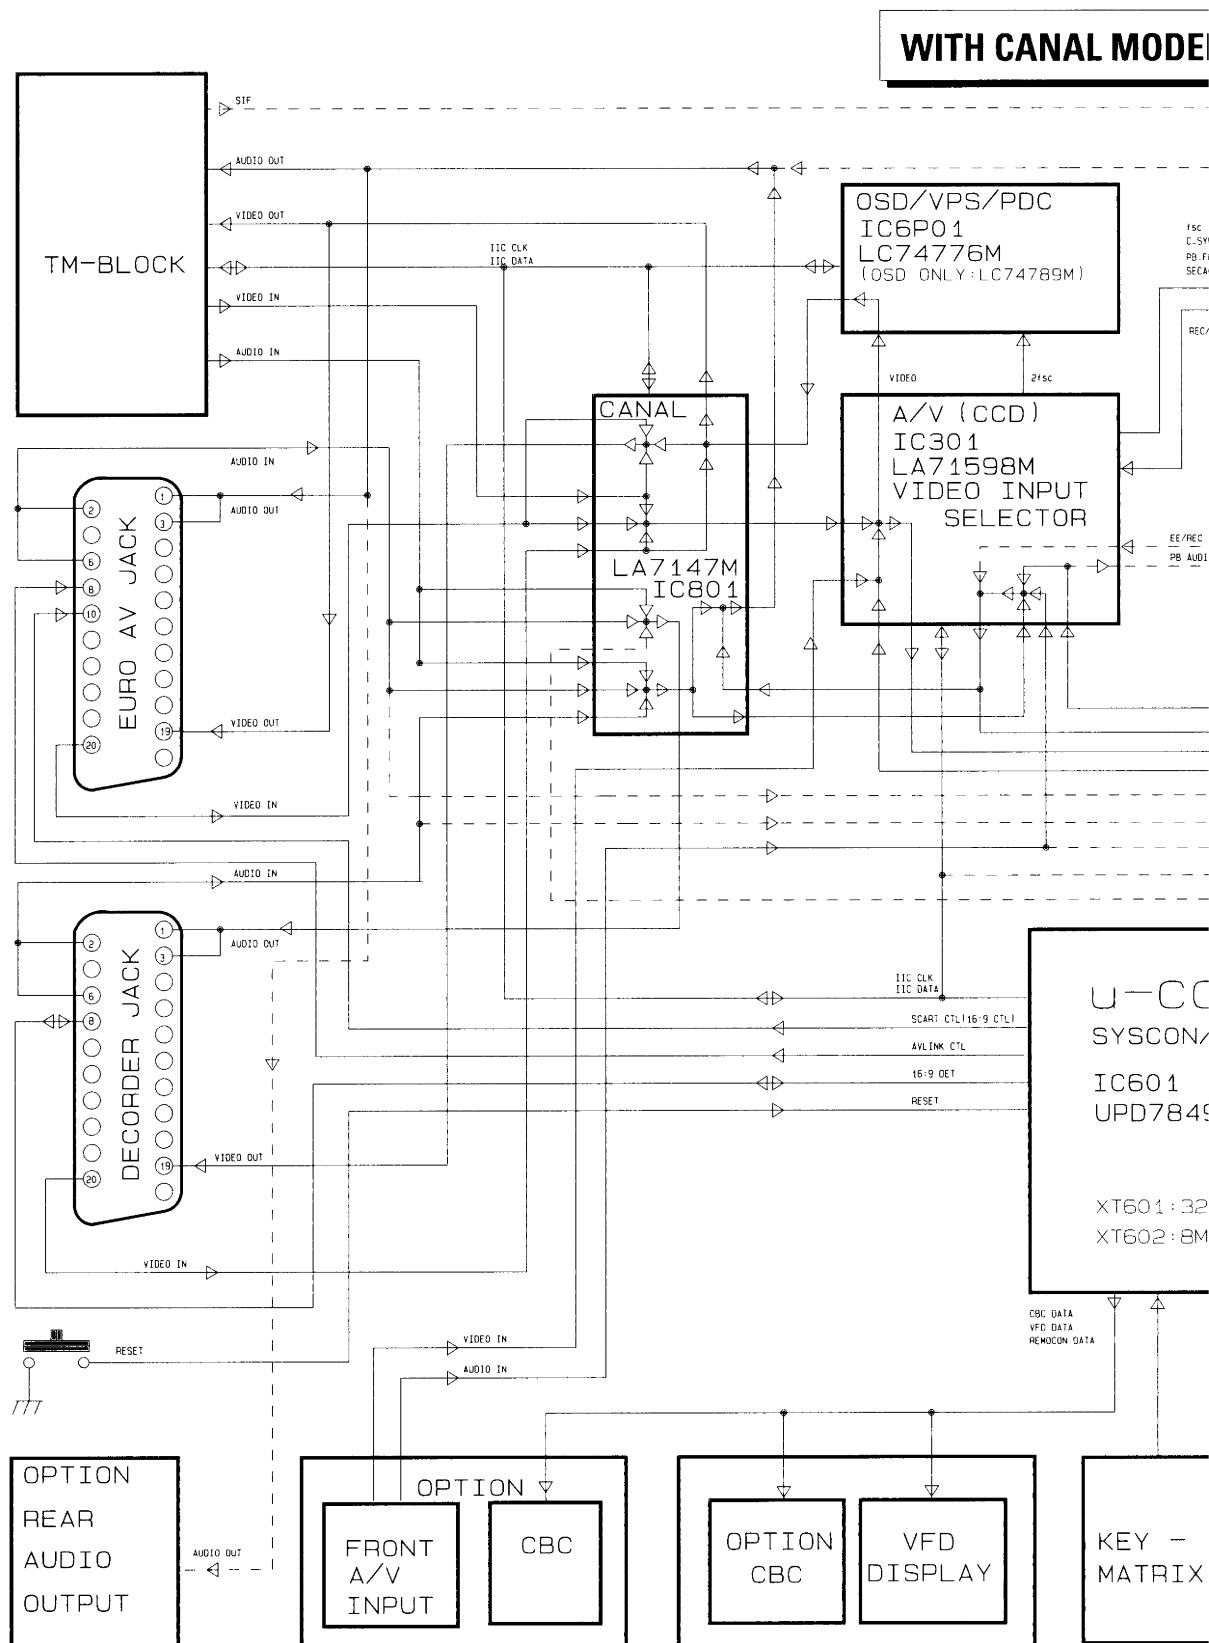


WITH CANAL MODELS

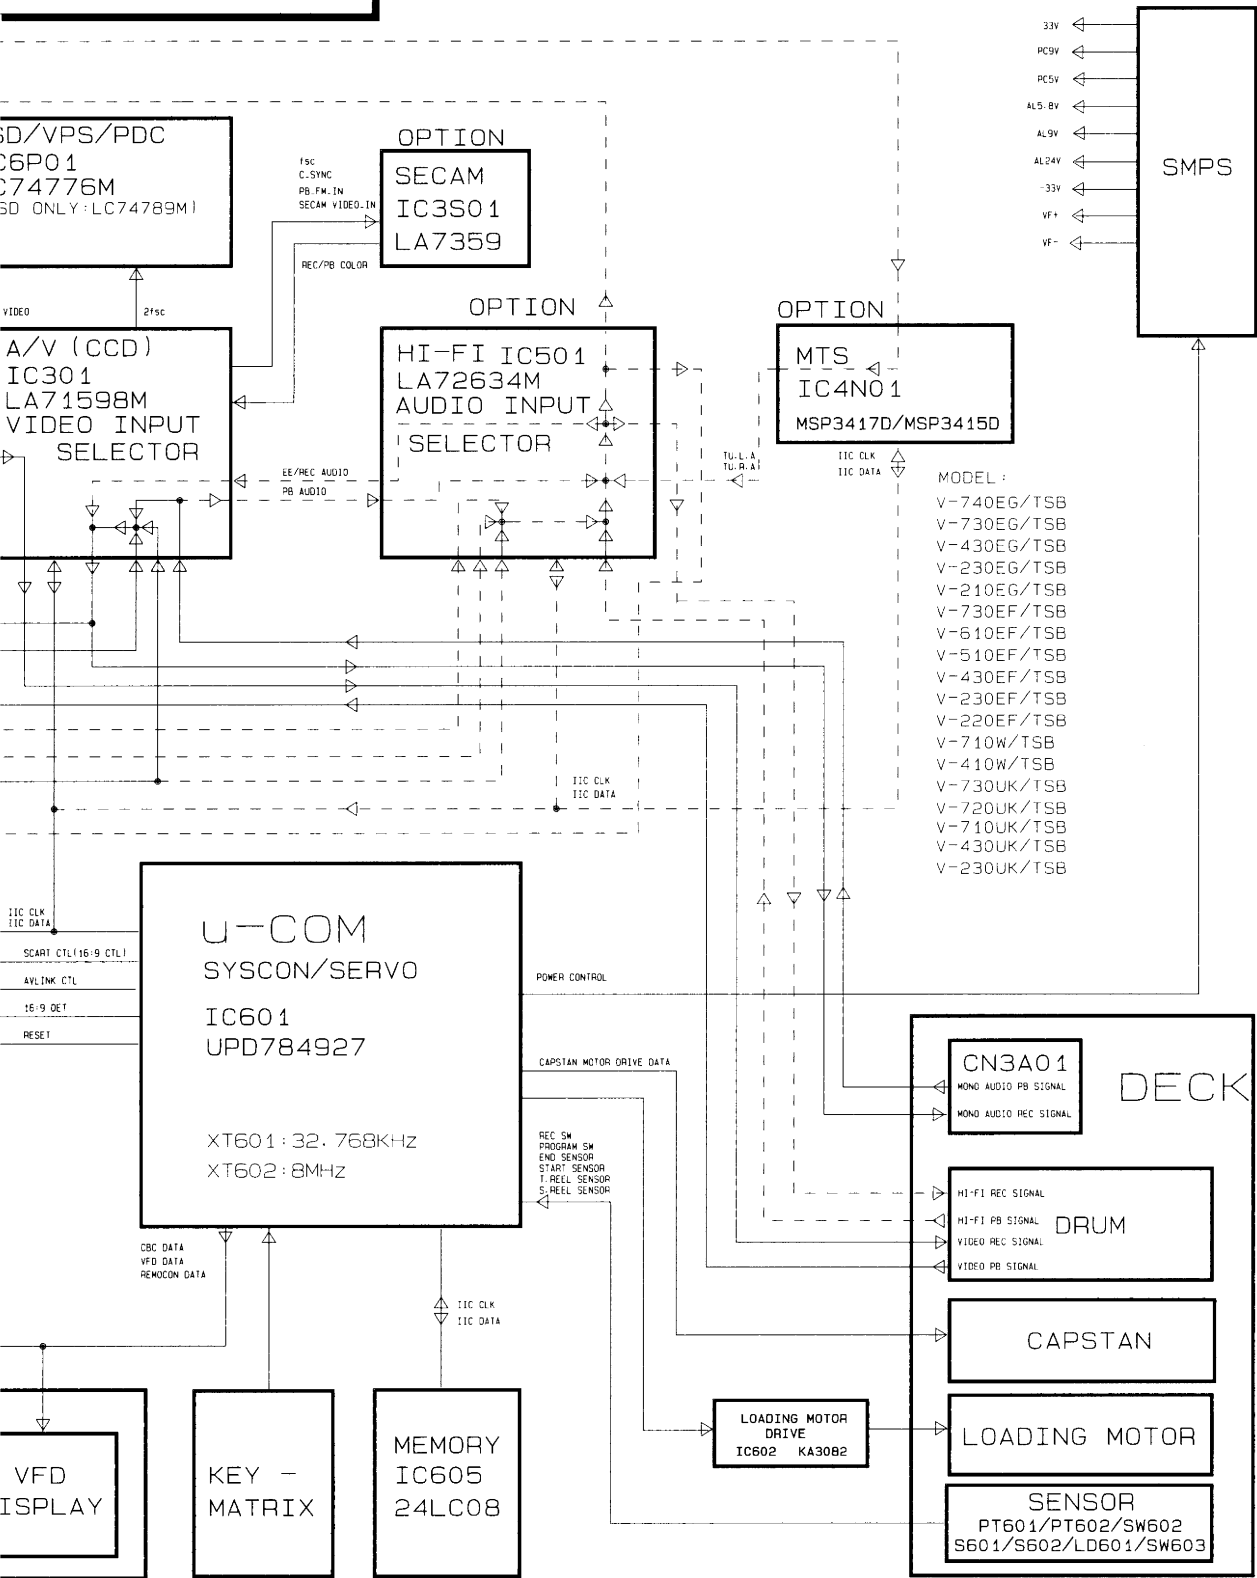


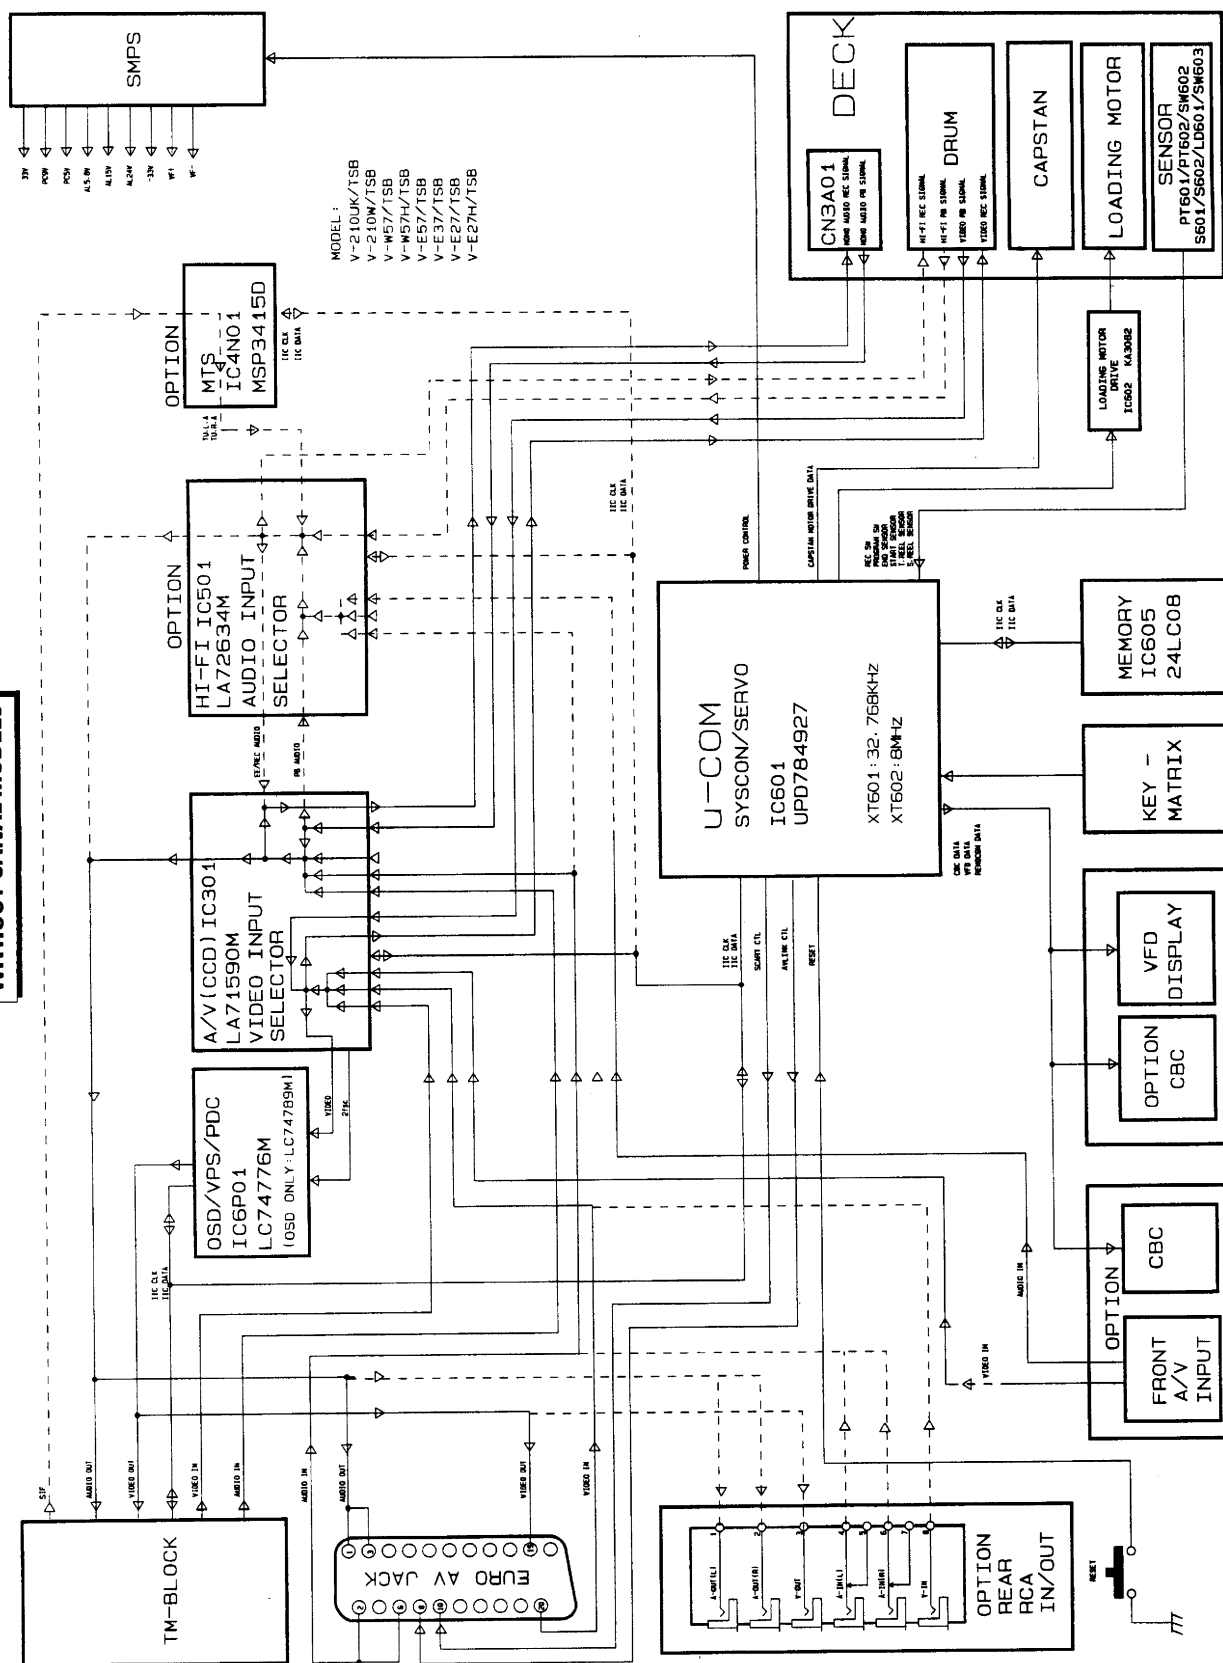

**WITHOUT CANAL MODE**

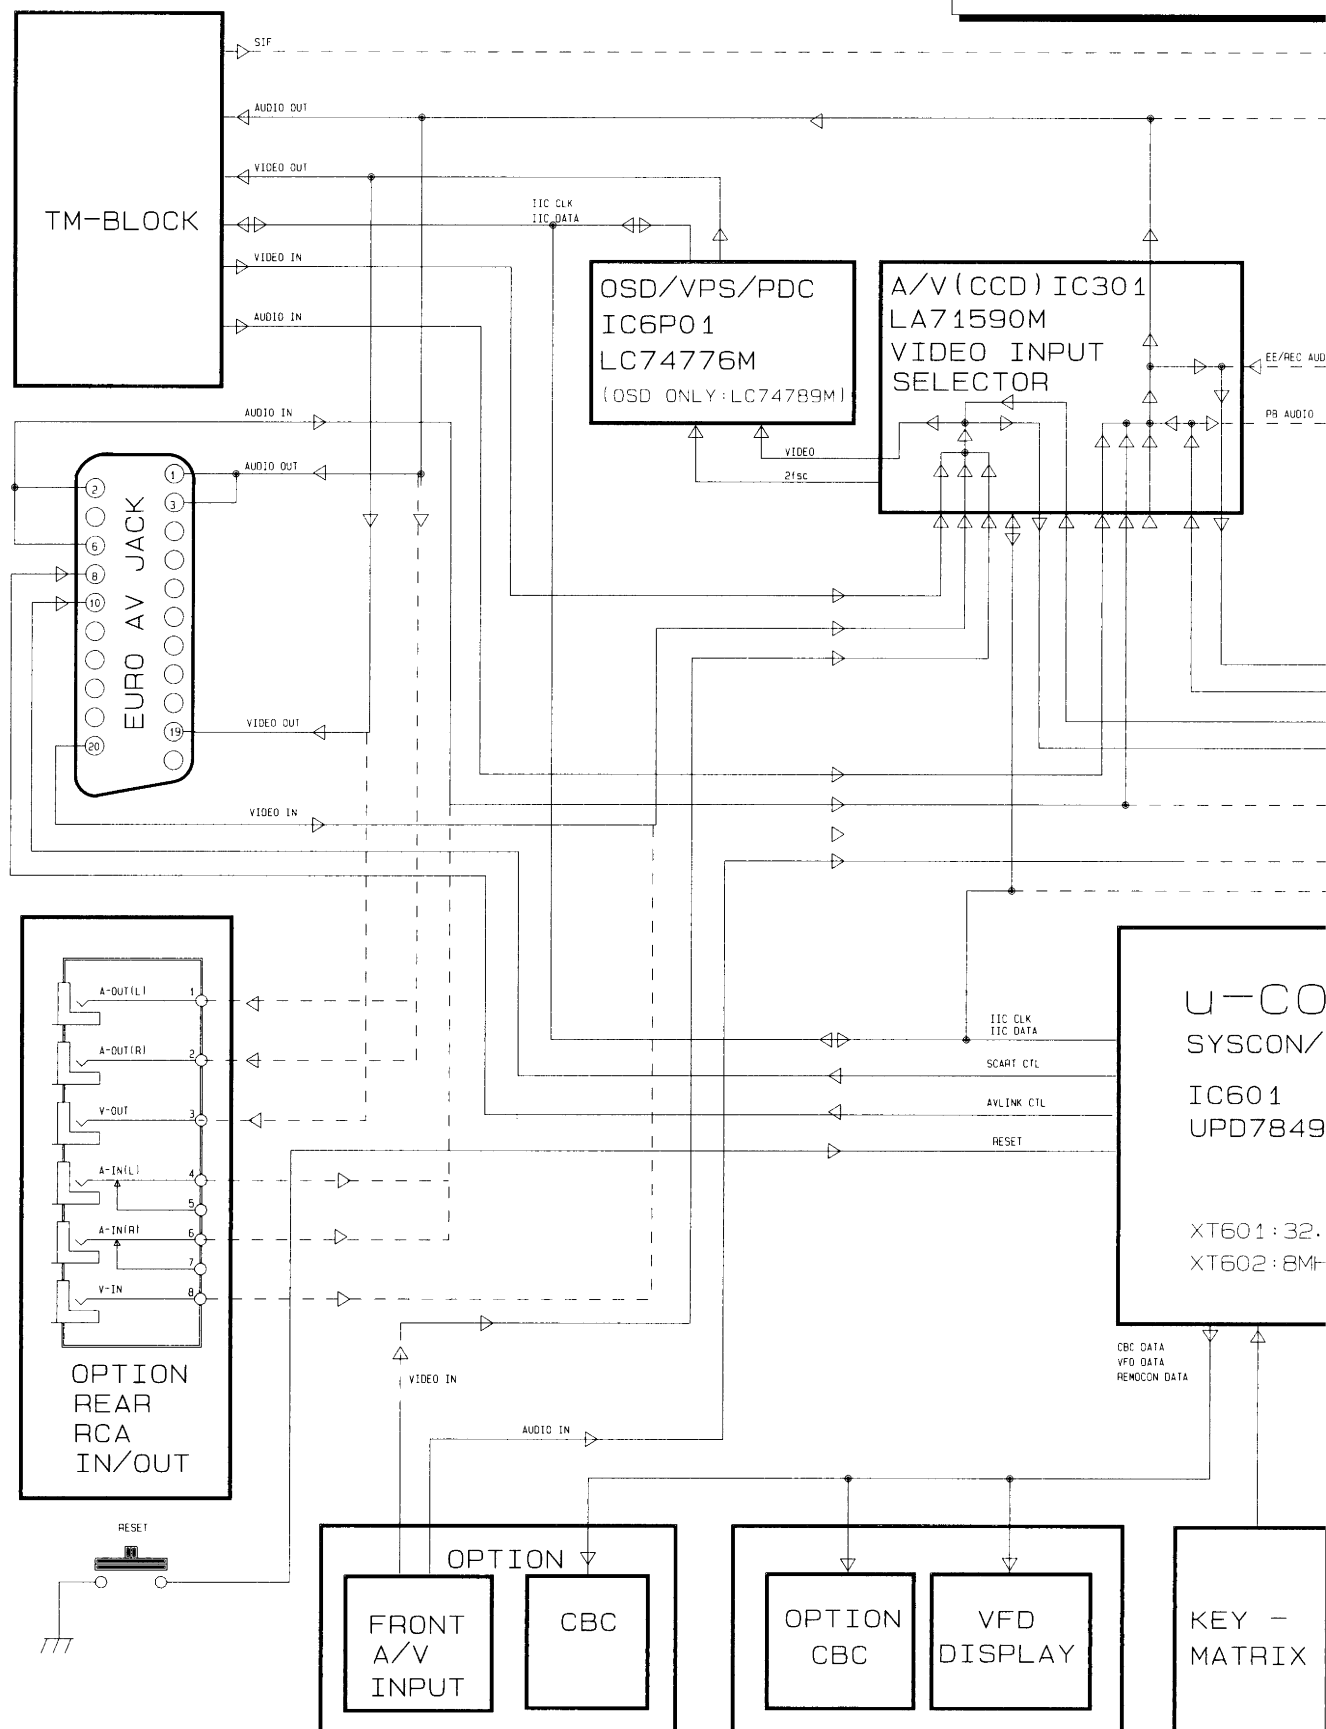

# WITHOUT CANAL MODELS

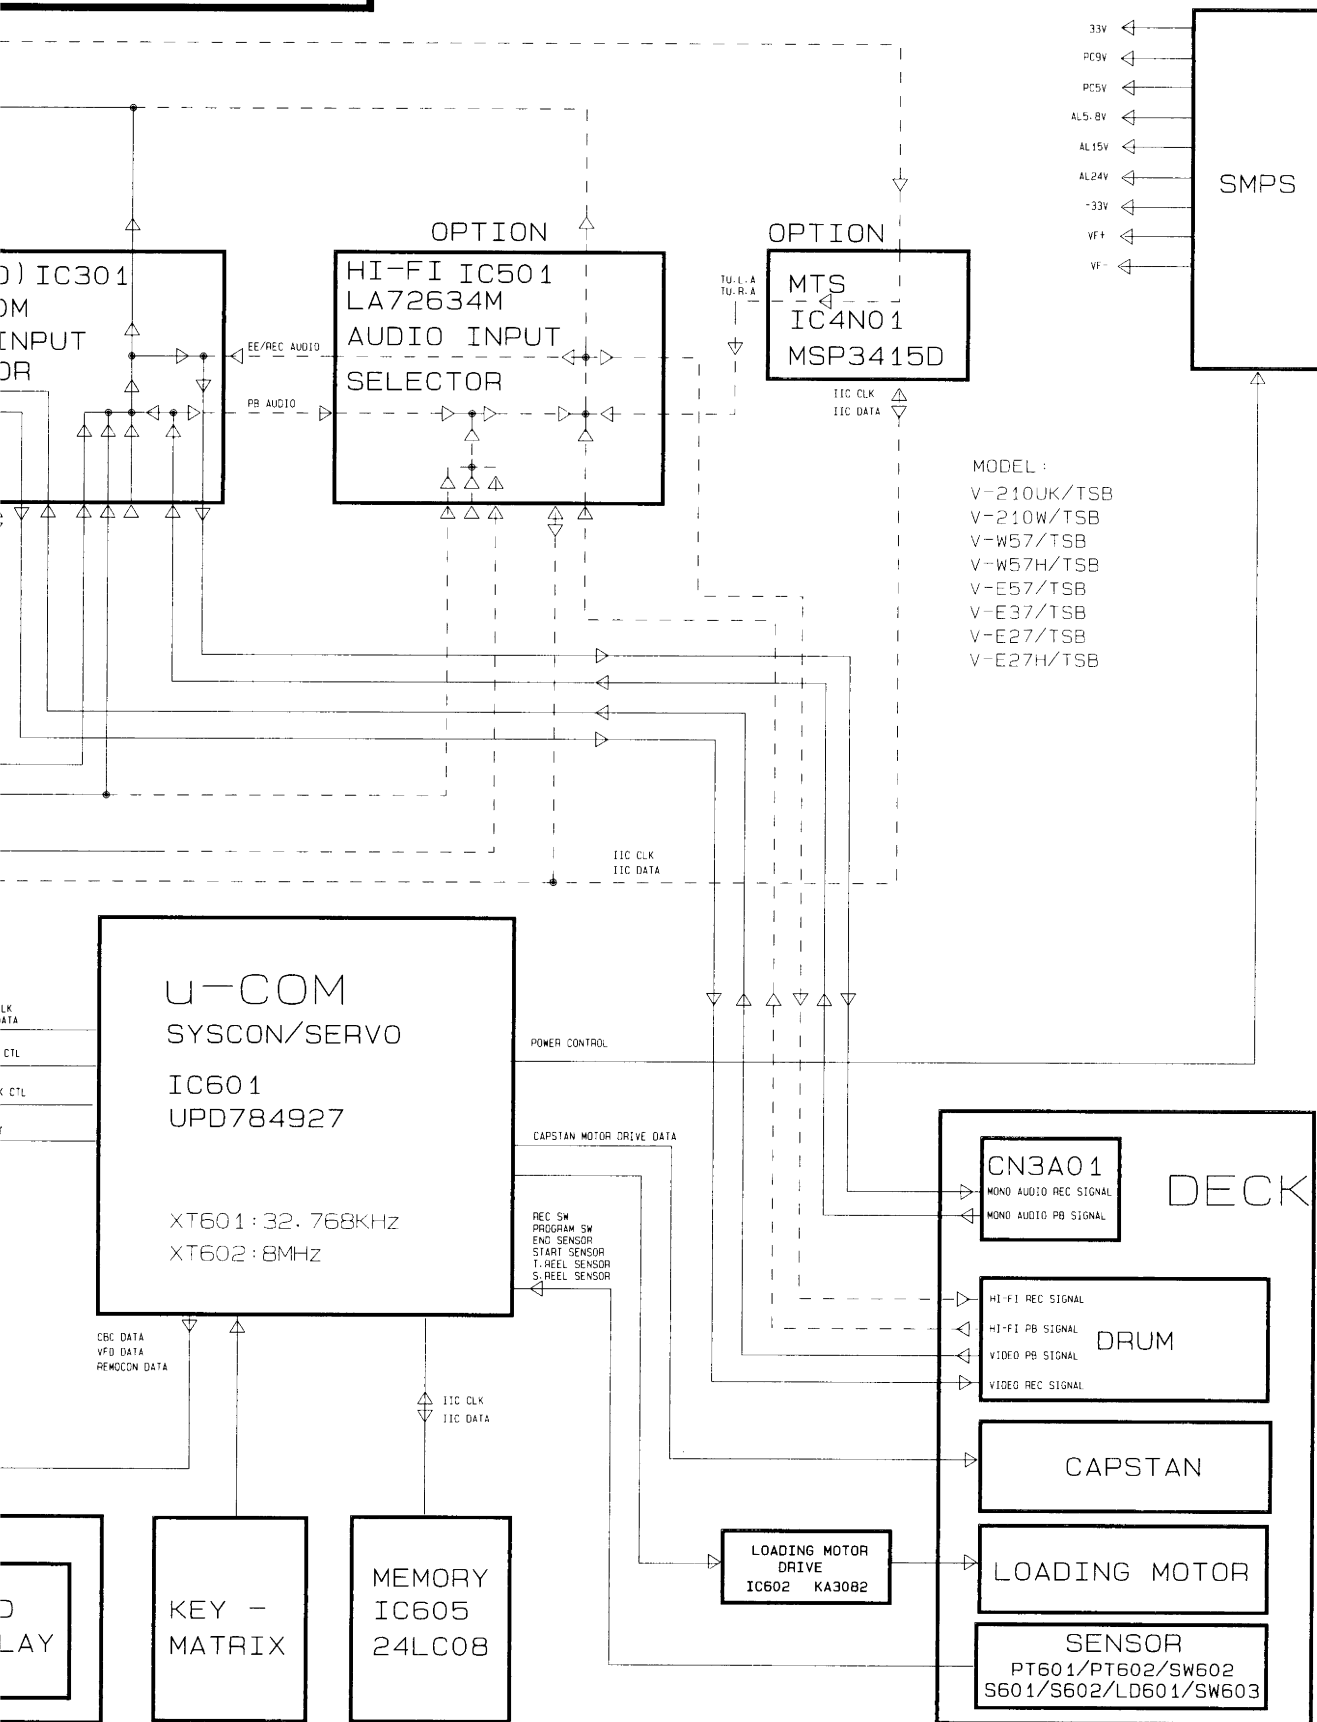

---

## 9. PCB Diagrams

---

9-1 Main	9-2
9-2 VFD (With AV-Link)	9-3
9-3 VFD (Without AV-Link)	9-3
9-4 A2/NICAM	9-3
9-5 Front Jack	9-3

---

## 9. PCB Diagrams

---

9-1 Main - - - - -	9-2
9-2 VFD (With AV-LinK) - - - - -	9-3
9-3 VFD (Without AV-LinK) - - - - -	9-3
9-4 A2/NICAM - - - - -	9-3
9-5 Front Jack - - - - -	9-3

---

--- 9-2

--- 9-3


-- 9-3

--- 9-3


--- 9-3




# 9-1 Main

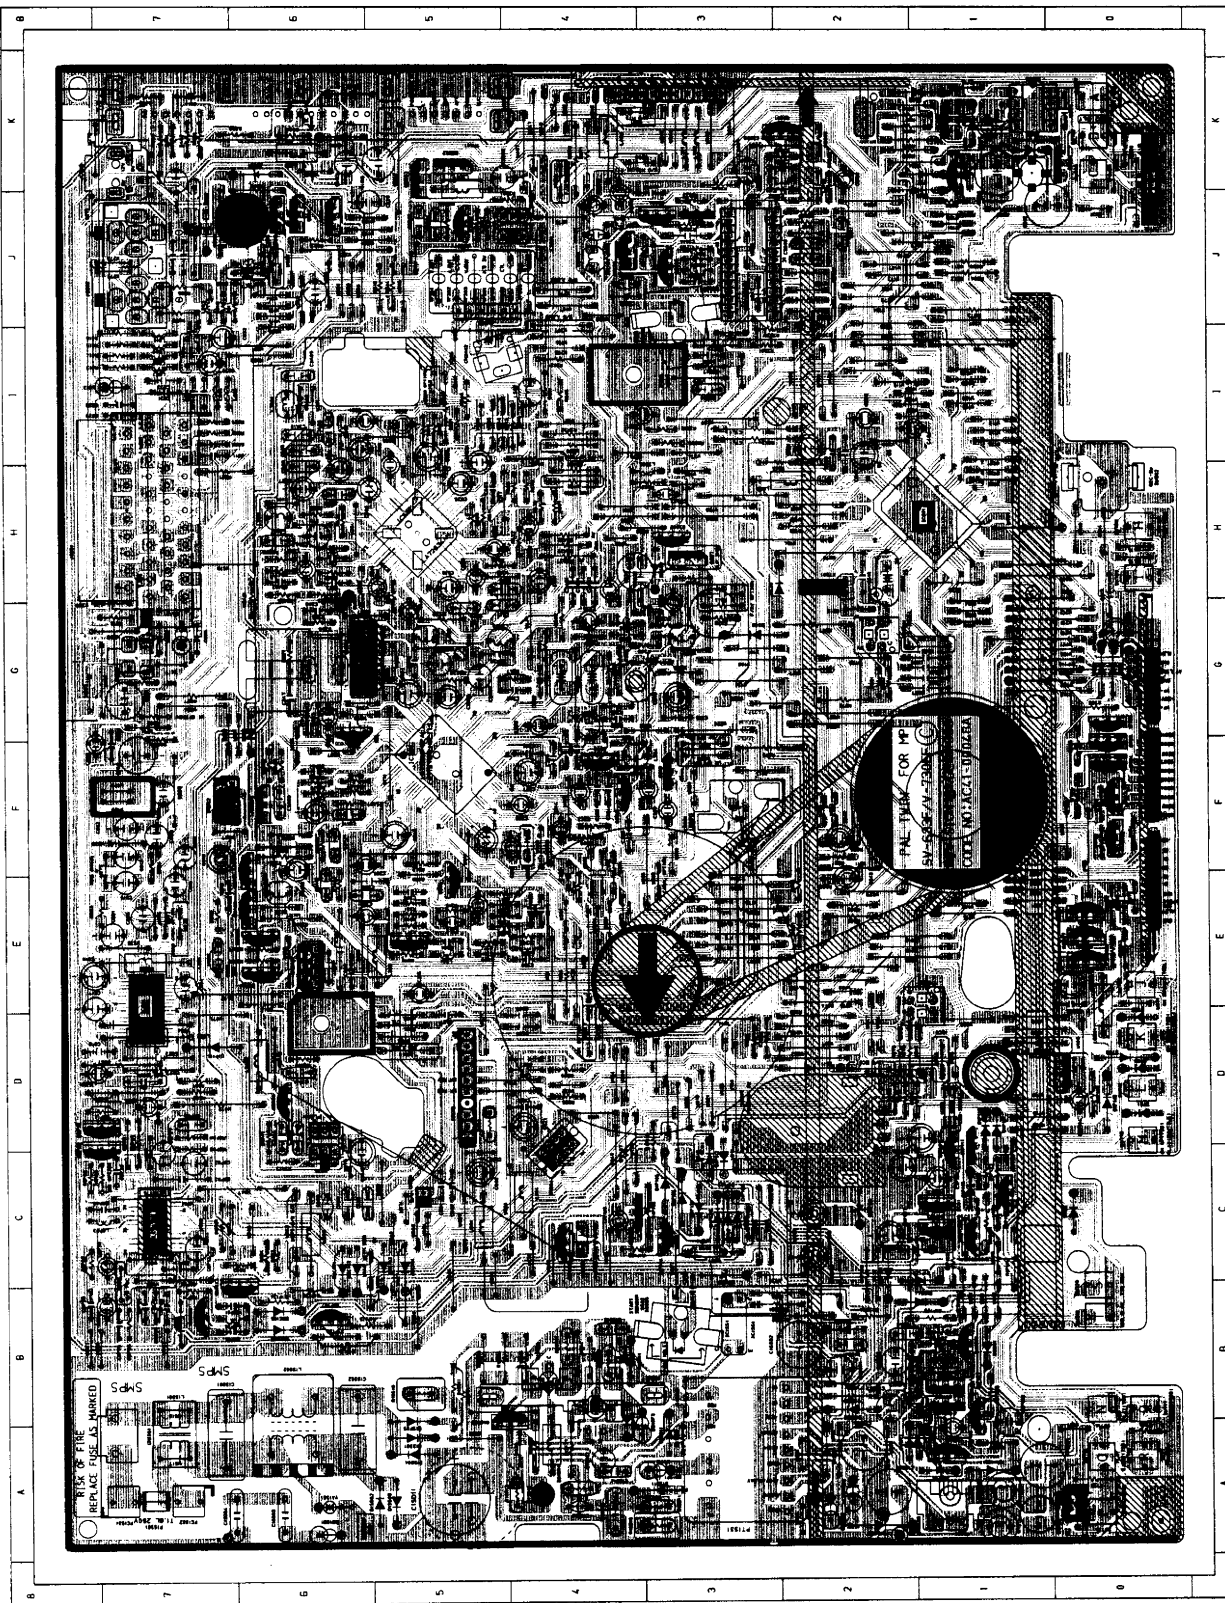


## 9-1 Main

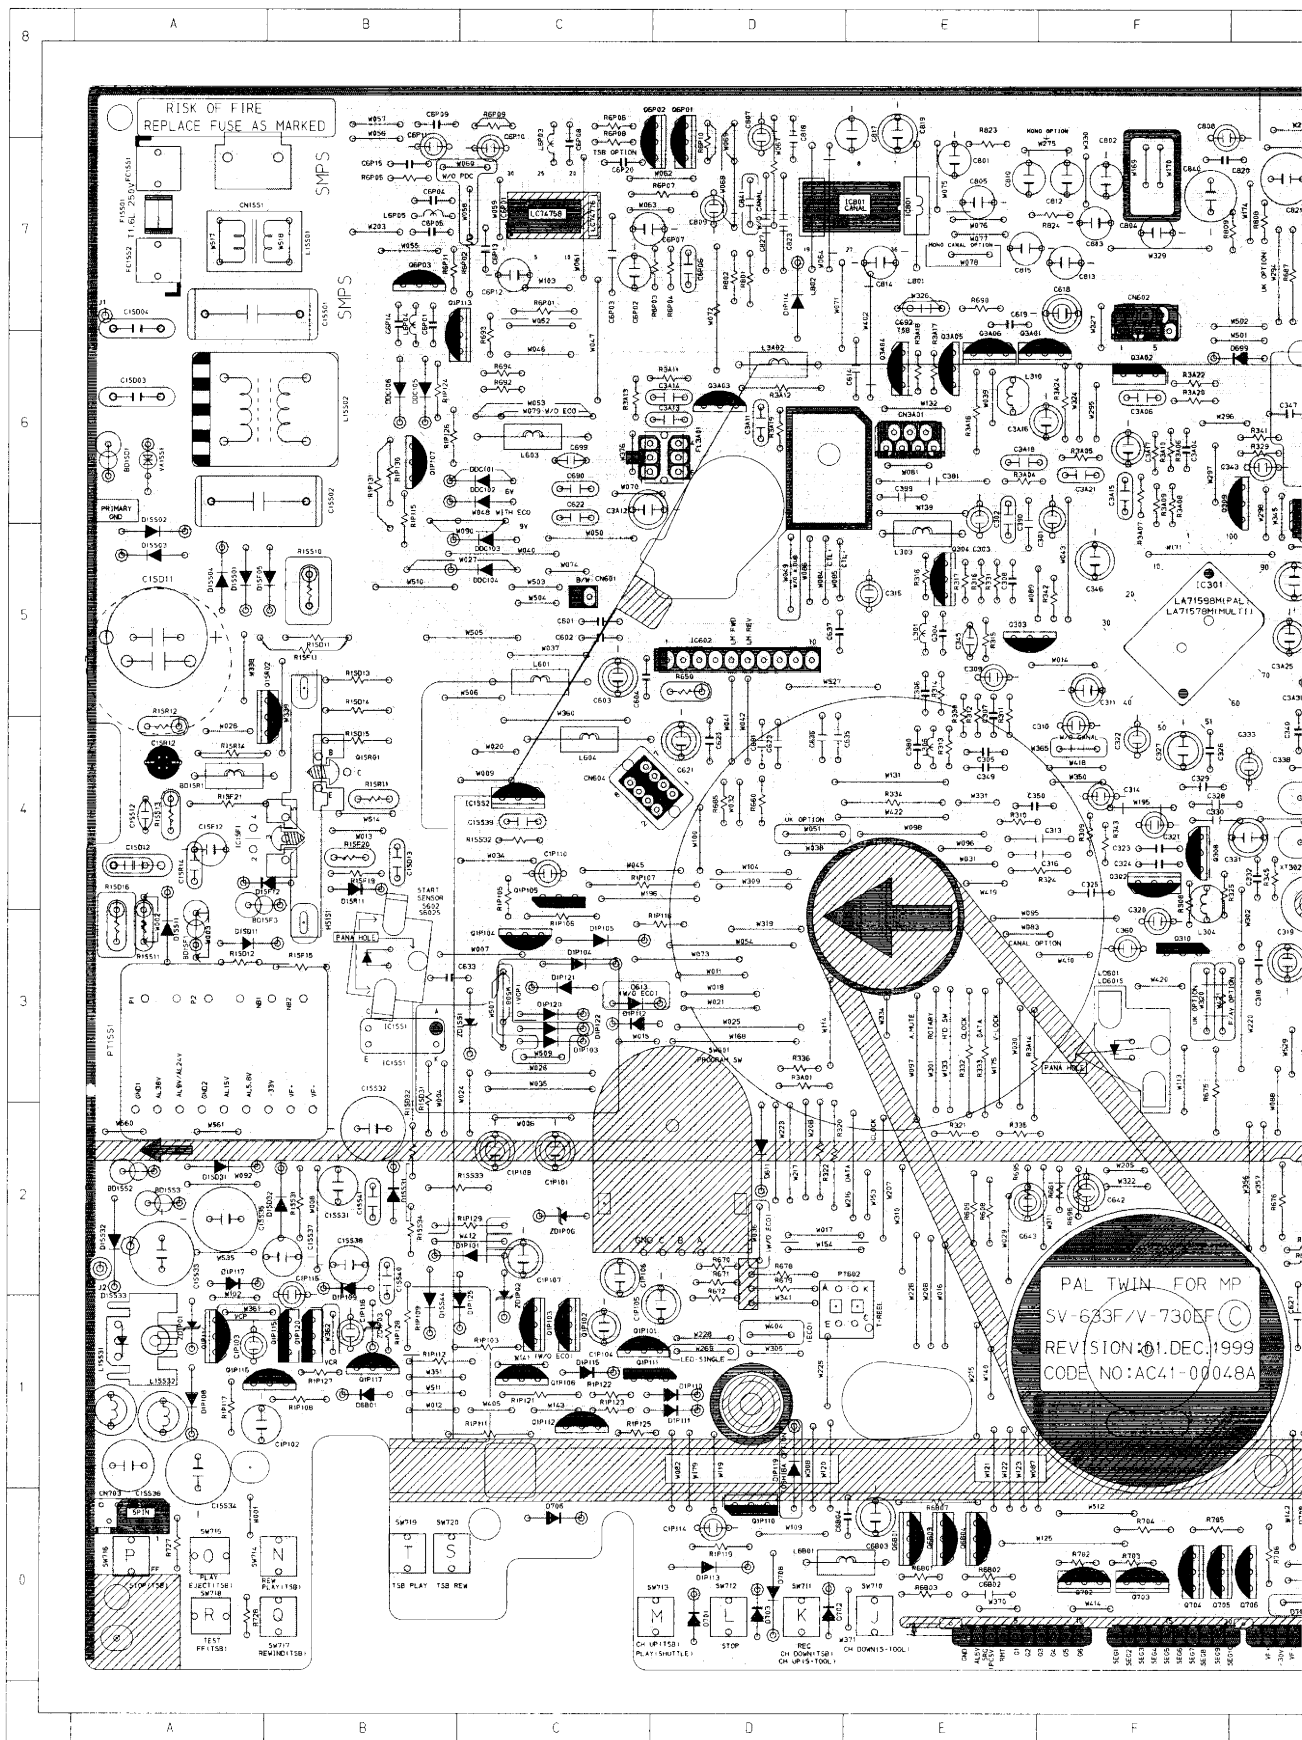

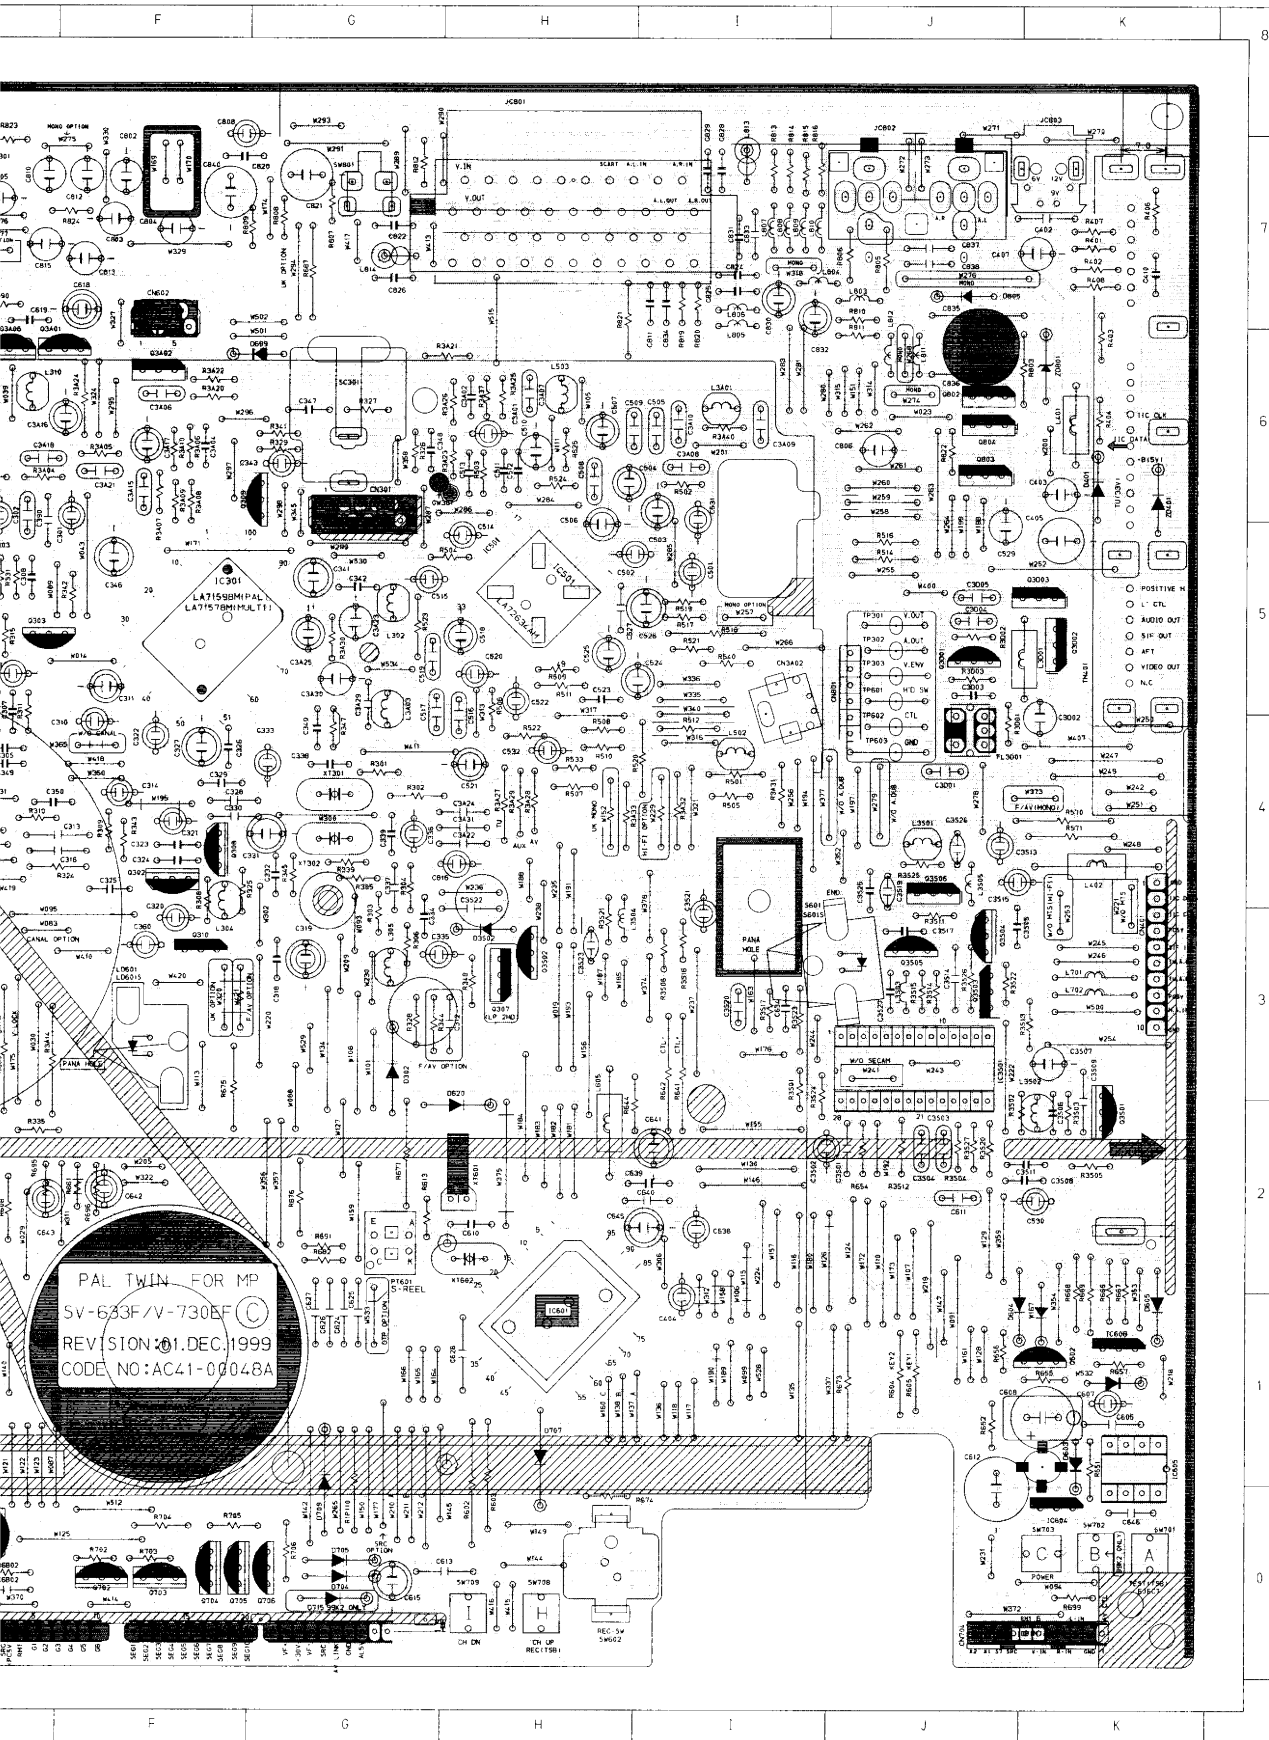




## 9-4 A2/NICAM

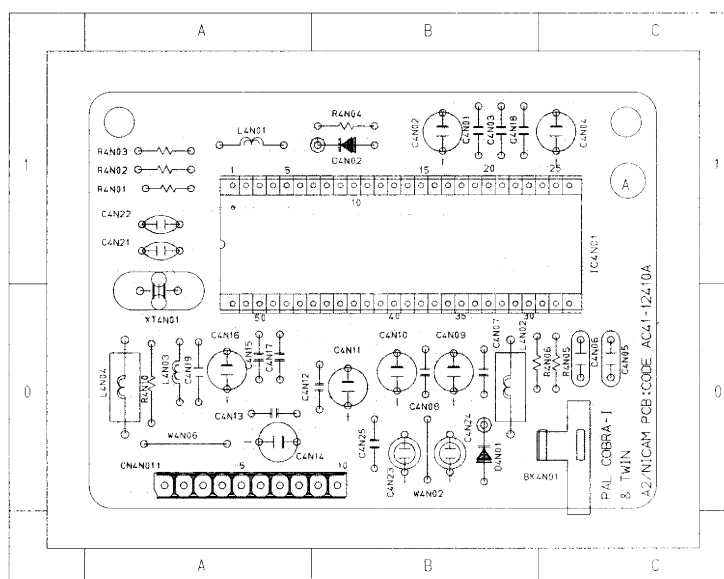

## 9-5 Front Jack

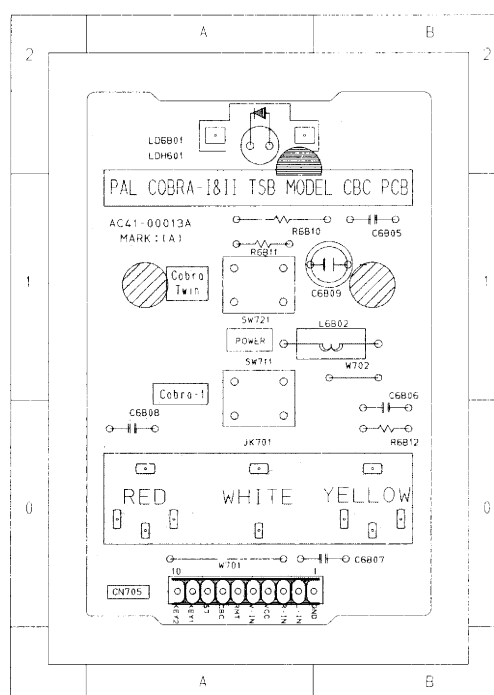

---

## 10. Schematic Diagrams

---

◆ Block Identification of Main PCB	10-2
10-1 S.M.P.S.	10-3
10-2 Power (Ecology)	10-4
10-3 Power (Non-Ecology)	10-5
10-4 System Control/Servo	10-6
10-5 Audio/Video	10-7
10-6 Hi-Fi	10-8
10-7 TM-Block	10-9
10-8 SECAM	10-10
10-9 A2/NICAM	10-11
10-10 Input-Output (2 Scart)	10-12
10-11 Input-Output (1 Scart)	10-13
10-12 OSD/VPS/PDC	10-14
10-13 OSD (Without VPS/PDC)	10-15
10-14 VFD (With AV-Link)	10-16
10-15 VFD (Without AV-Link)	10-17
10-16 Remote-Control (Multi)	10-18
10-17 Remote-Control (VCR Only)	10-19

---

## 10. Schematic Diagrams

---


◆ Block Identification of Main PCB - - - - -	10-2
10-1 S.M.P.S. - - - - -	10-3
10-2 Power (Ecology) - - - - -	10-4
10-3 Power (Non-Ecology) - - - - -	10-5
10-4 System Control/Servo - - - - -	10-6
10-5 Audio/Video - - - - -	10-7
10-6 Hi-Fi - - - - -	10-8
10-7 TM-Block - - - - -	10-9
10-8 SECAM - - - - -	10-10
10-9 A2/NICAM - - - - -	10-11
10-10 Input-Output (2 Scart) - - - - -	10-12
10-11 Input-Output (1 Scart) - - - - -	10-13
10-12 OSD/VPS/PDC - - - - -	10-14
10-13 OSD (Without VPS/PDC) - - - - -	10-15
10-14 VFD (With AV-Link) - - - - -	10-16
10-15 VFD (Without AV-Link) - - - - -	10-17
10-16 Remote-Control (Multi) - - - - -	10-18
10-17 Remote-Control (VCR Only) - - - - -	10-19

- 
- 
- - 10-2
  - 10-3
  - 10-4
  - 10-5
  - 10-6
  - 10-7
  - - 10-8
  - 10-9
  - - 10-10
  - 10-11
  - 10-12
  - 10-13
  - 10-14
  - 10-15
  - 10-16
  - 10-17
  - 10-18
  - 10-19




**Note**

For schematic Diagram  
- Resistors are in ohms, /RW unless otherwise noted.

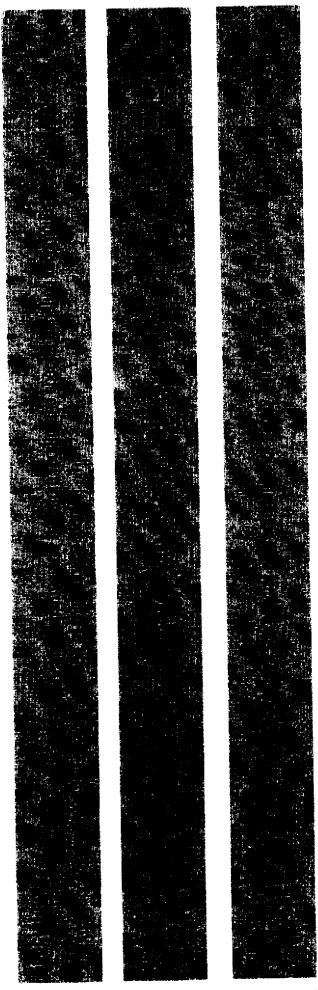

◆ Block Identification of Main PCB

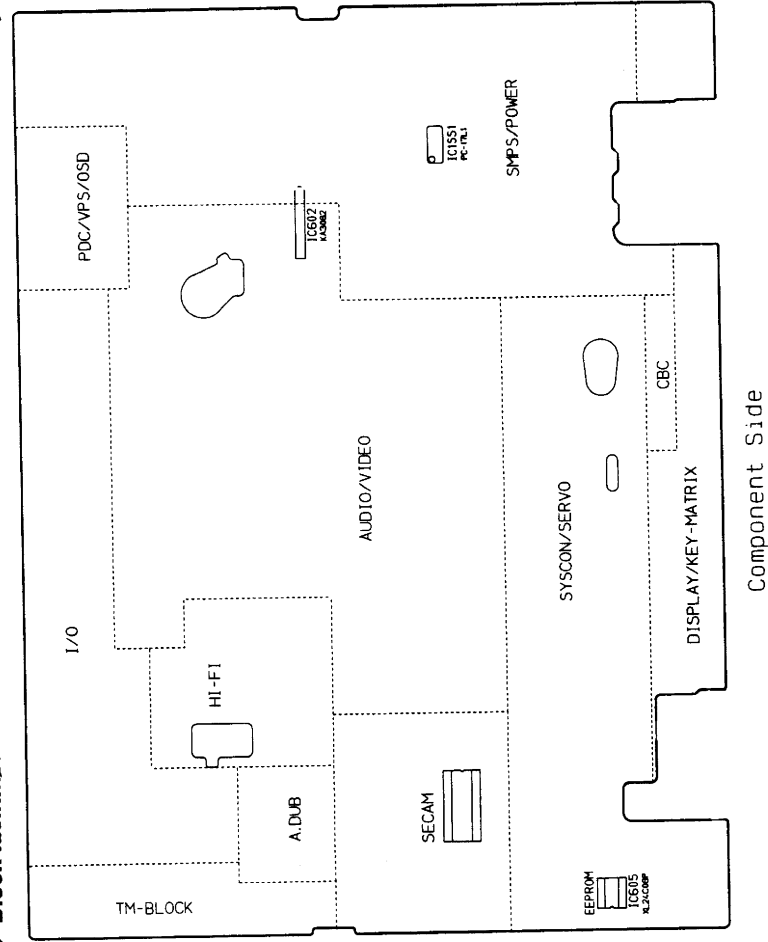

### Note

For schematic Diagram

- Resistors are in ohms, 1/8W unless otherwise noted.


#### Special note :

Most semiconductor devices are electrostatically sensitive and therefore require the special handling techniques described under the "electrostatically sensitive (ES) devices" section of this service manual.


#### Note :

Do not use the part number shown on this drawing for ordering. The correct part number is shown in the parts list (may be slightly different or amended since this drawing was prepared).


#### Important safety notices :

Components identified with the mark  have the special characteristics for safety. When replacing any of these components. Use only the same type.

### ◆ Block Identification of Main PCB

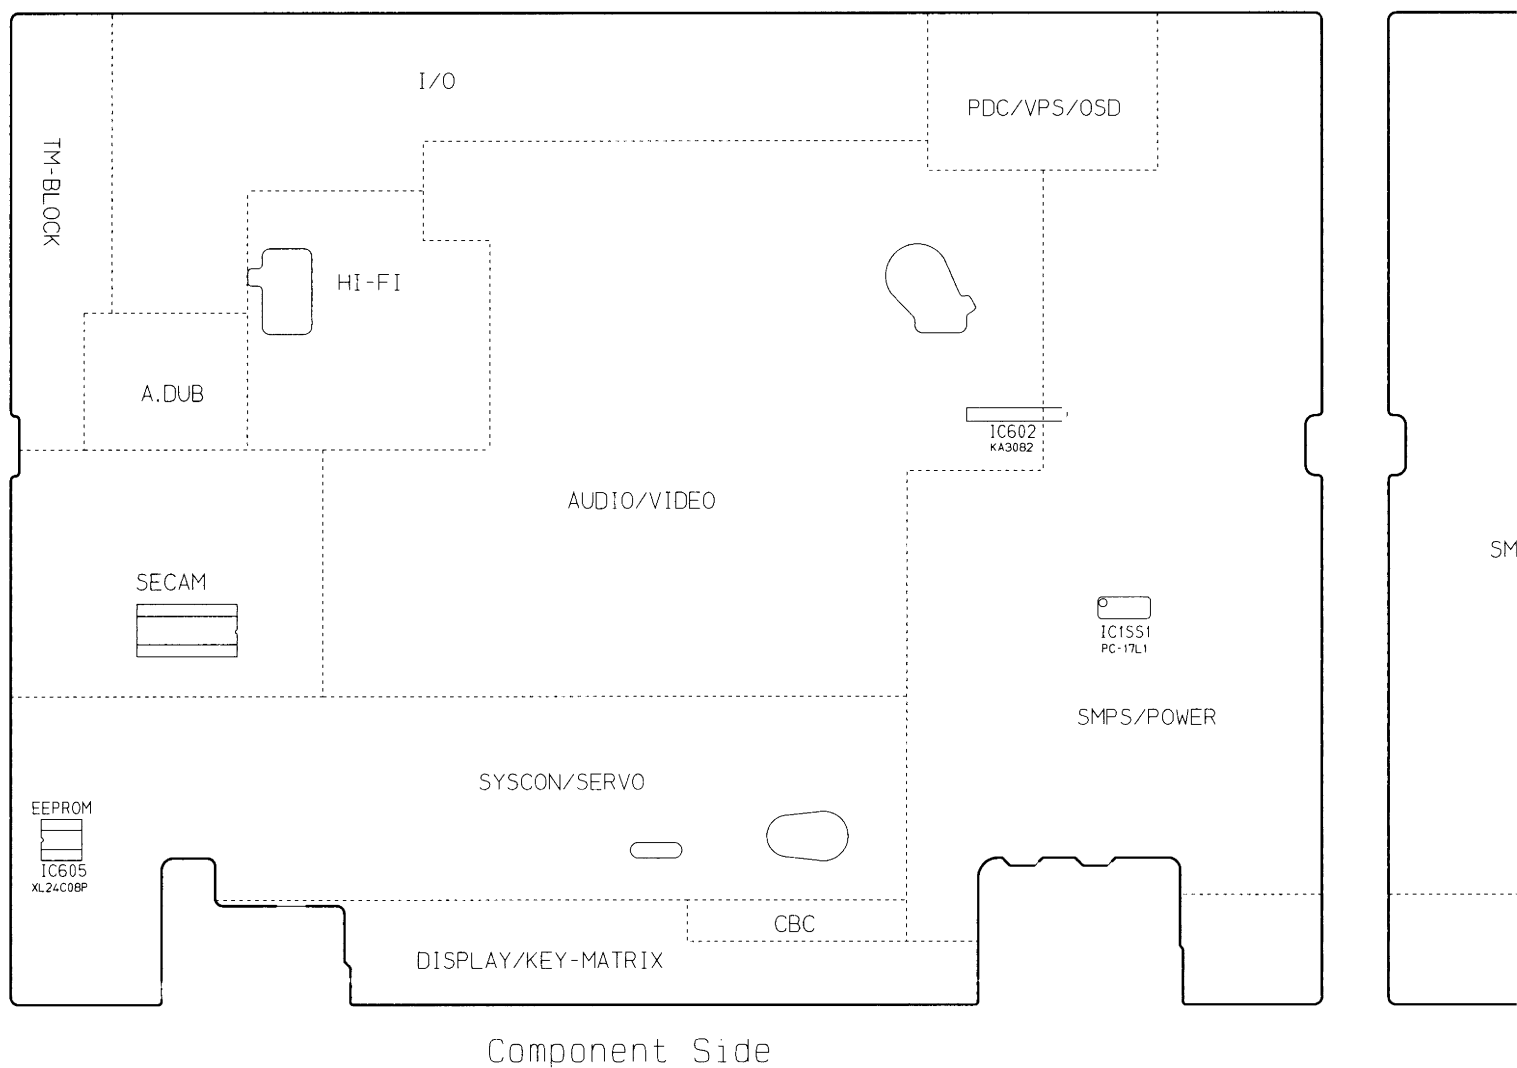


d under the  
slightly different  
ents.

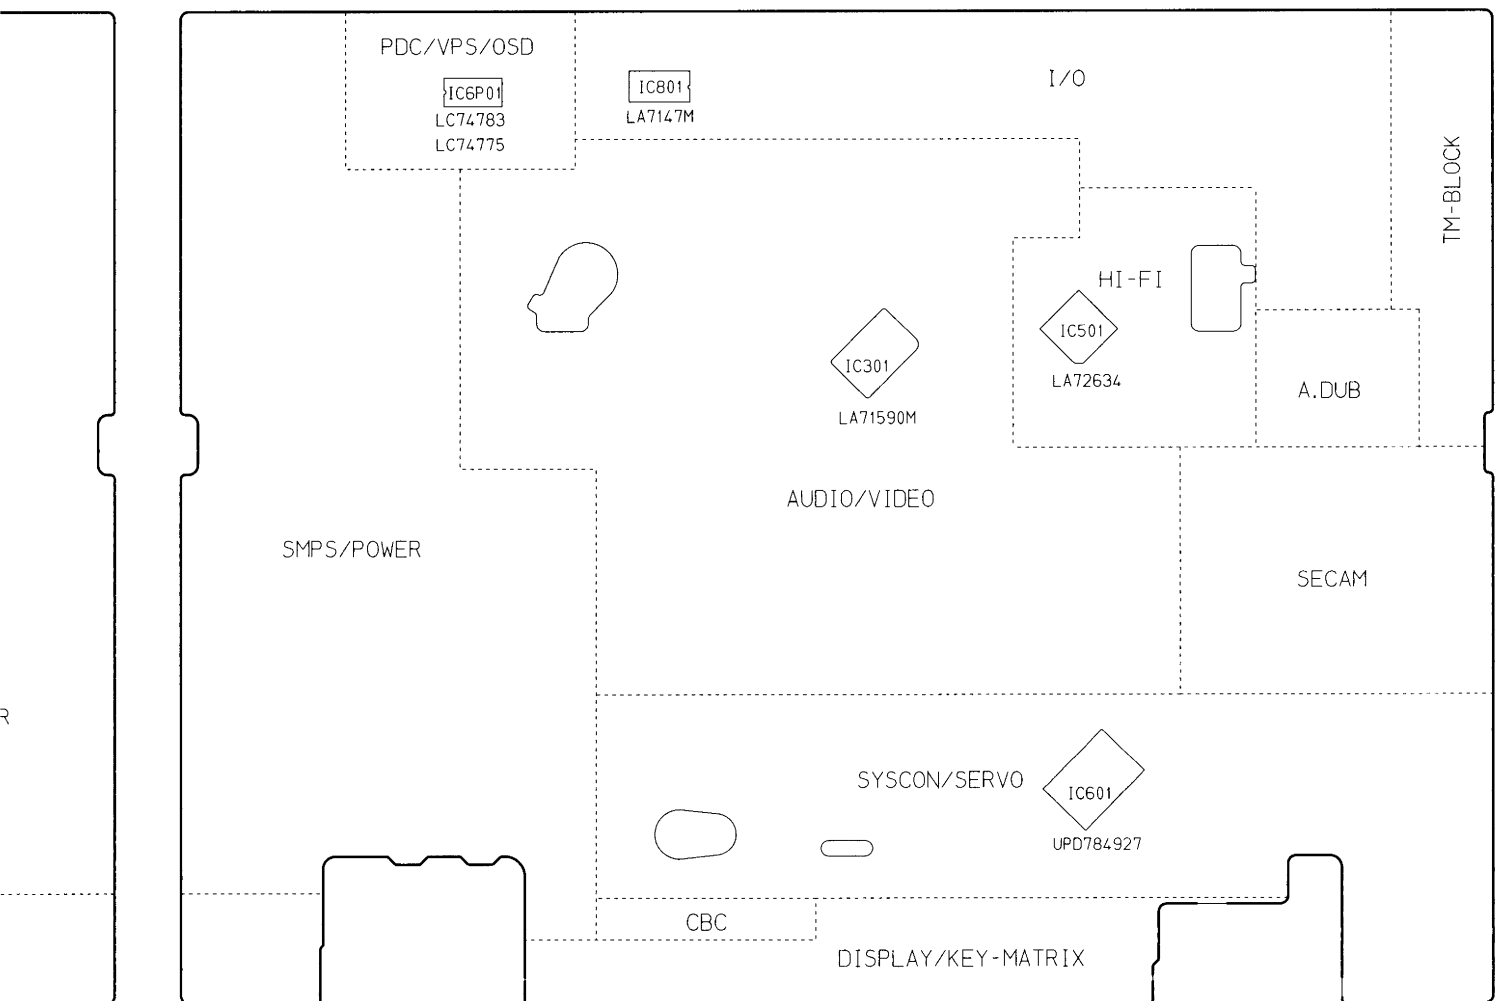

Conductor Side




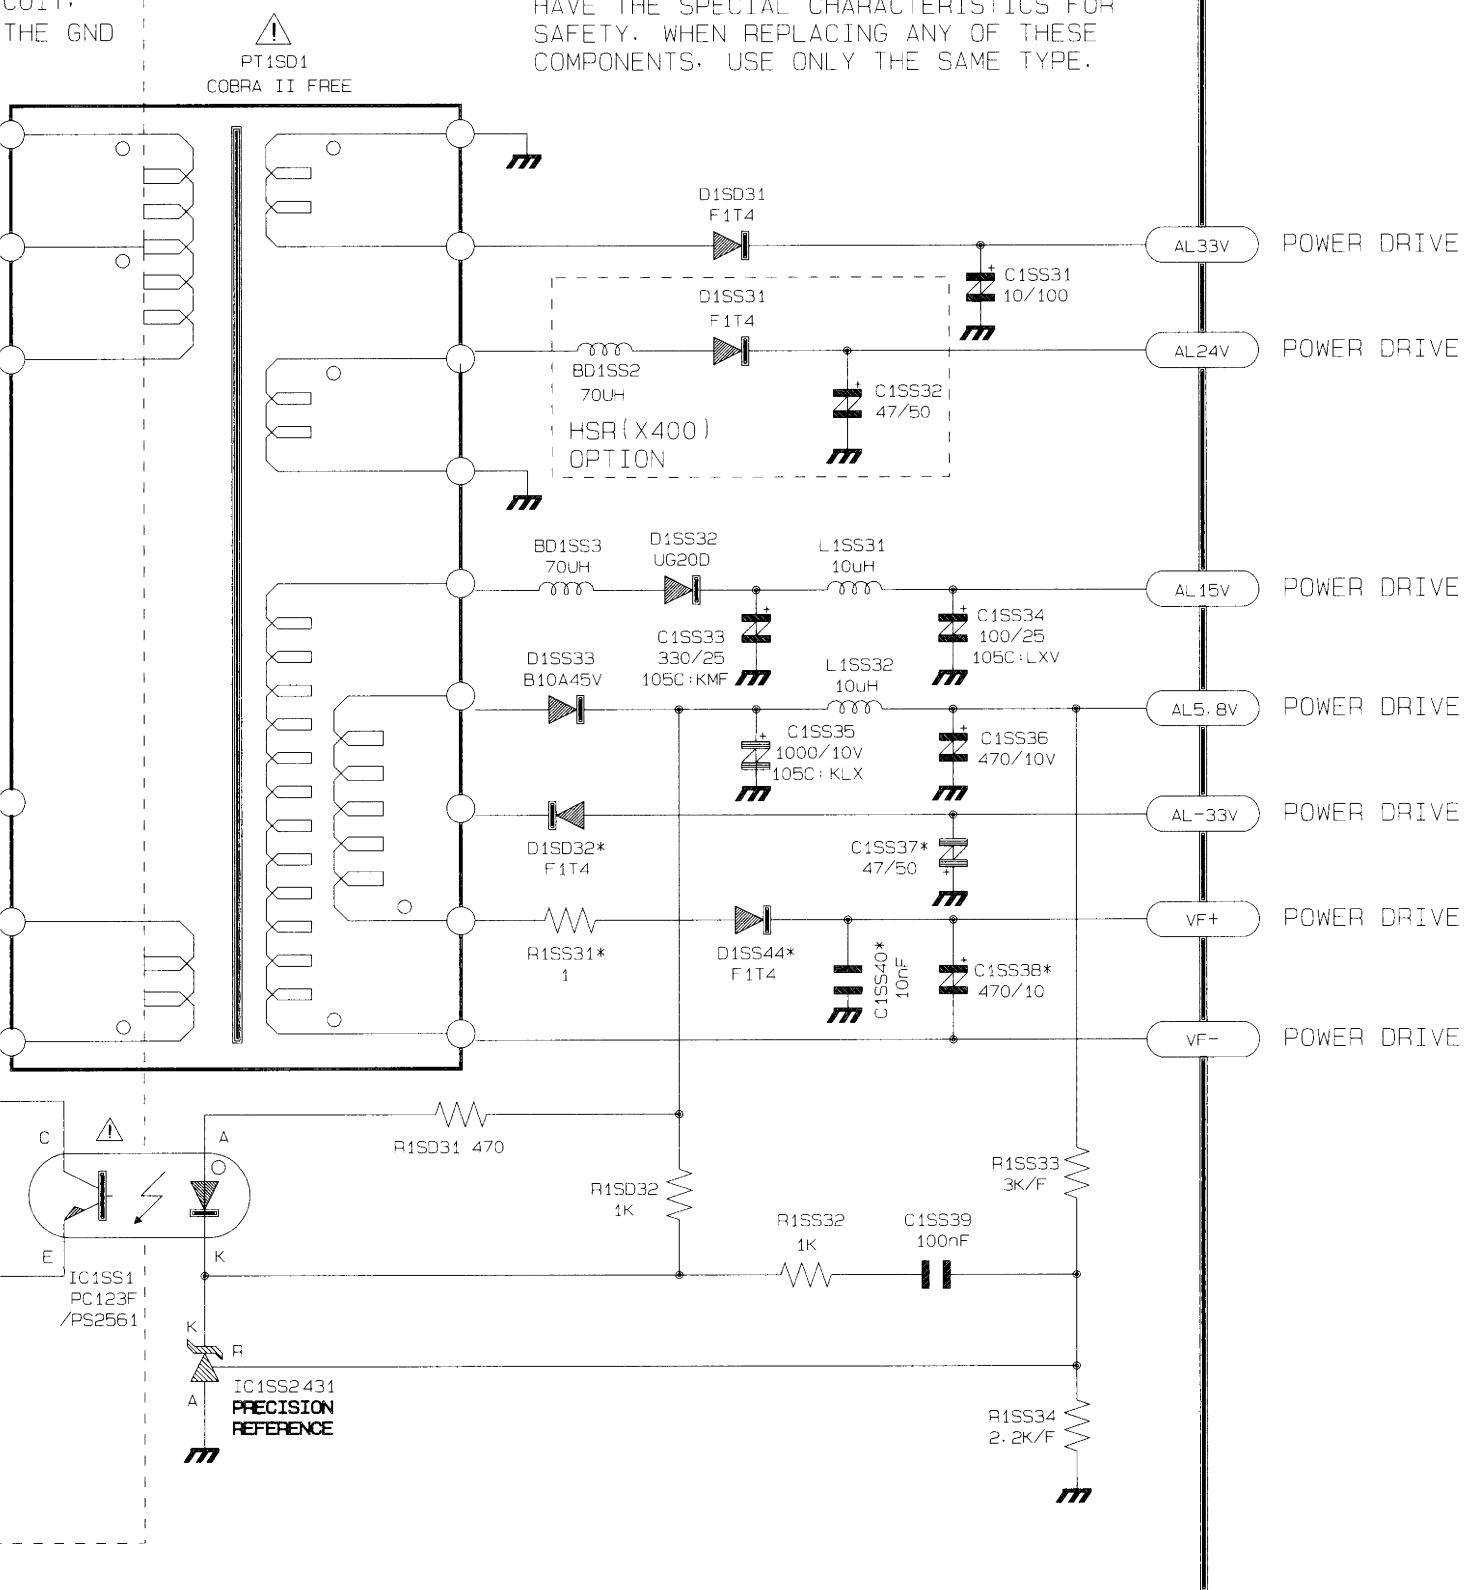
**10-1 S.M.P.S.**

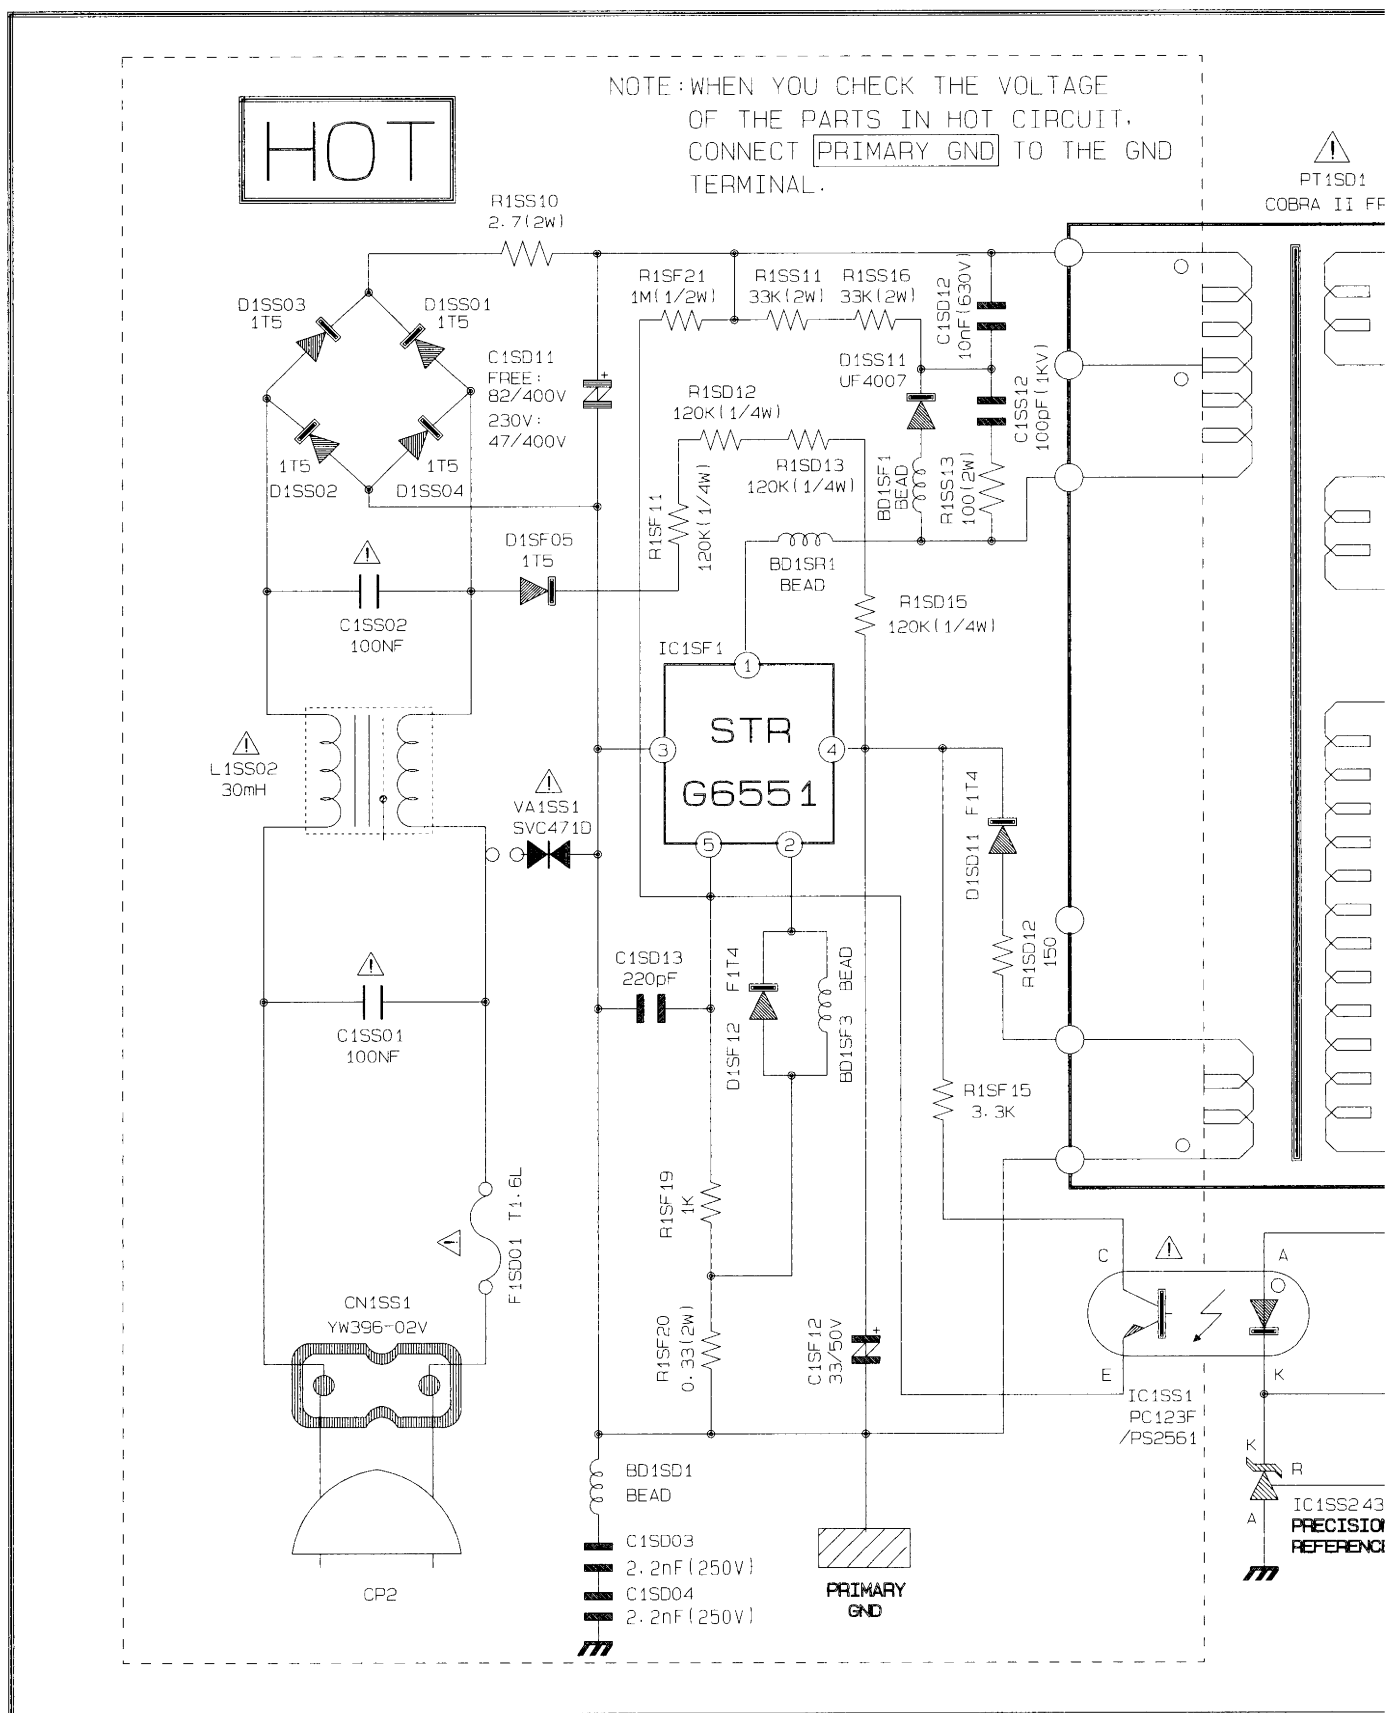


AGE  
CUI,  
THE GND

# IMPORTANT SAFETY NOTICE

COMPONENTS IDENTIFIED WITH THE MARK  HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SAME TYPE.




## 10-2 Power (Ecology)

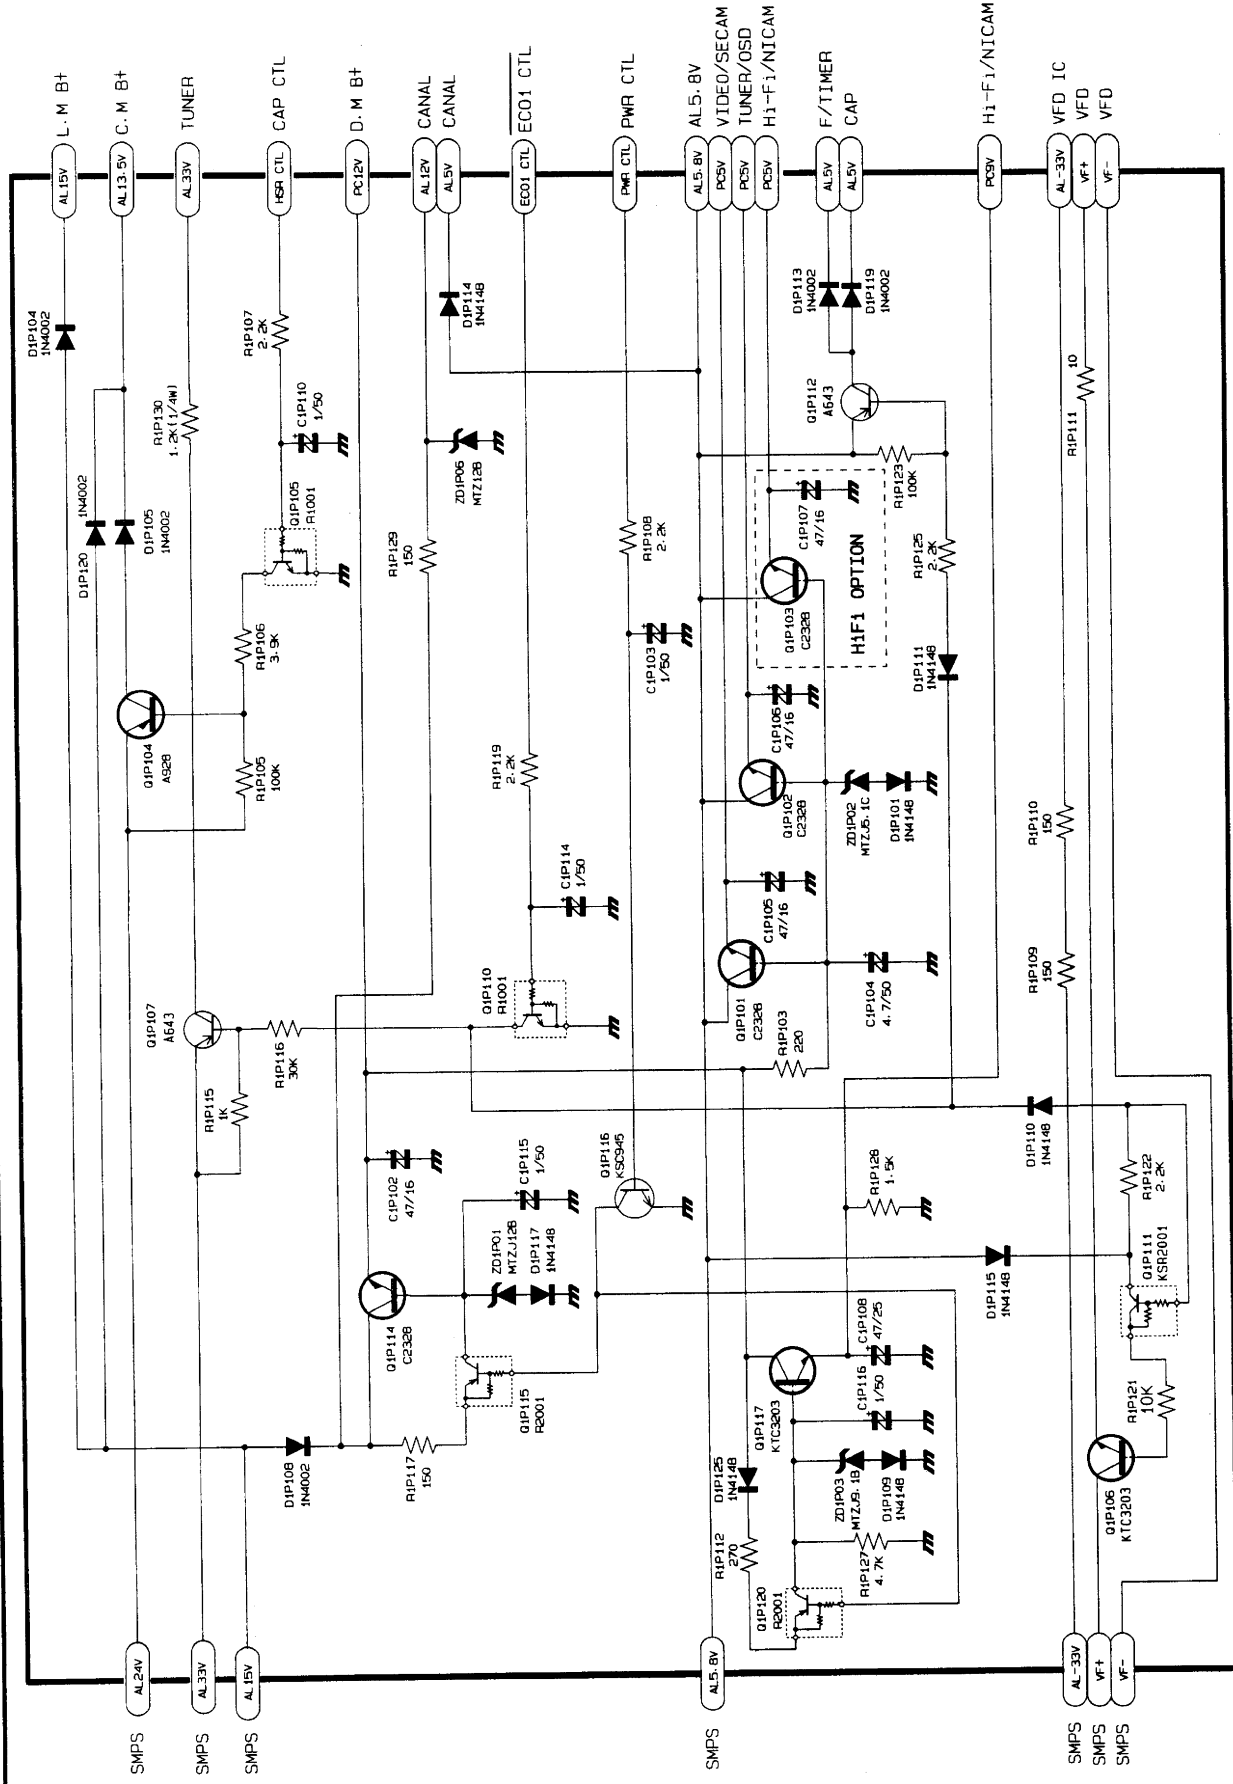







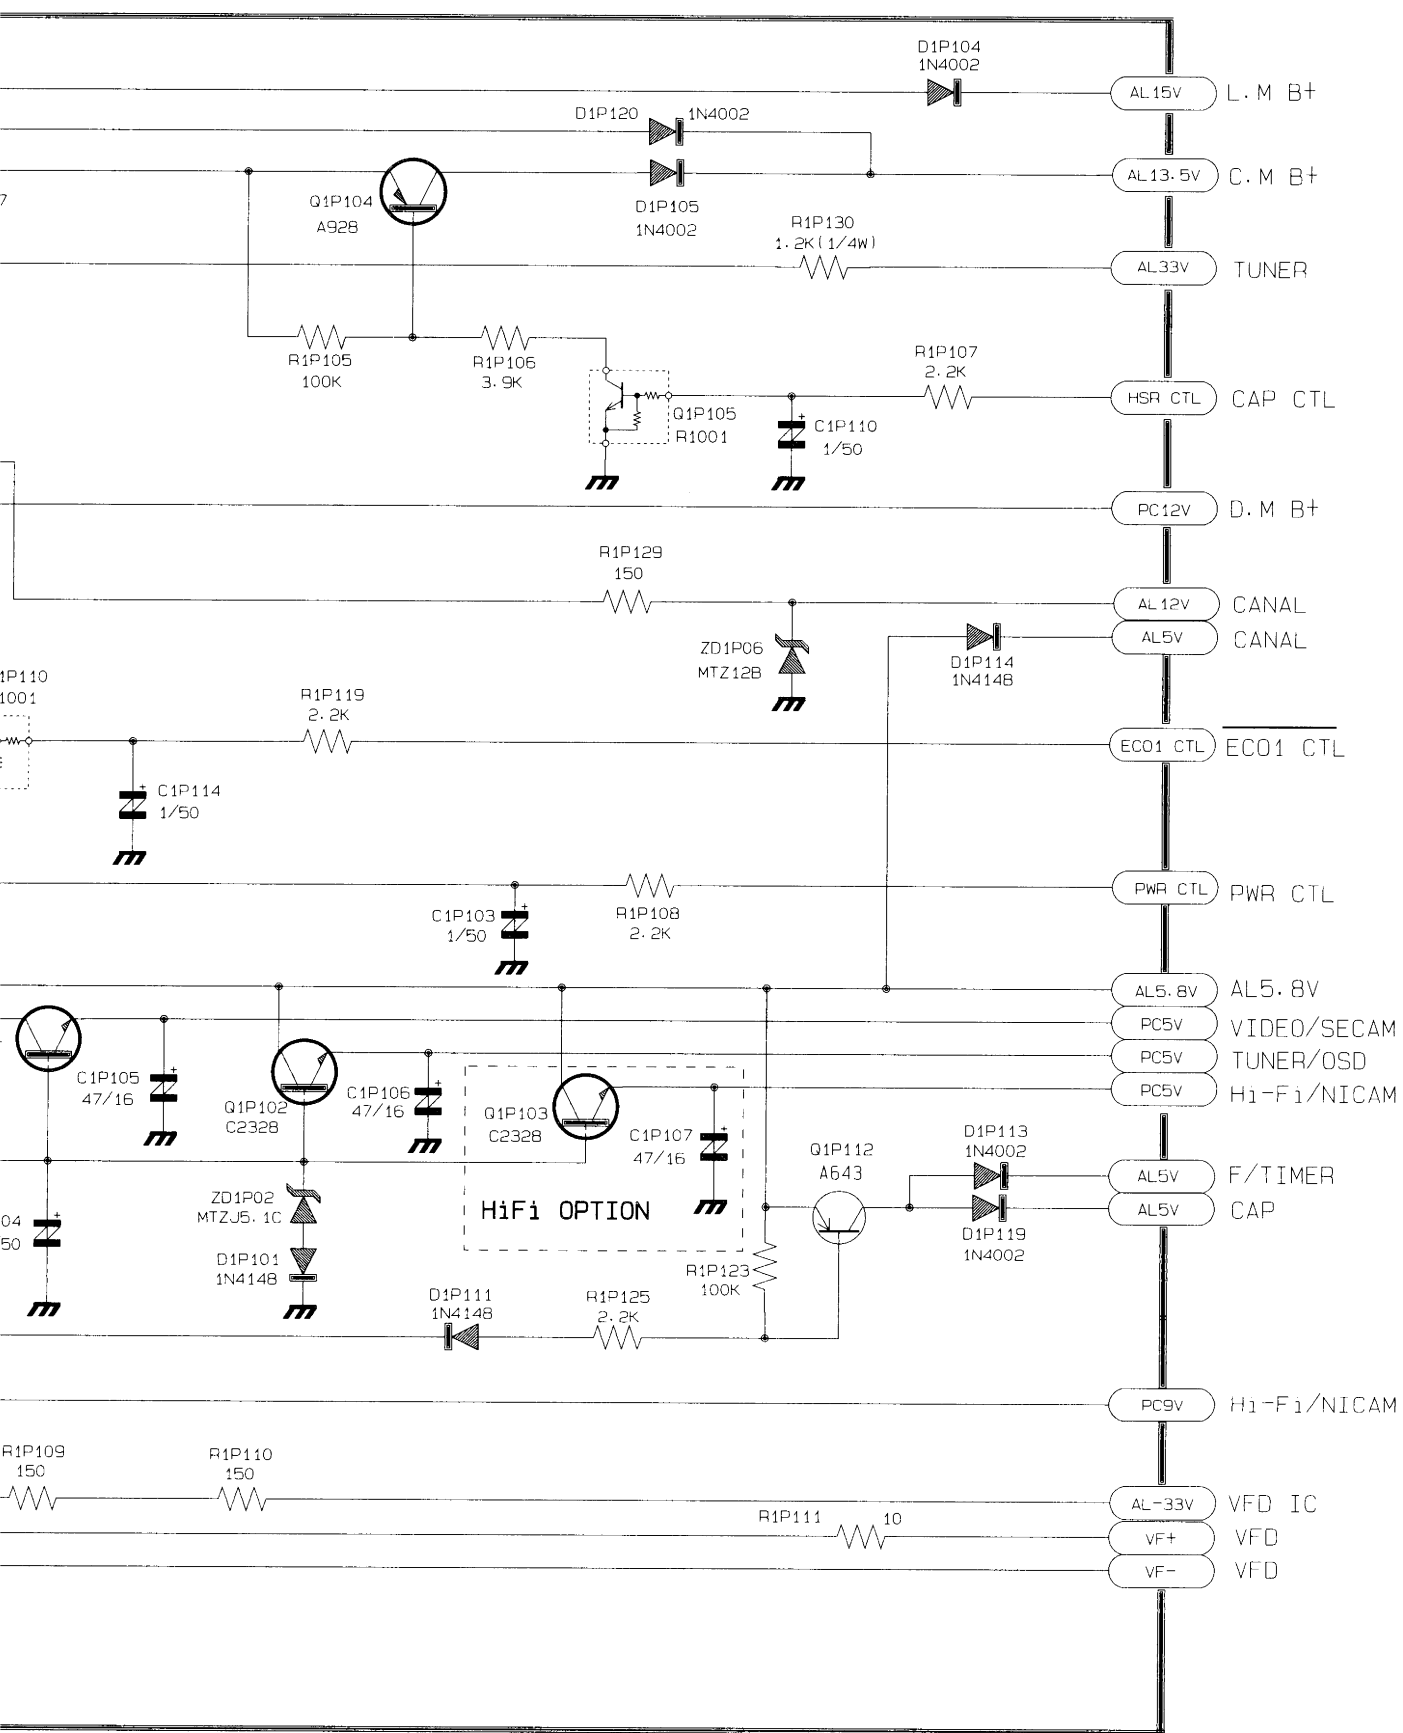


## 10-3 Power (Non-Ecology)

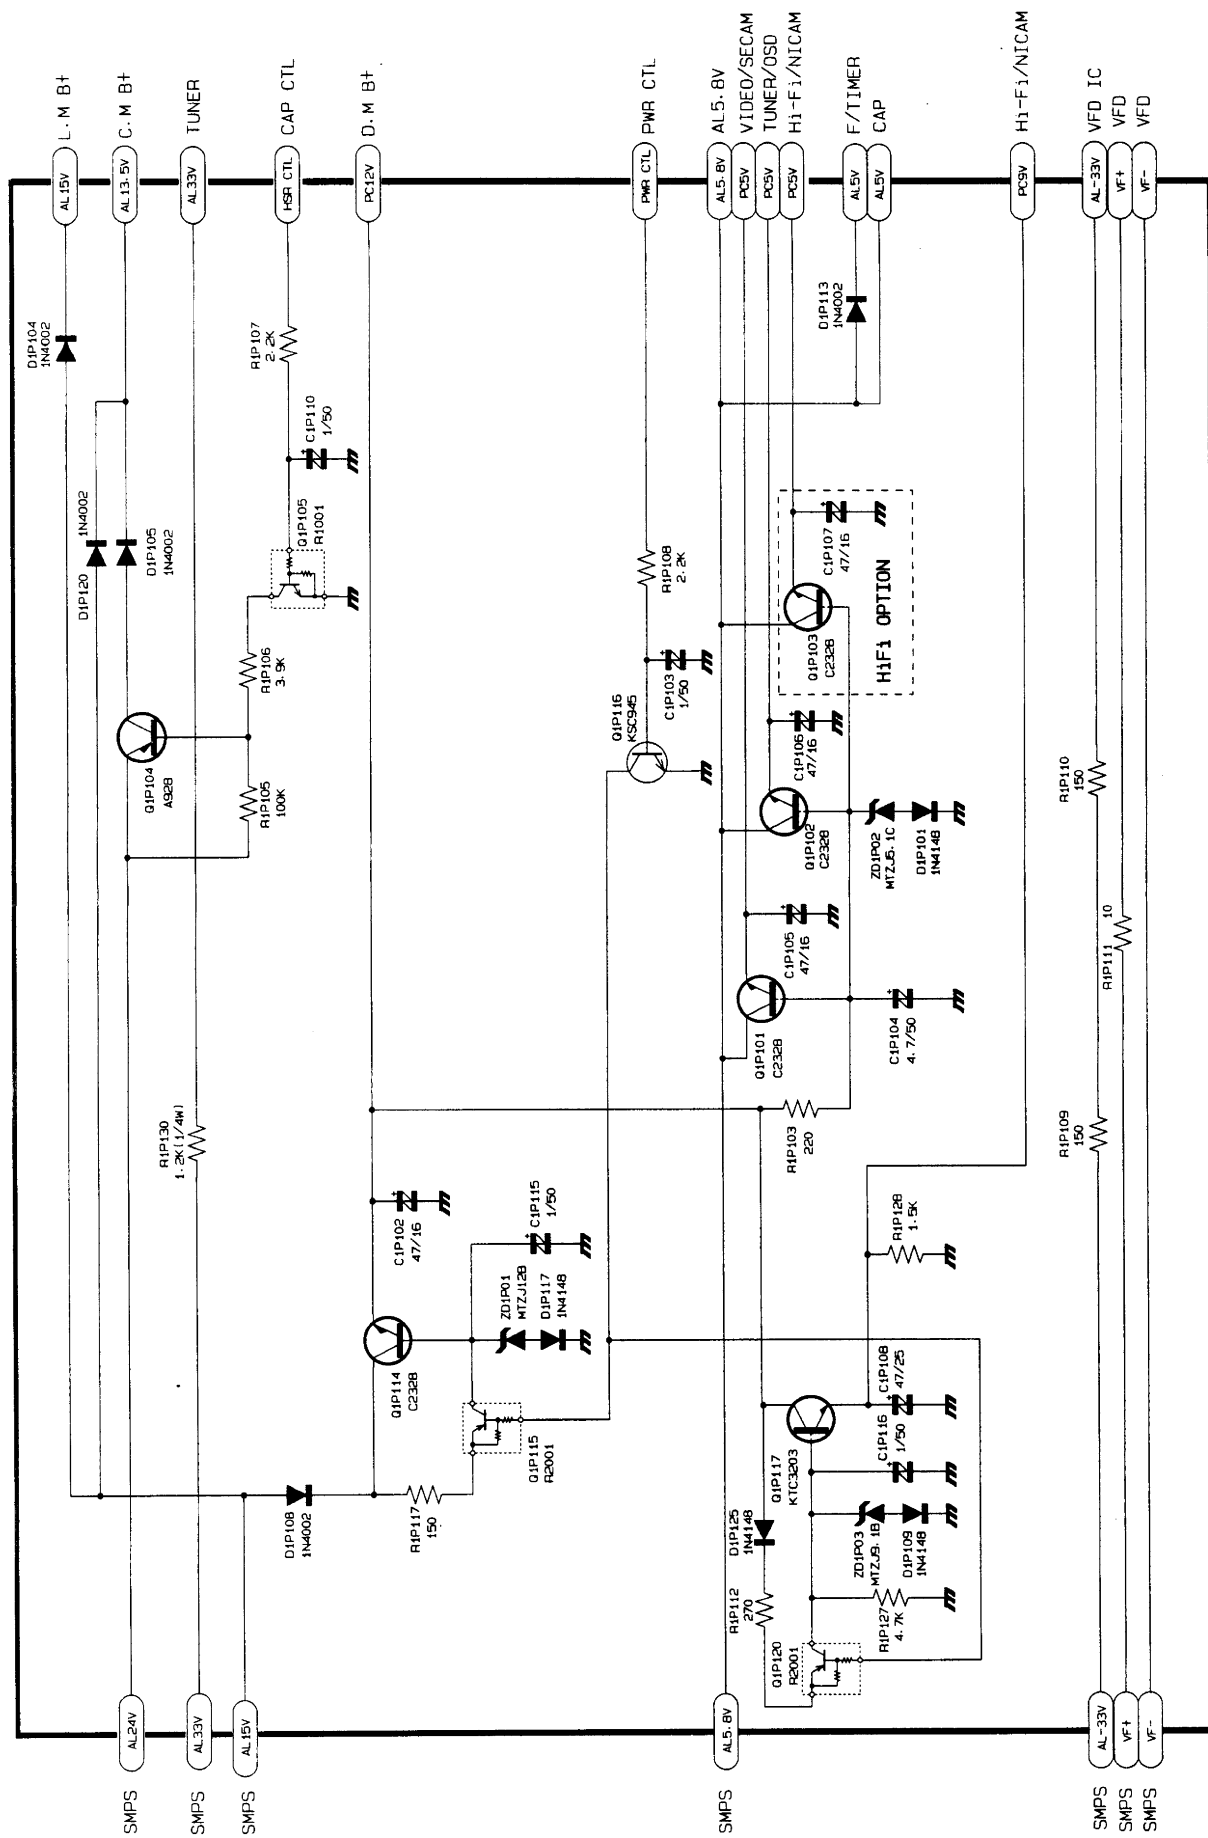


10-3 Power (Non-Ecology)

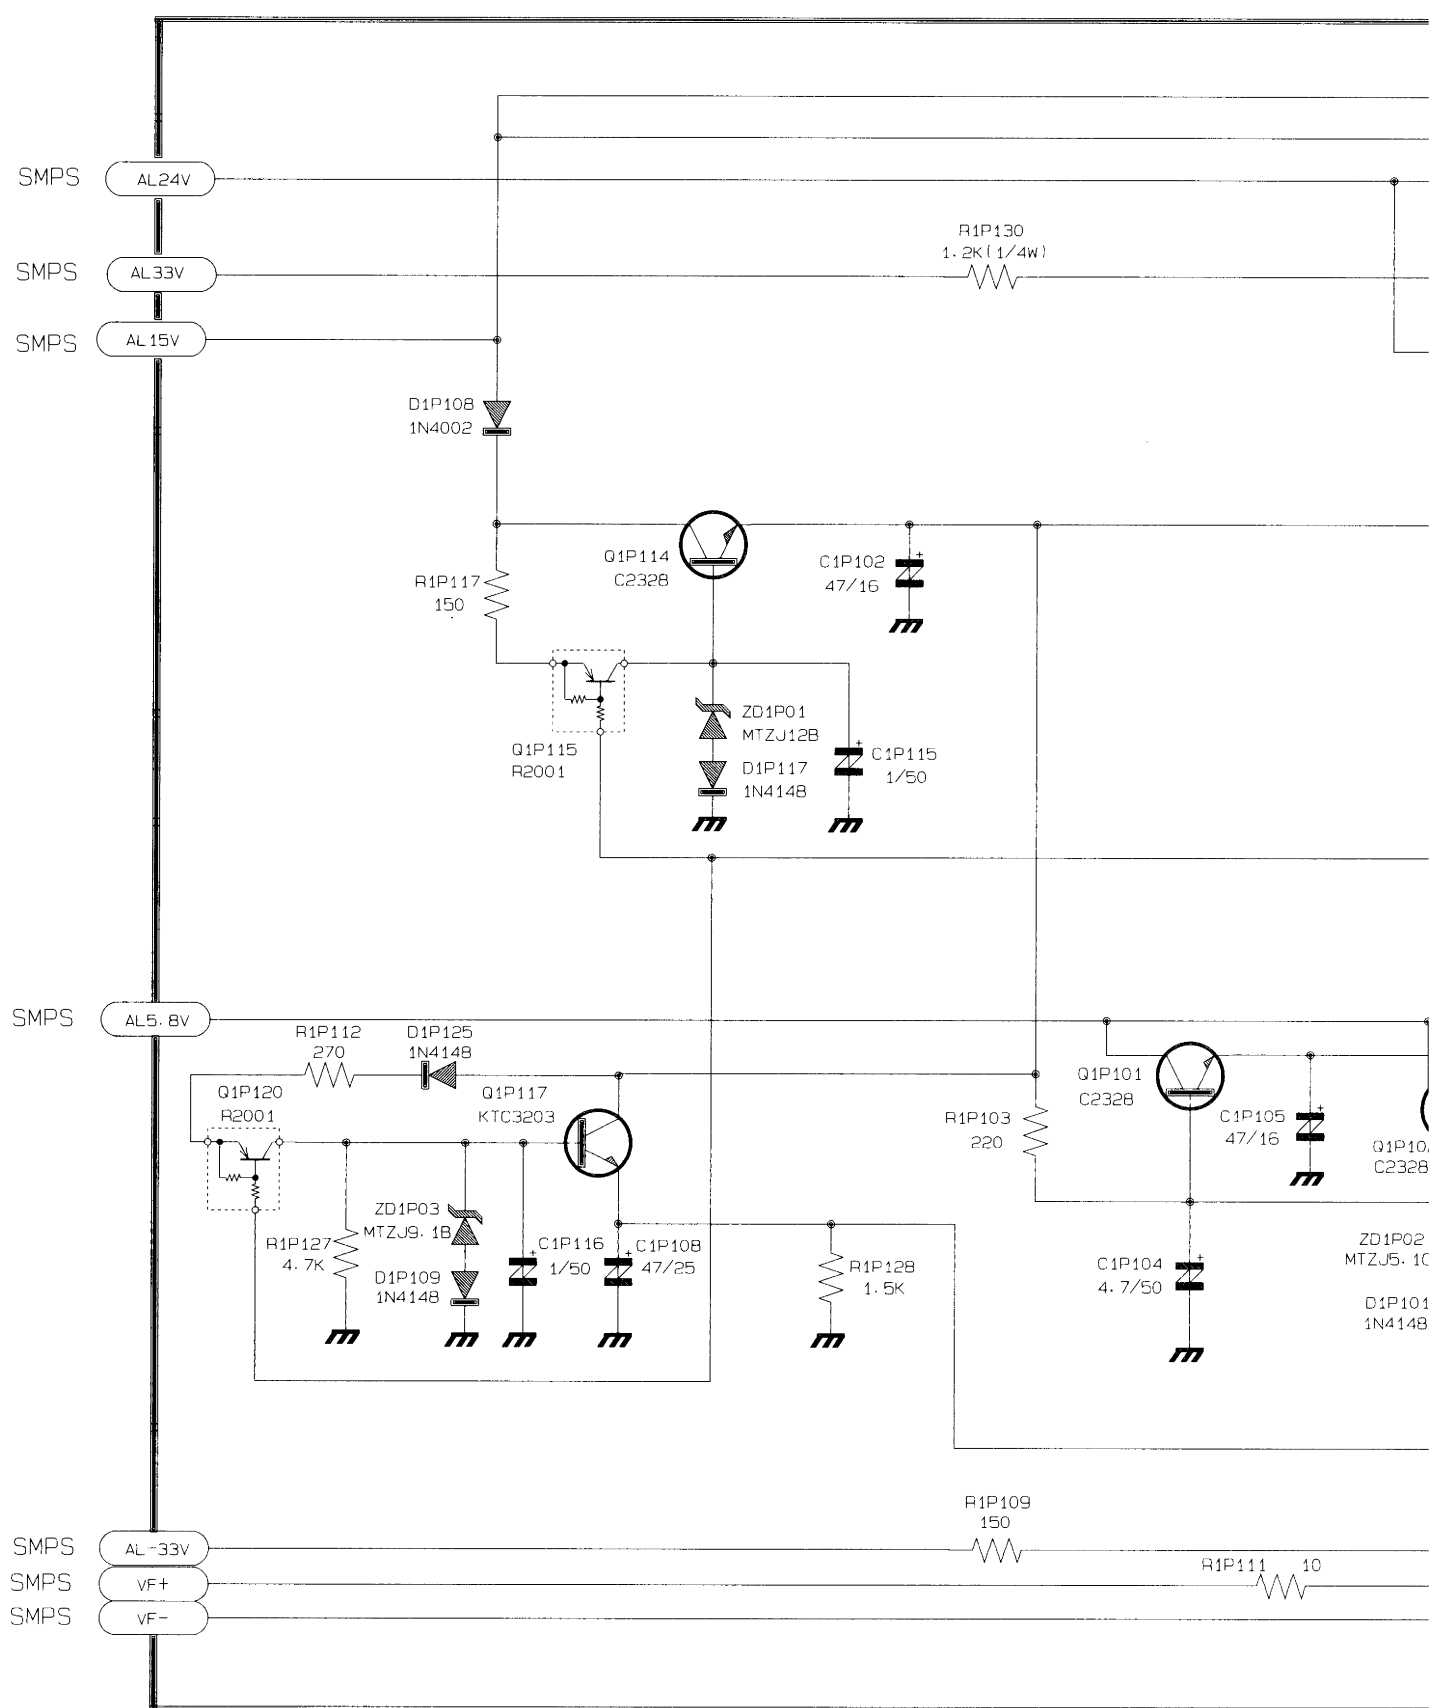


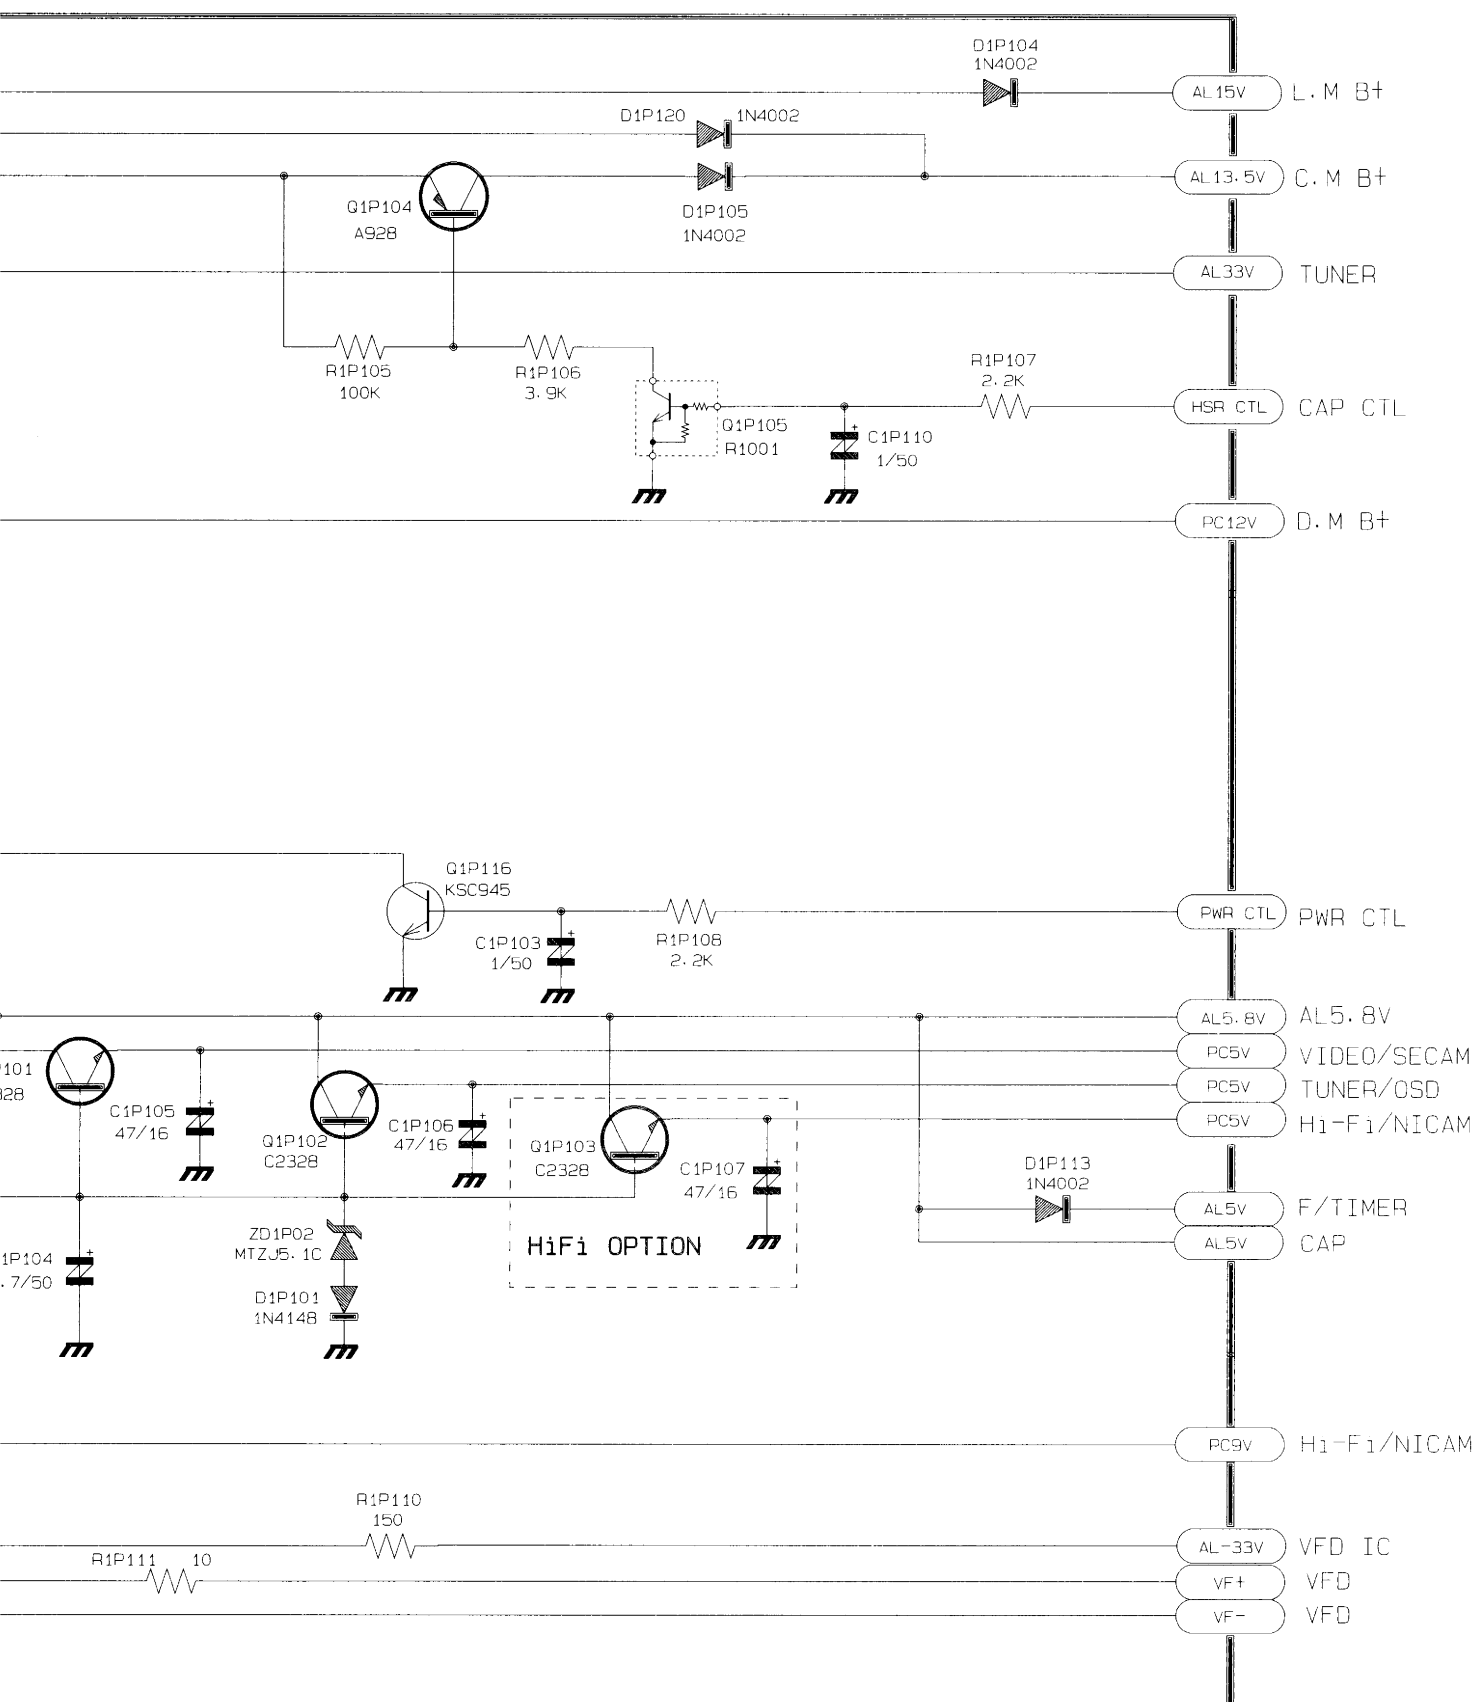


# 10-4 System Control/Servo

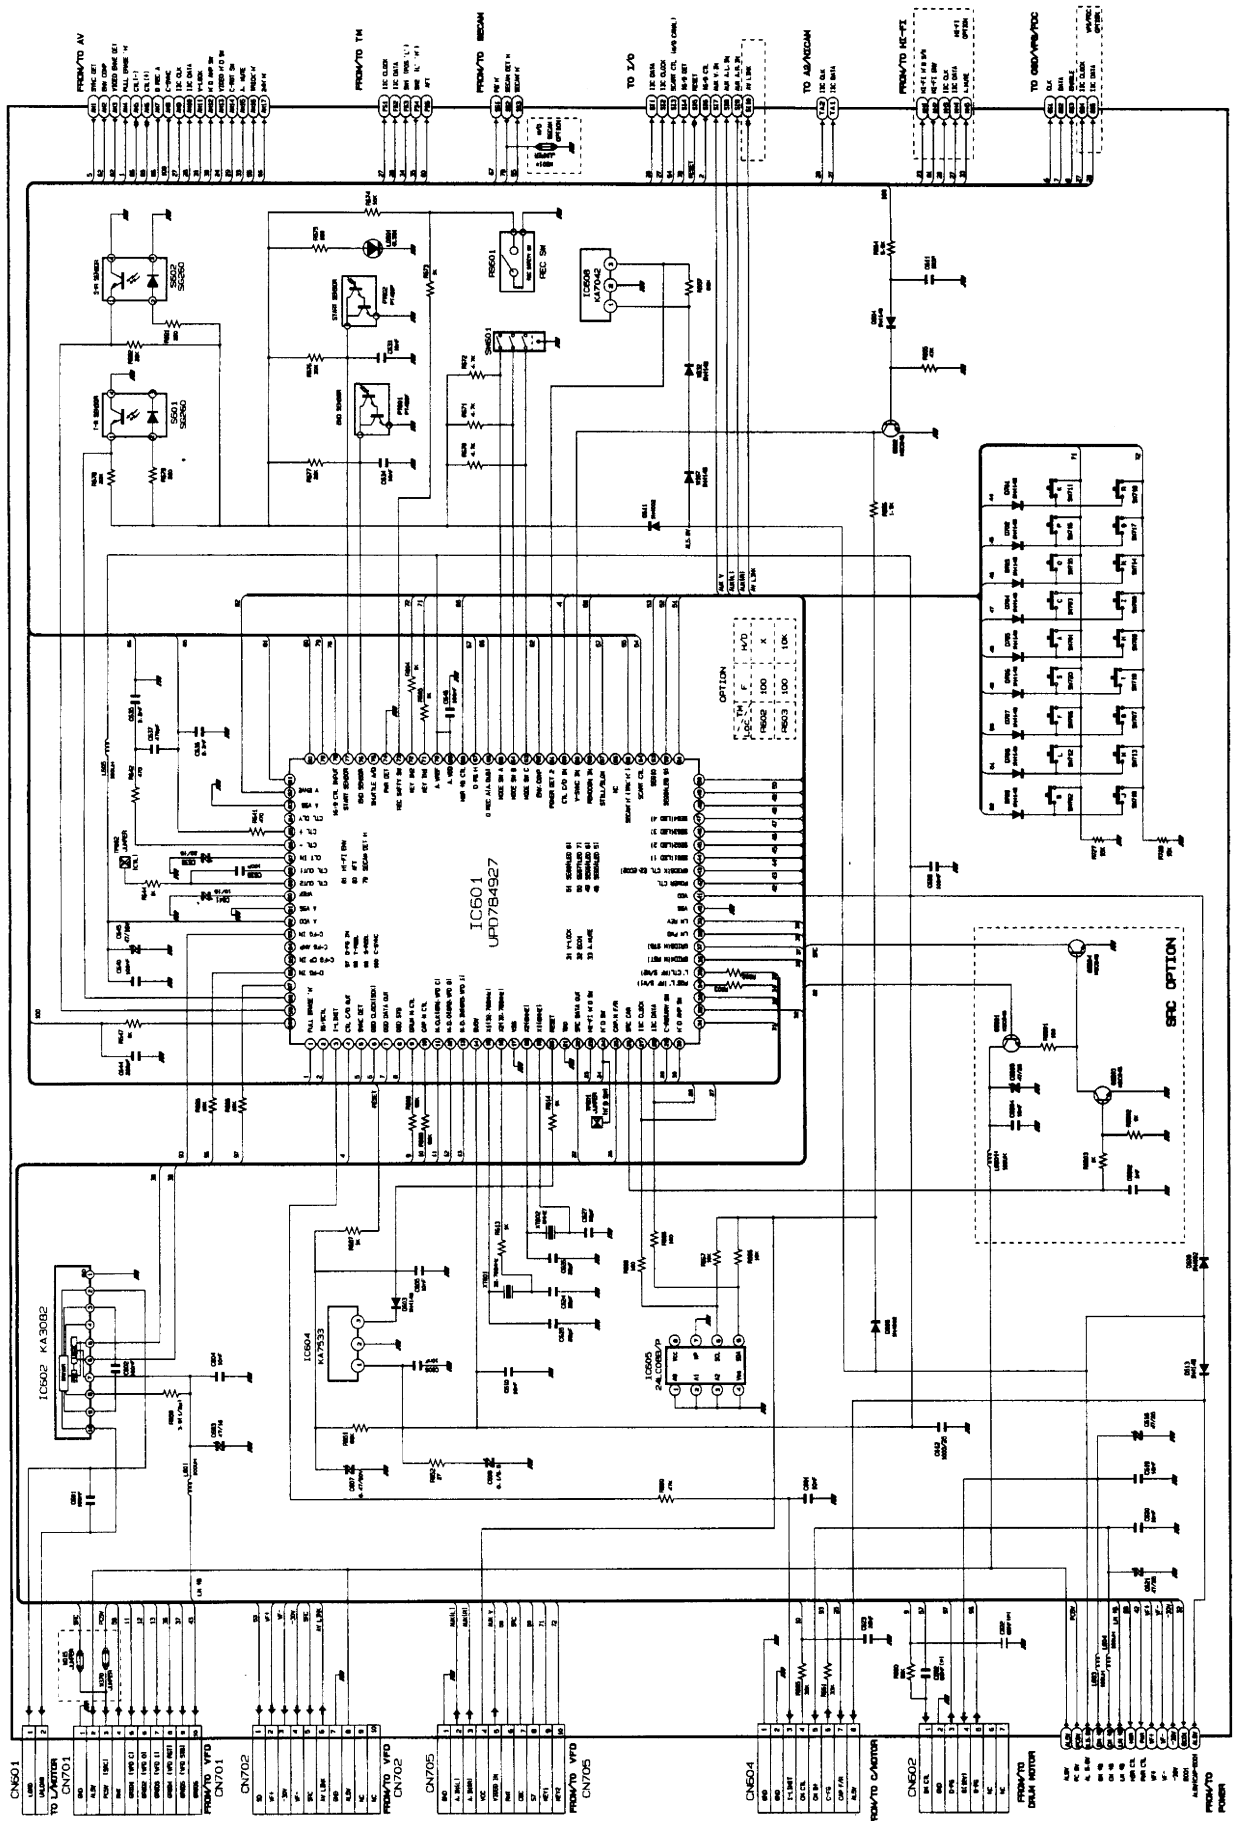



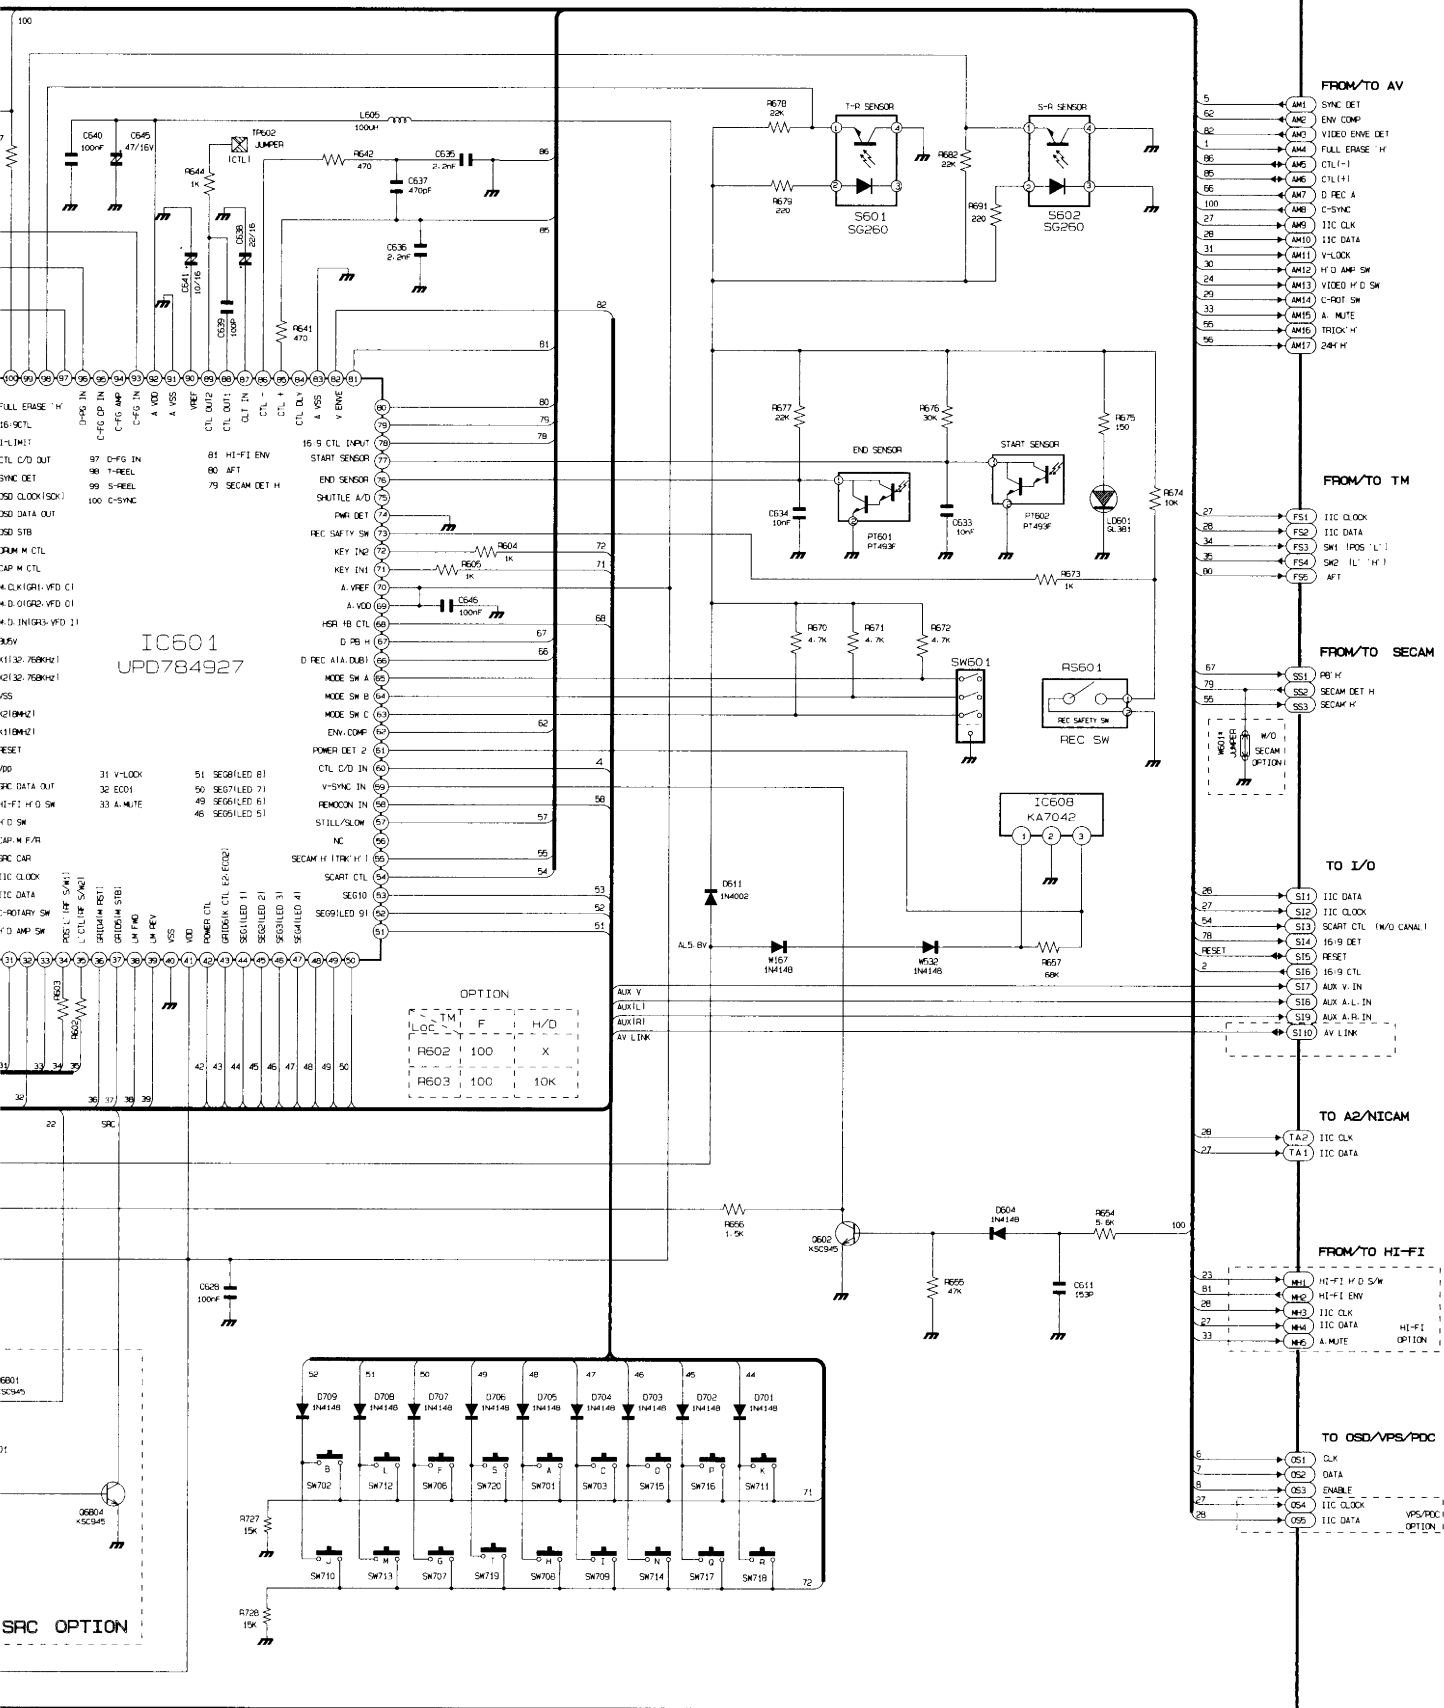


# 10-5 Audio/Video

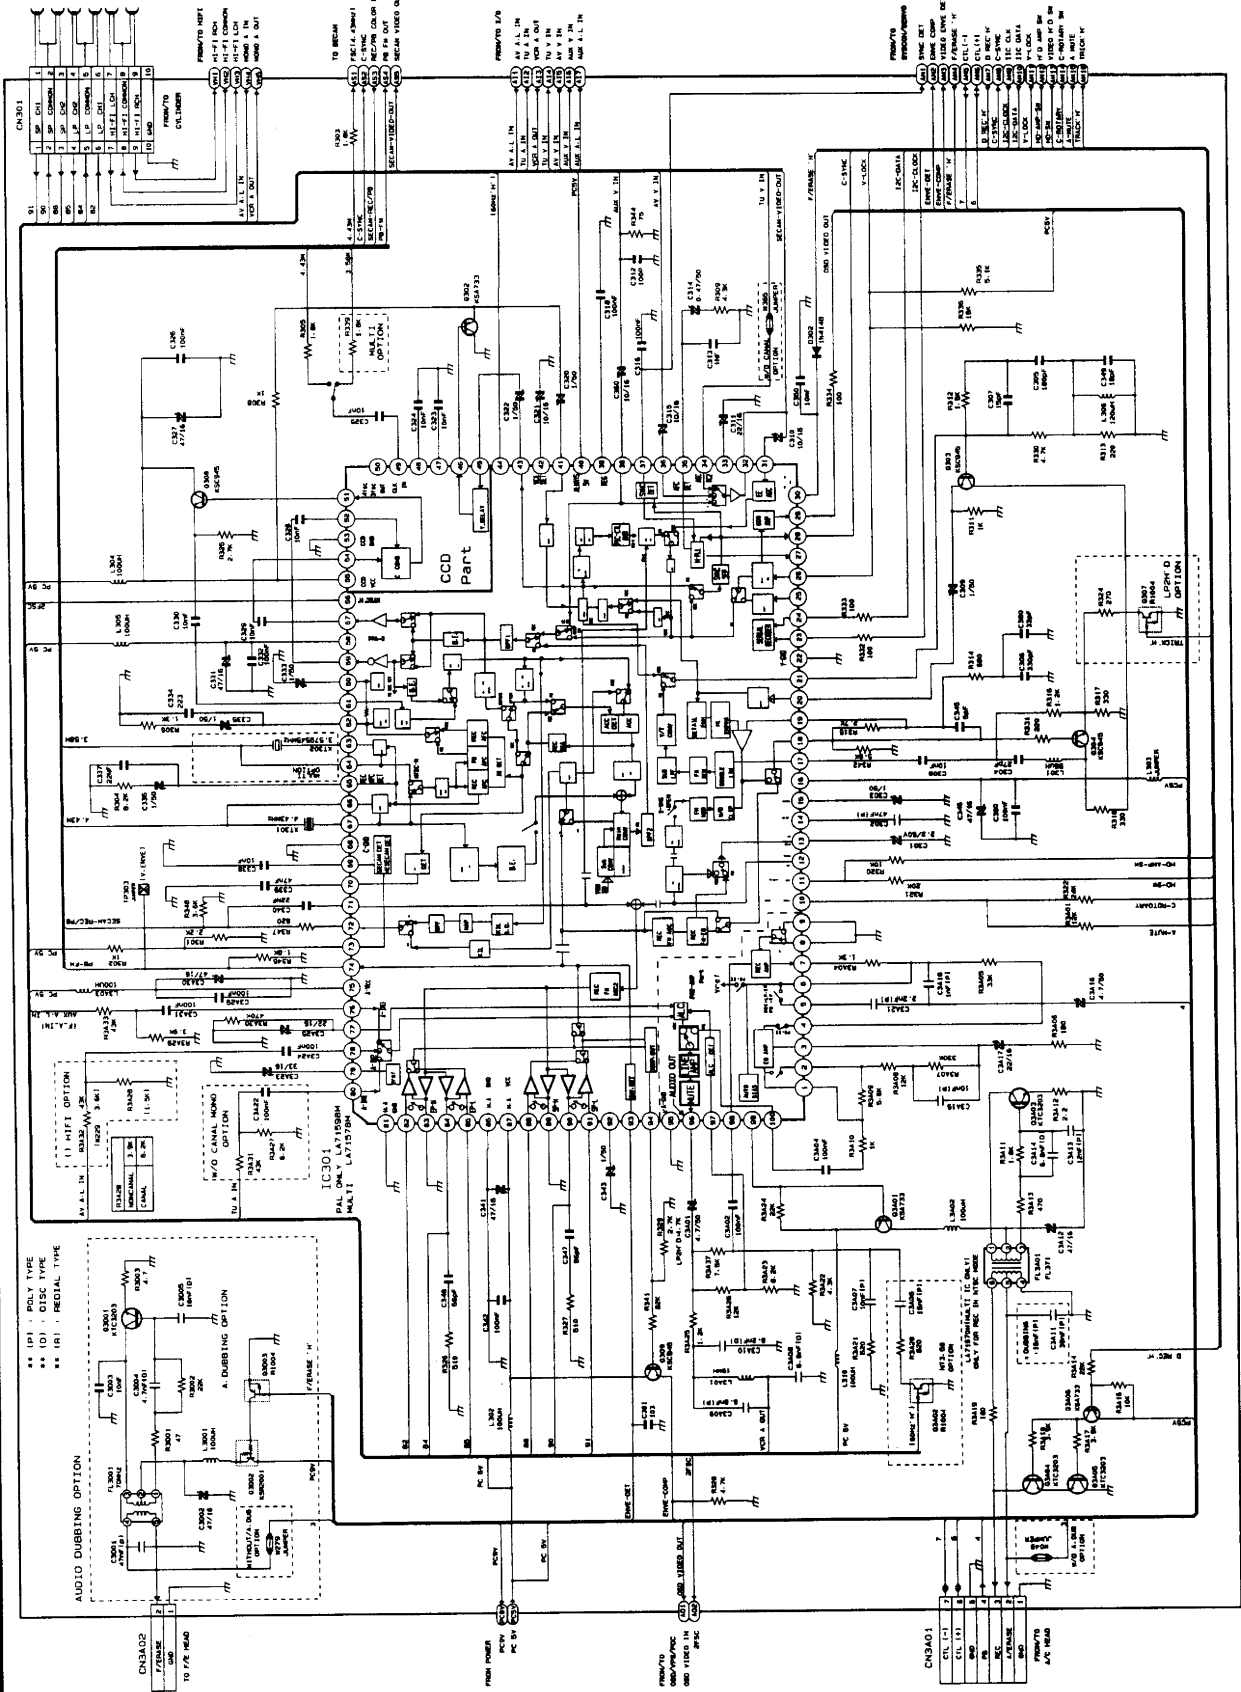







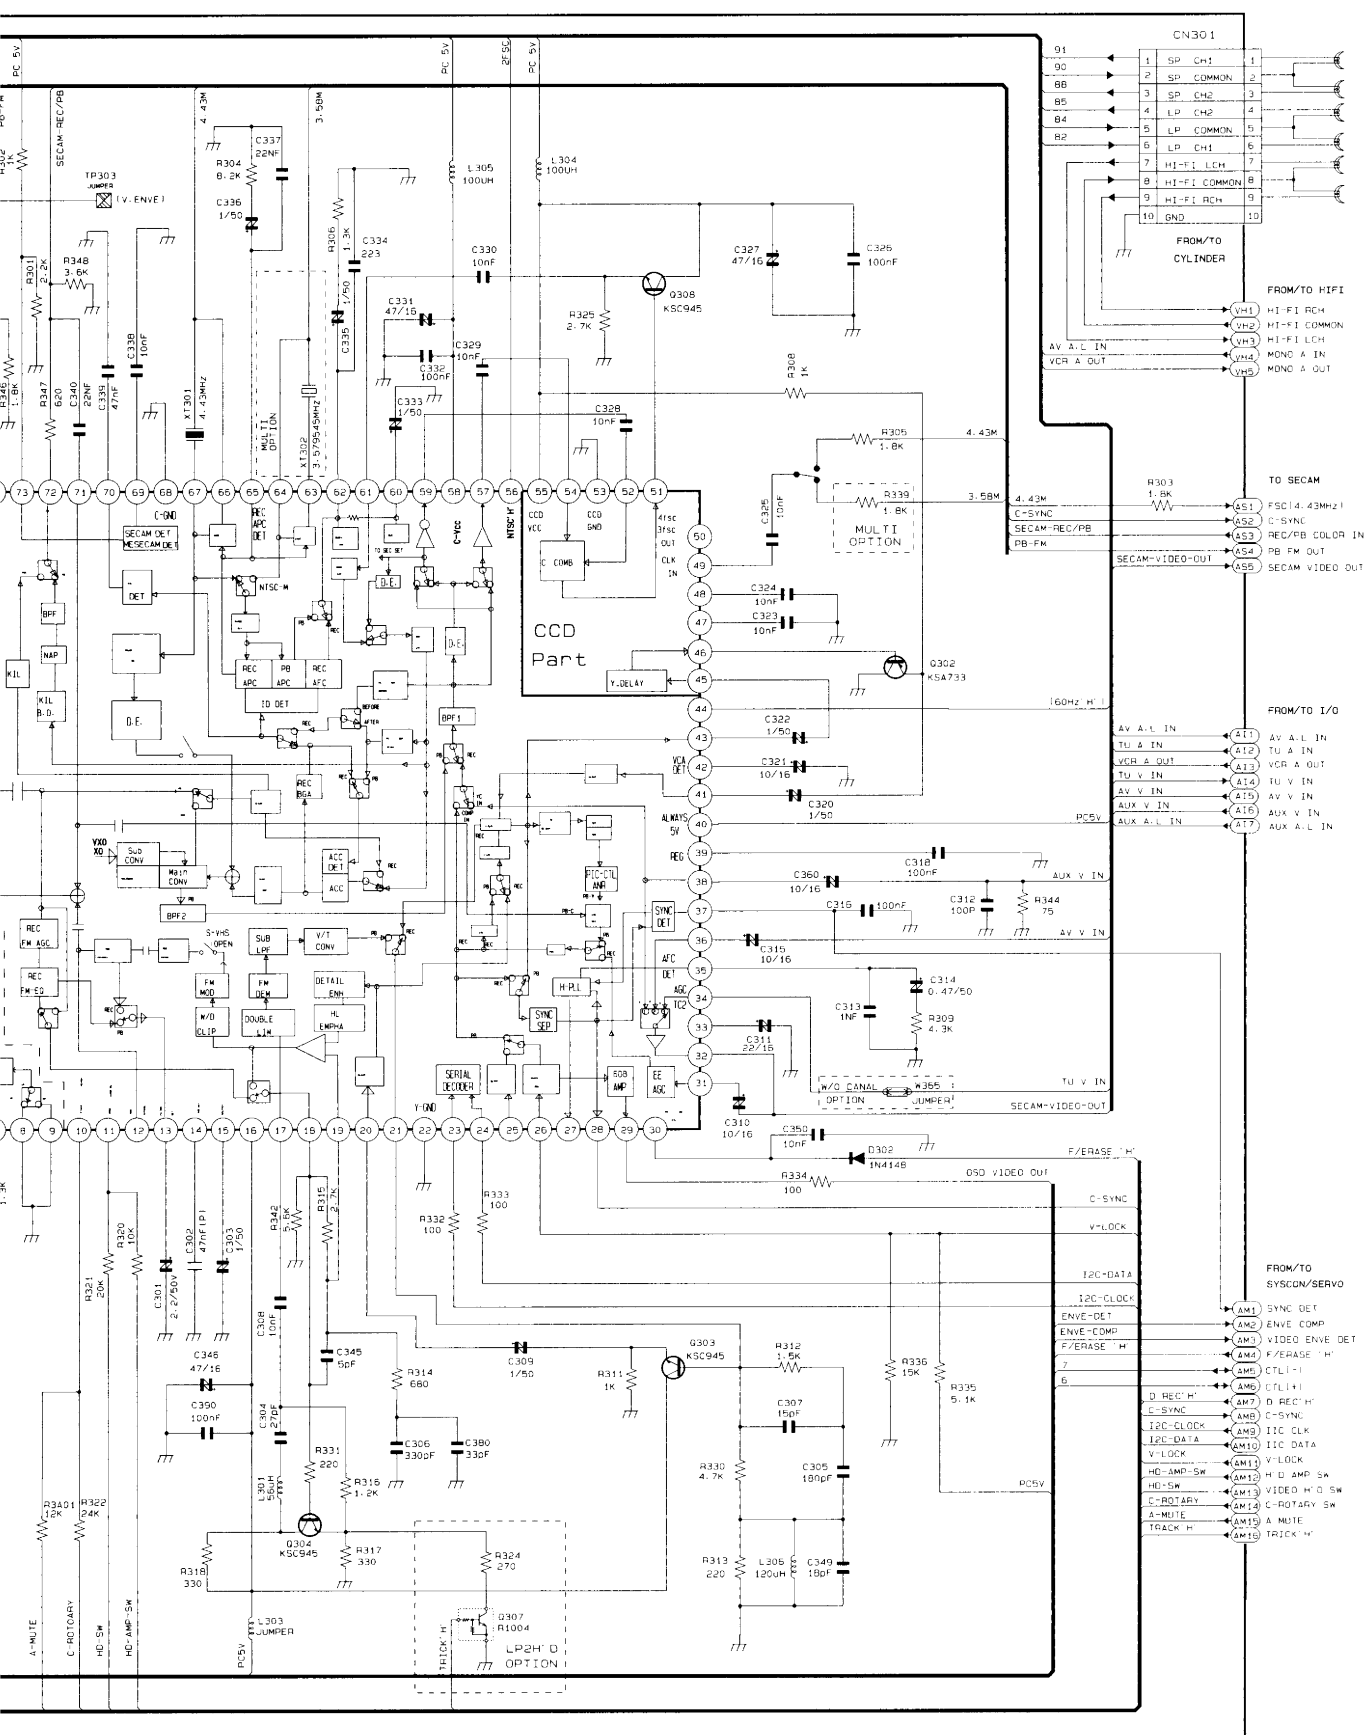


## 10-6 Hi-Fi

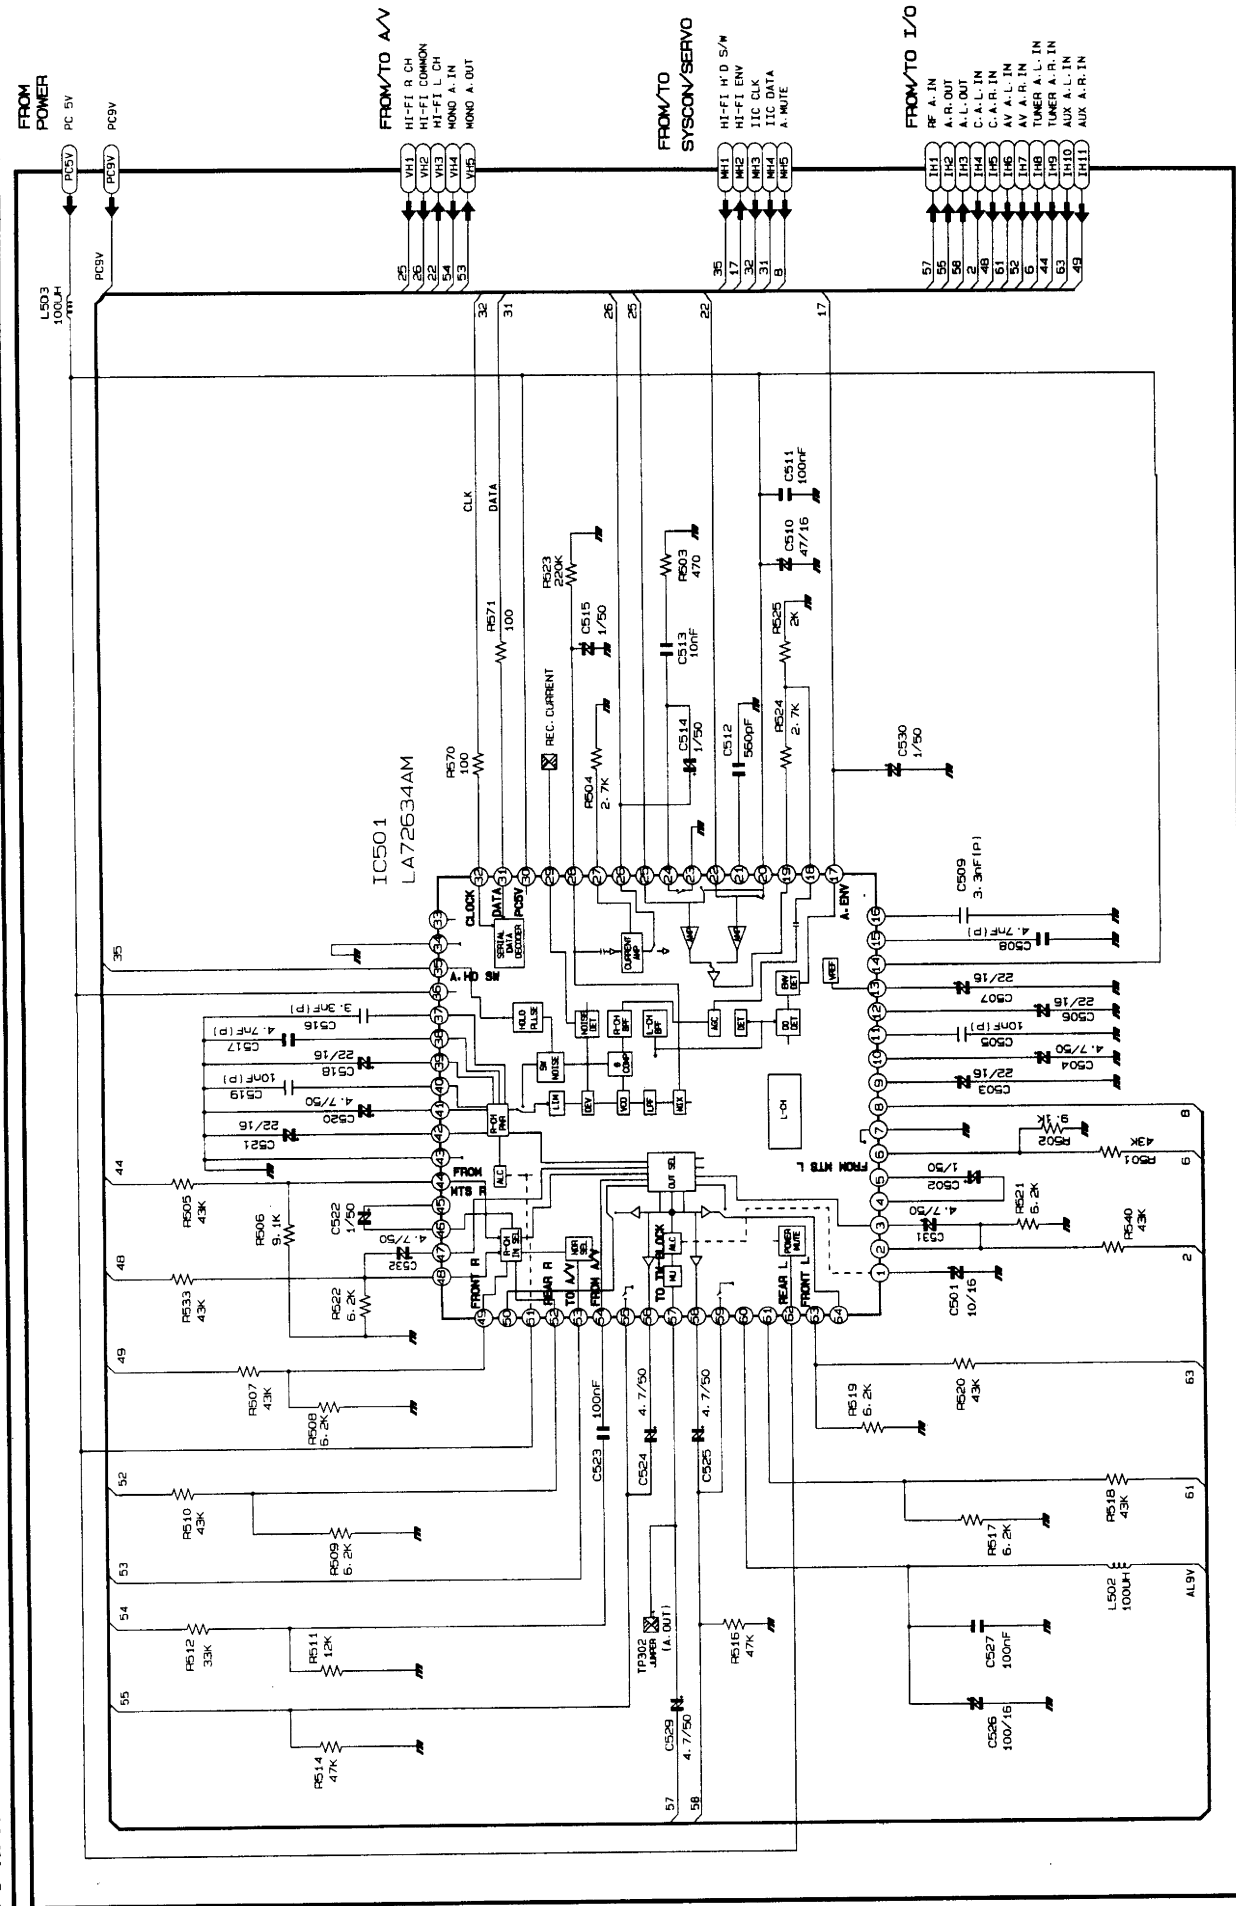




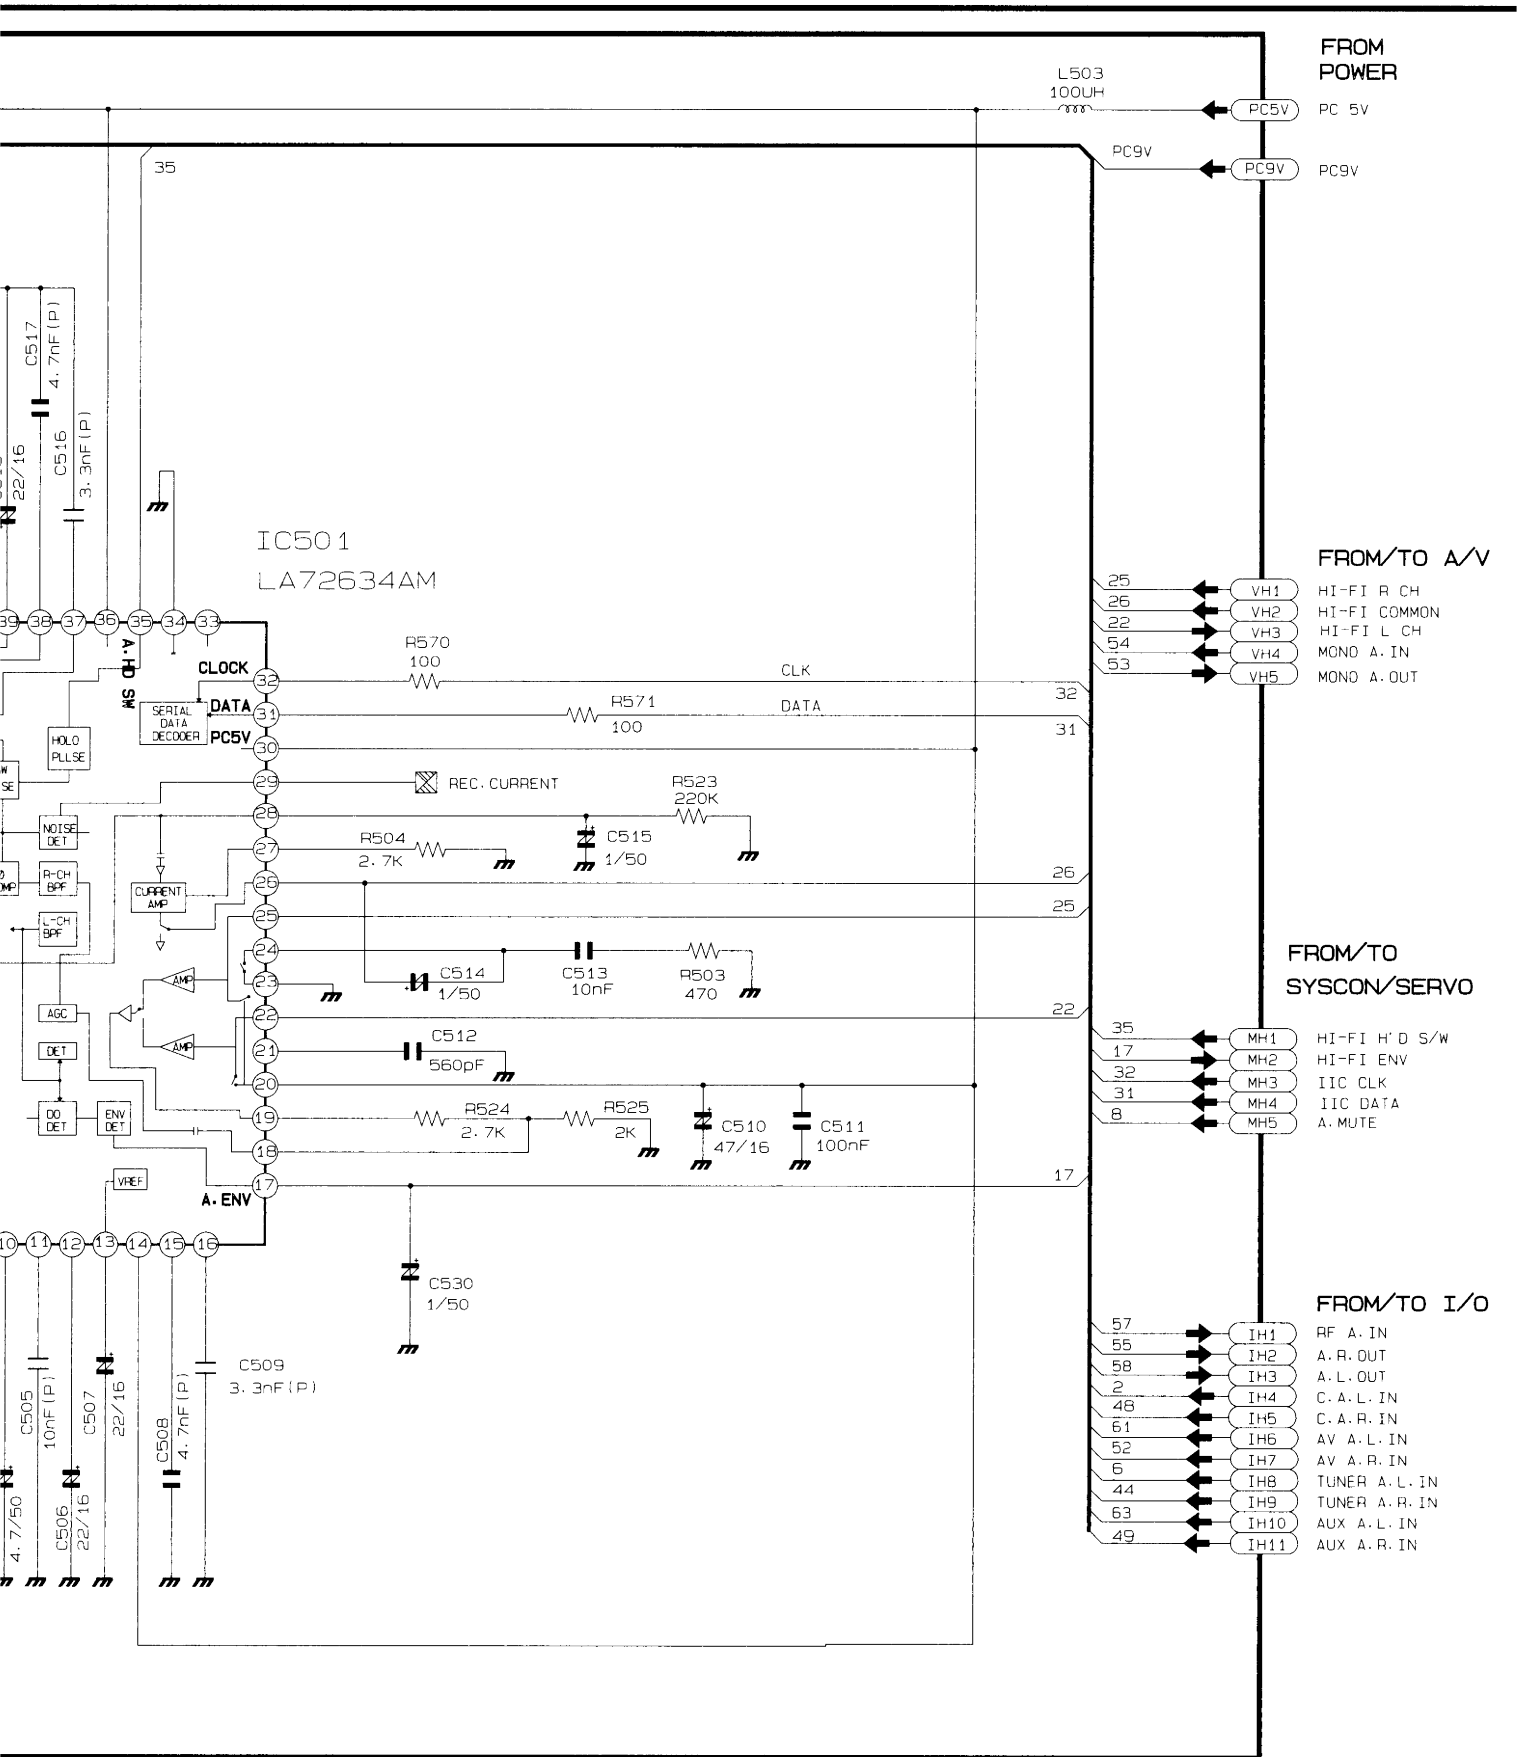


# 10-7 TM-Block

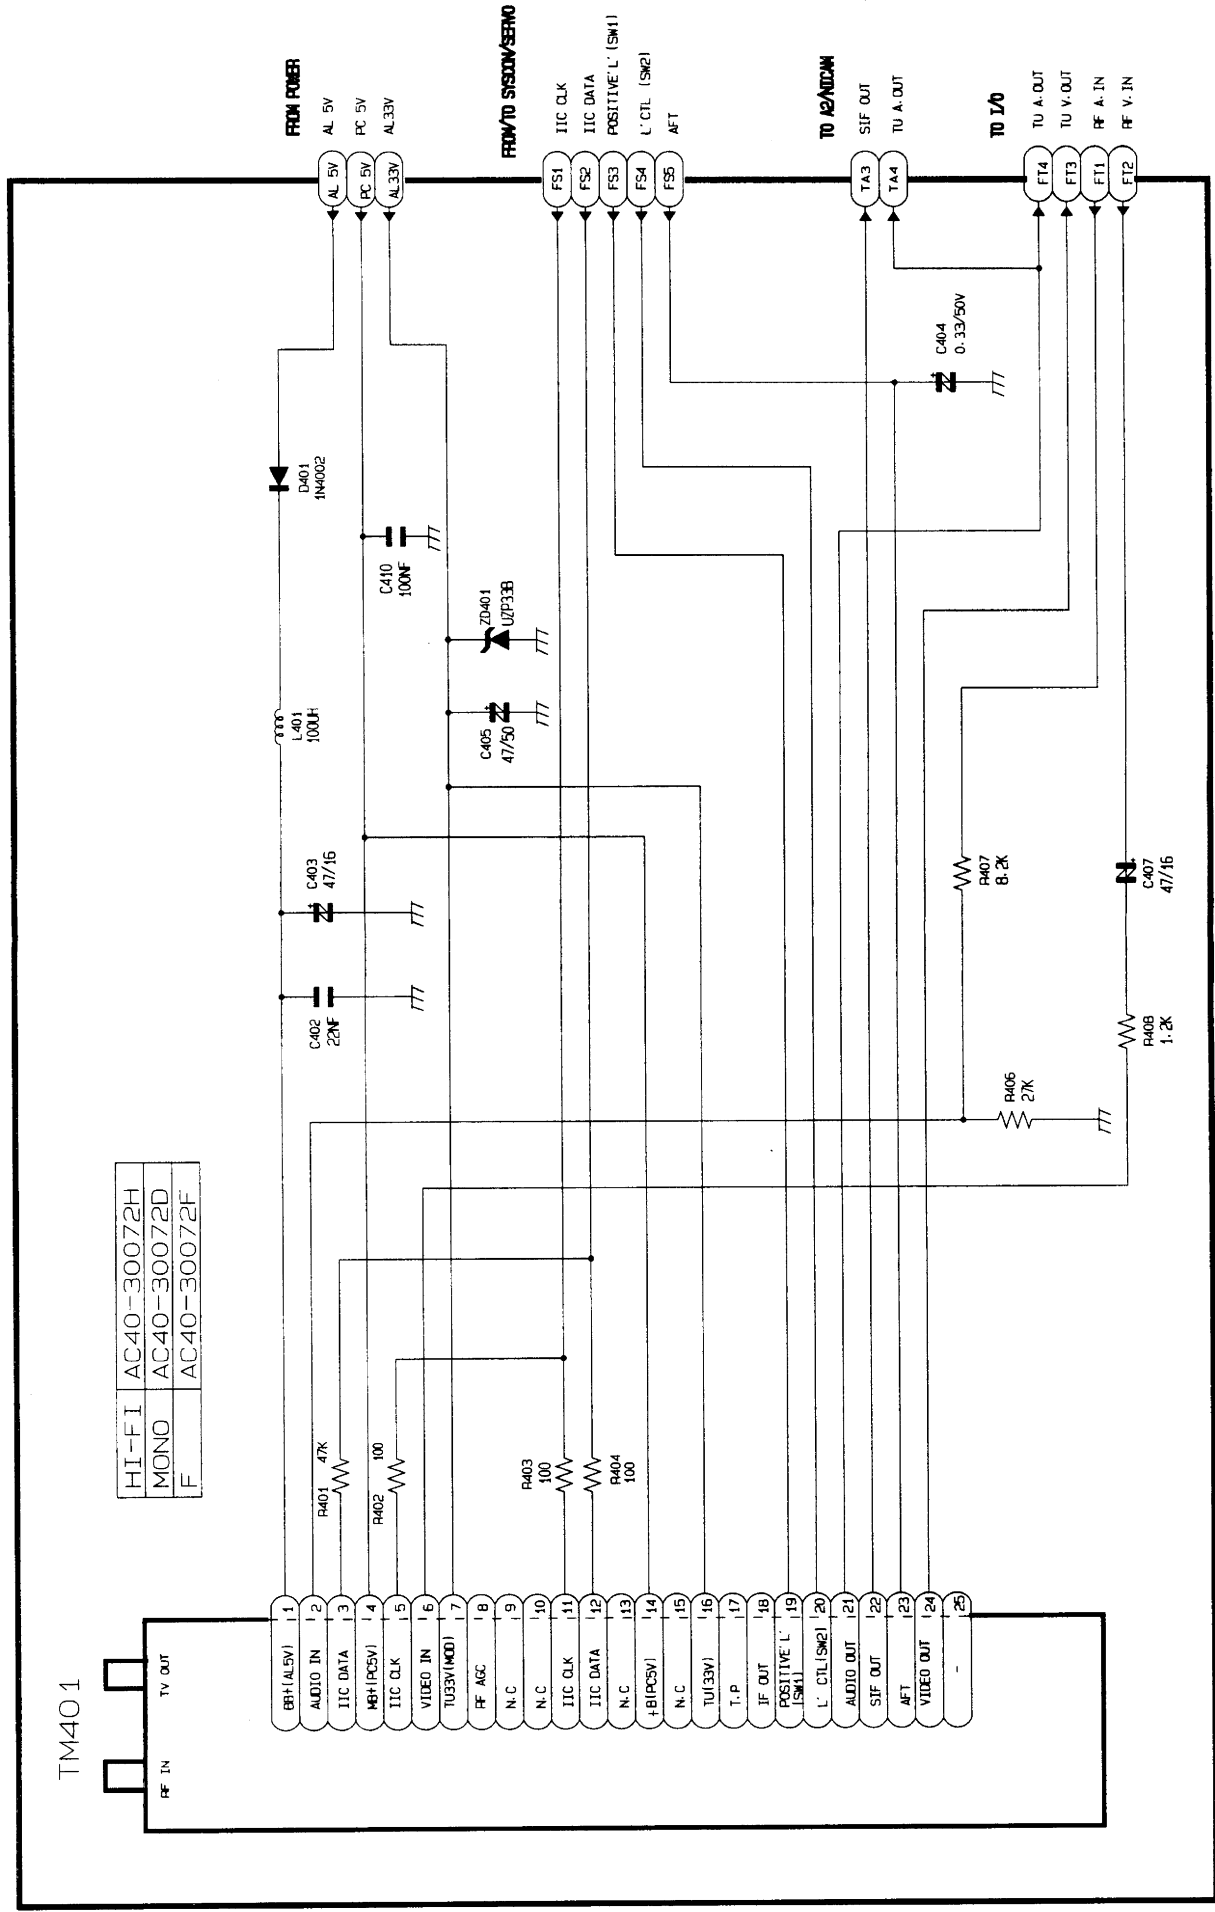


10-7 TM-Block

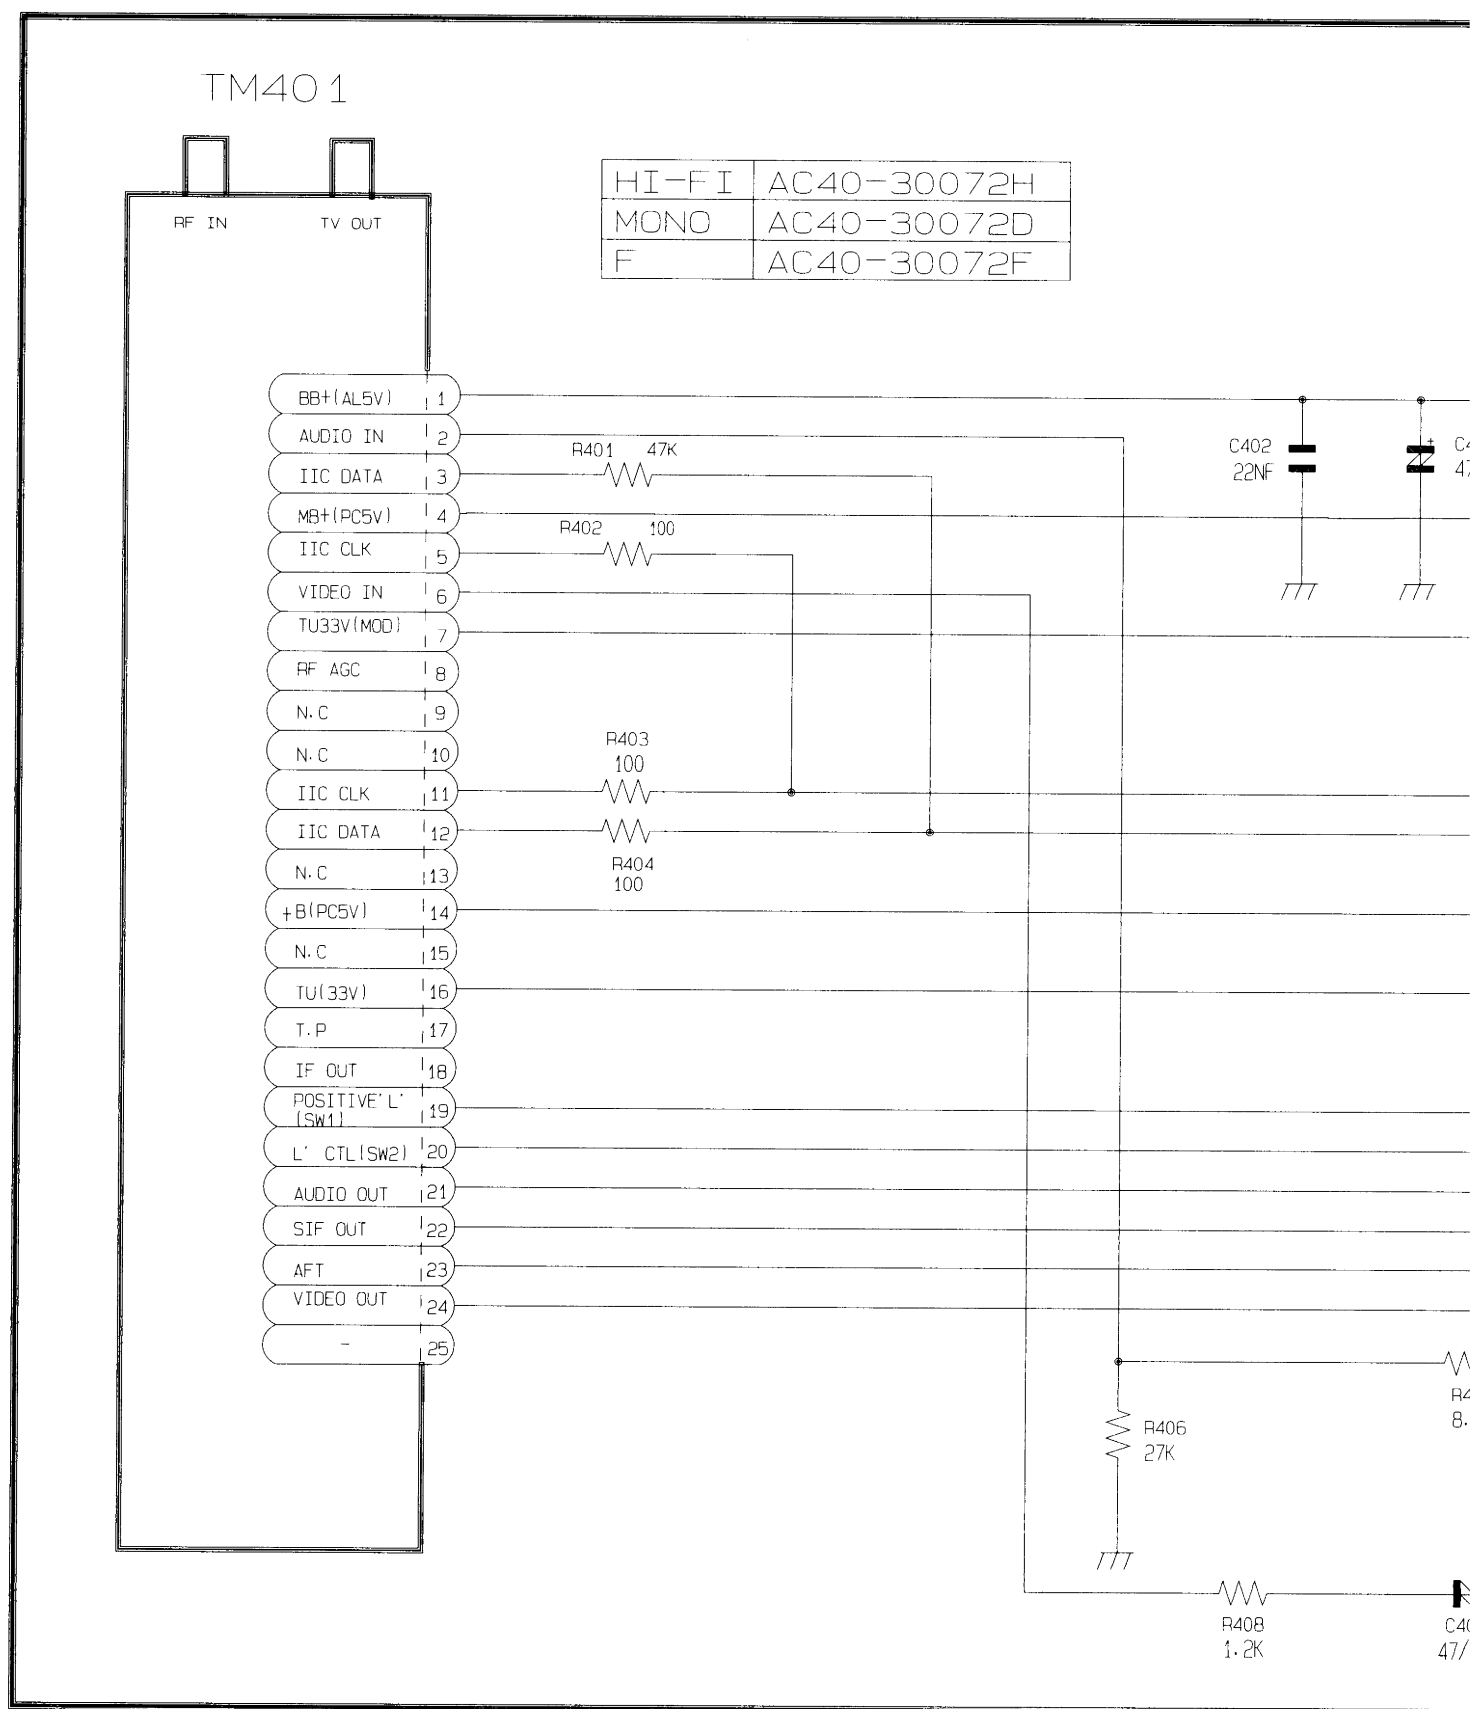


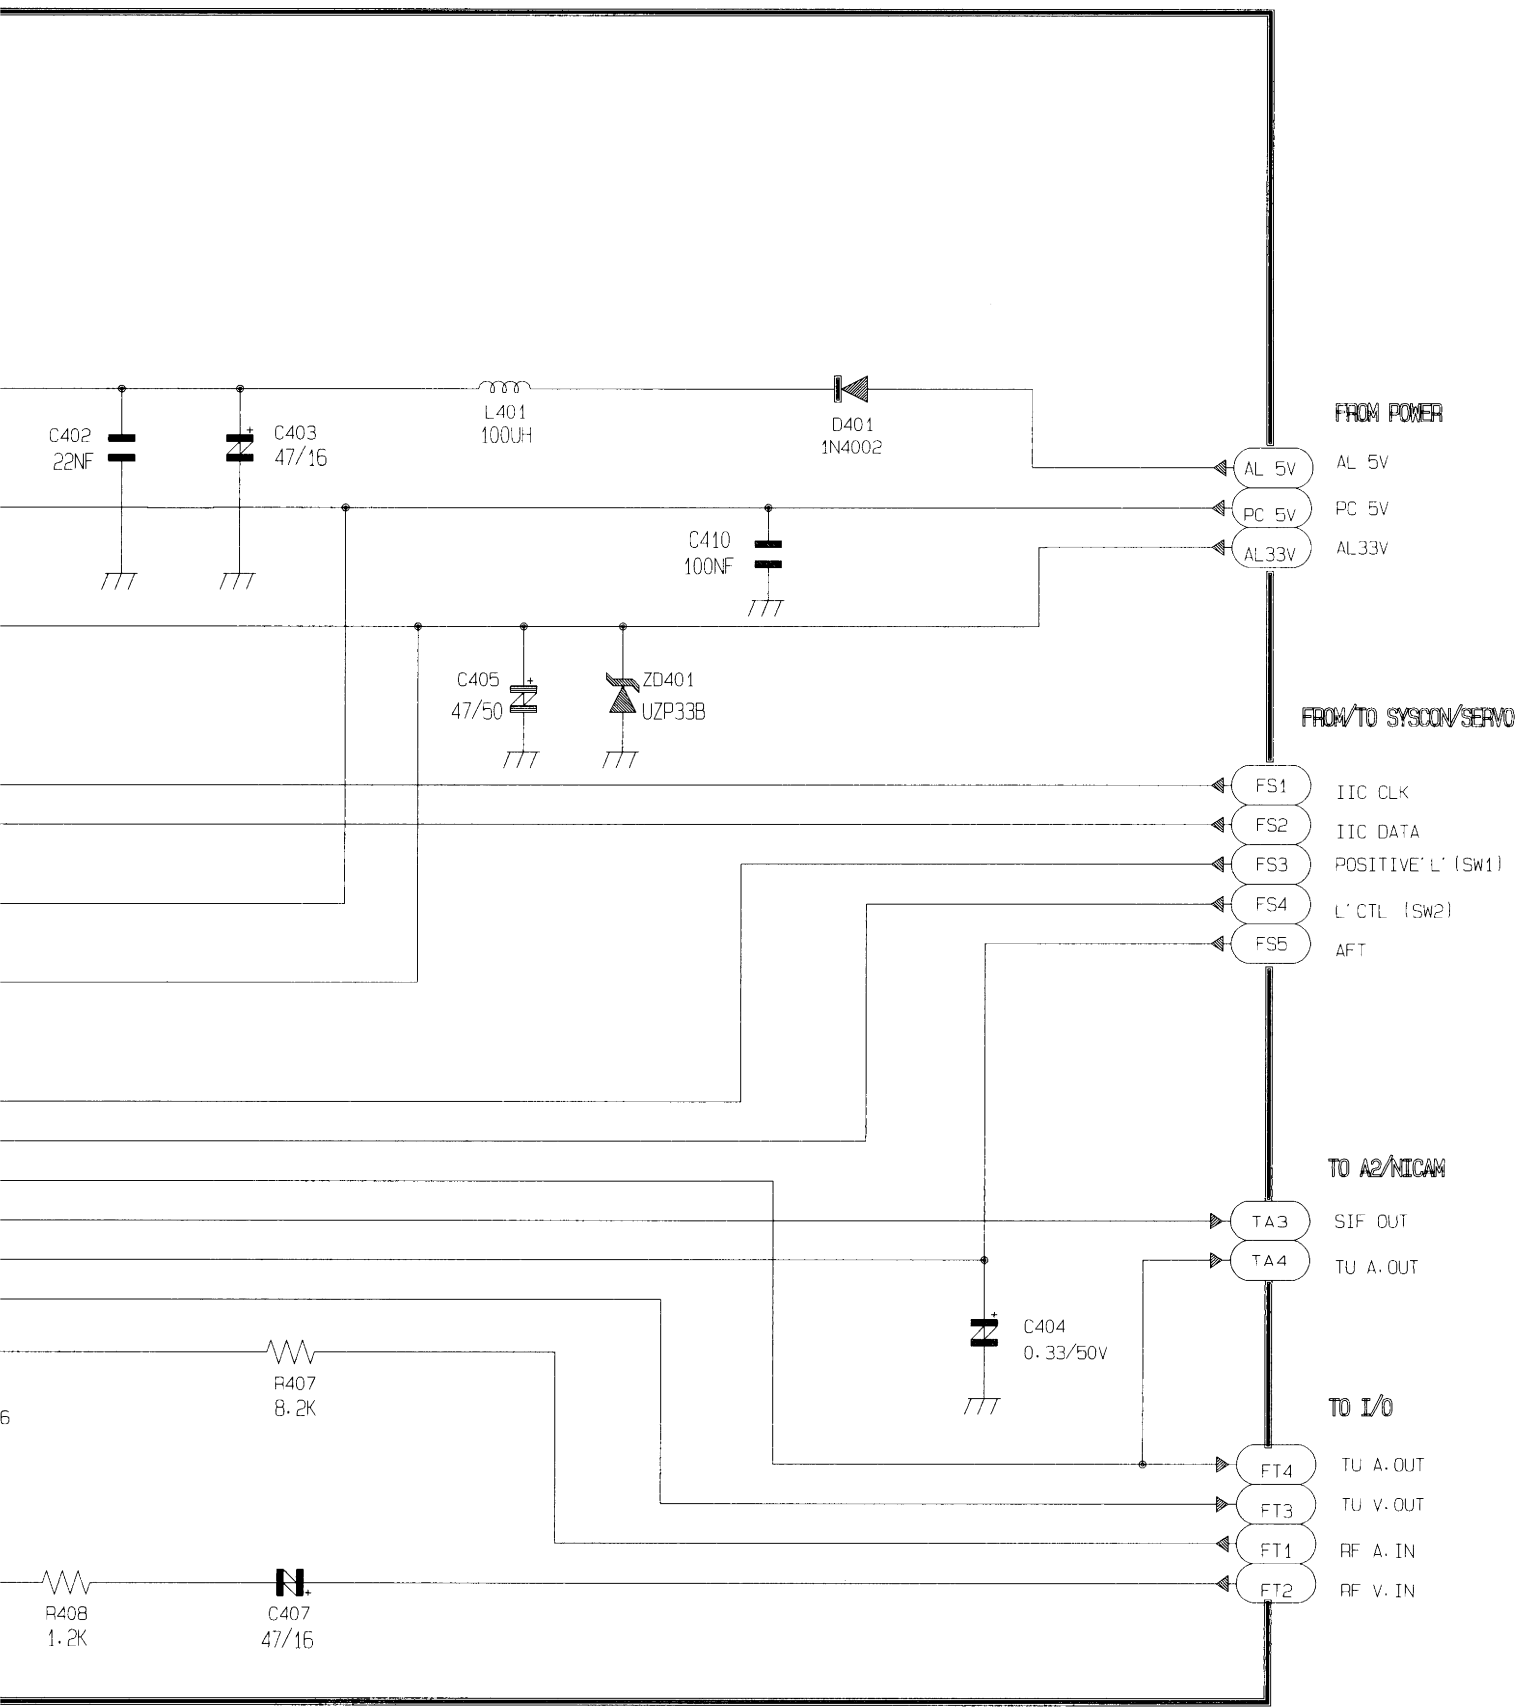







## 10-8 SECAM

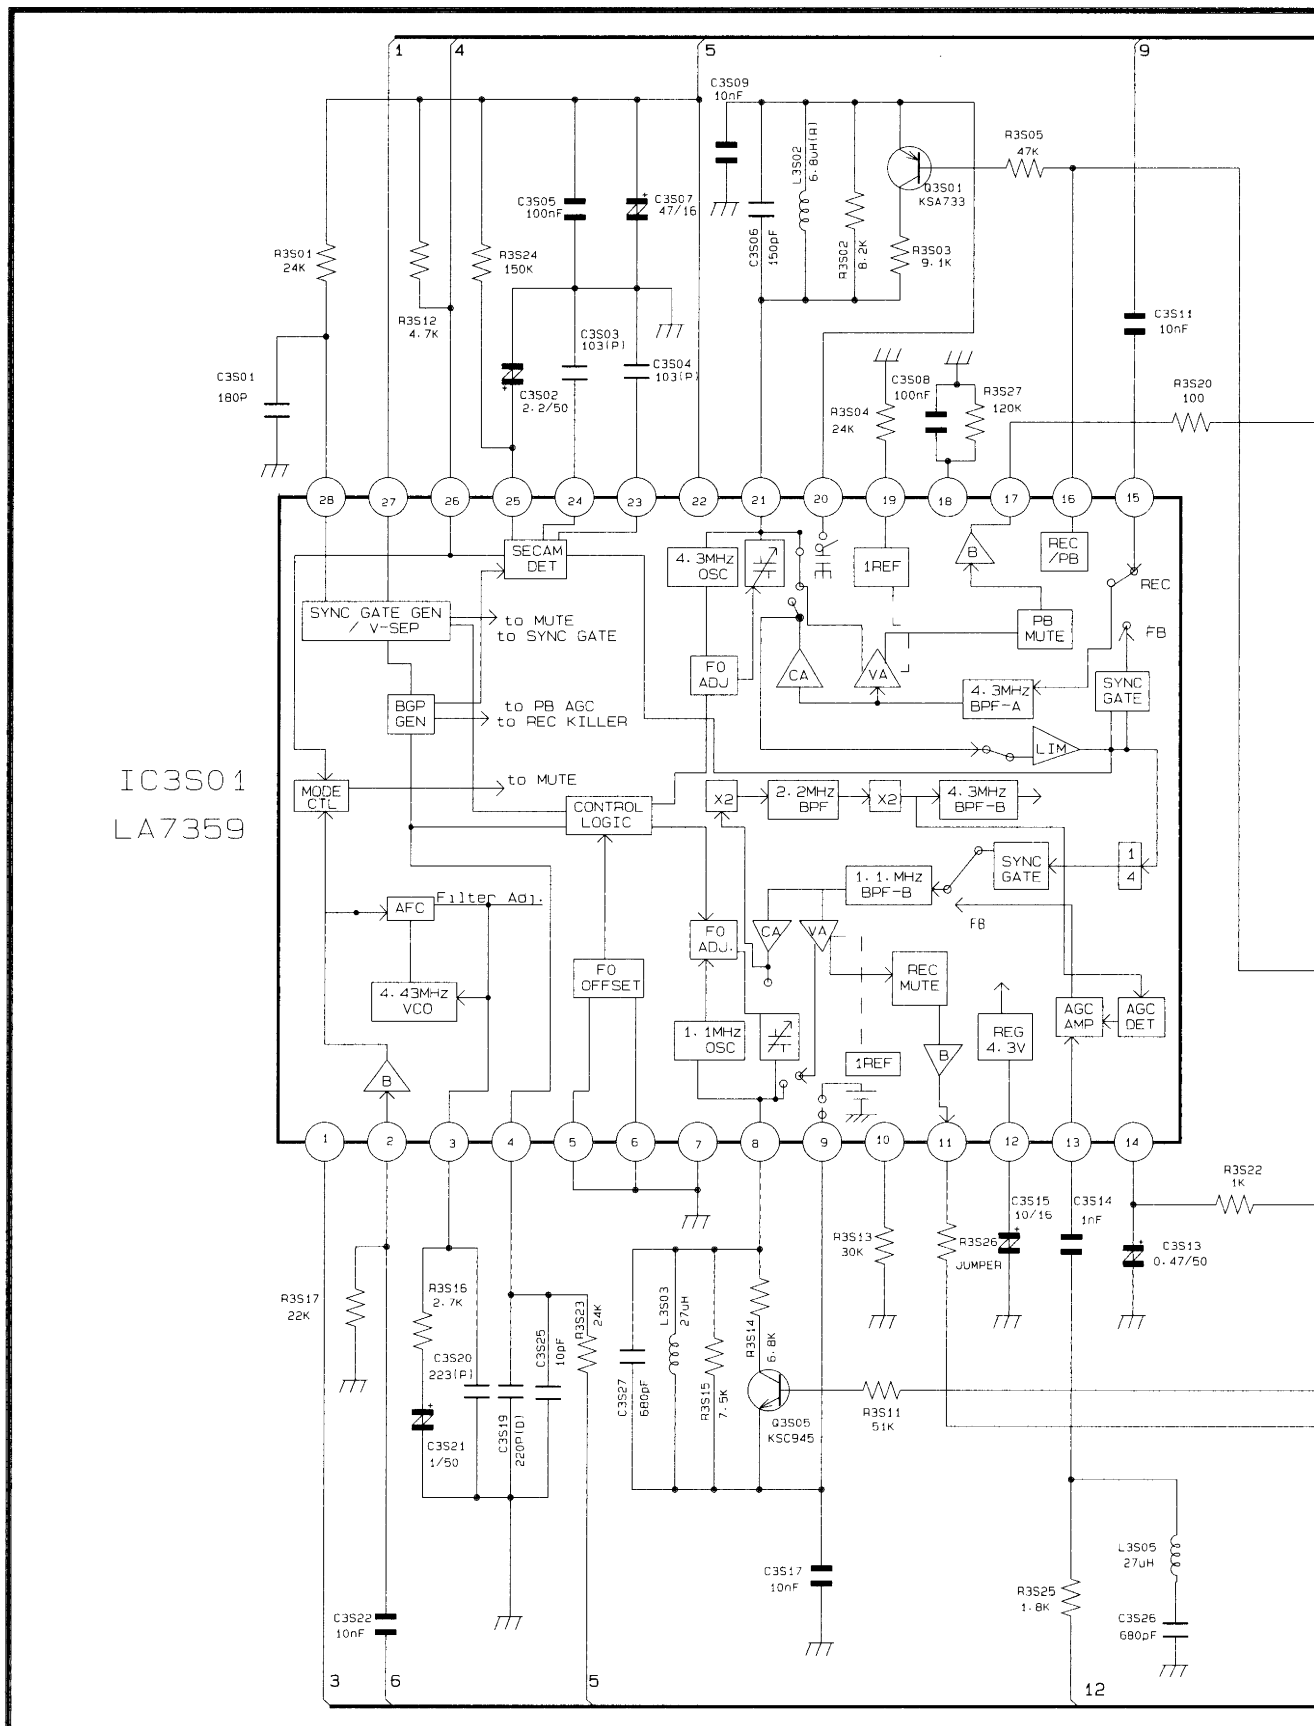


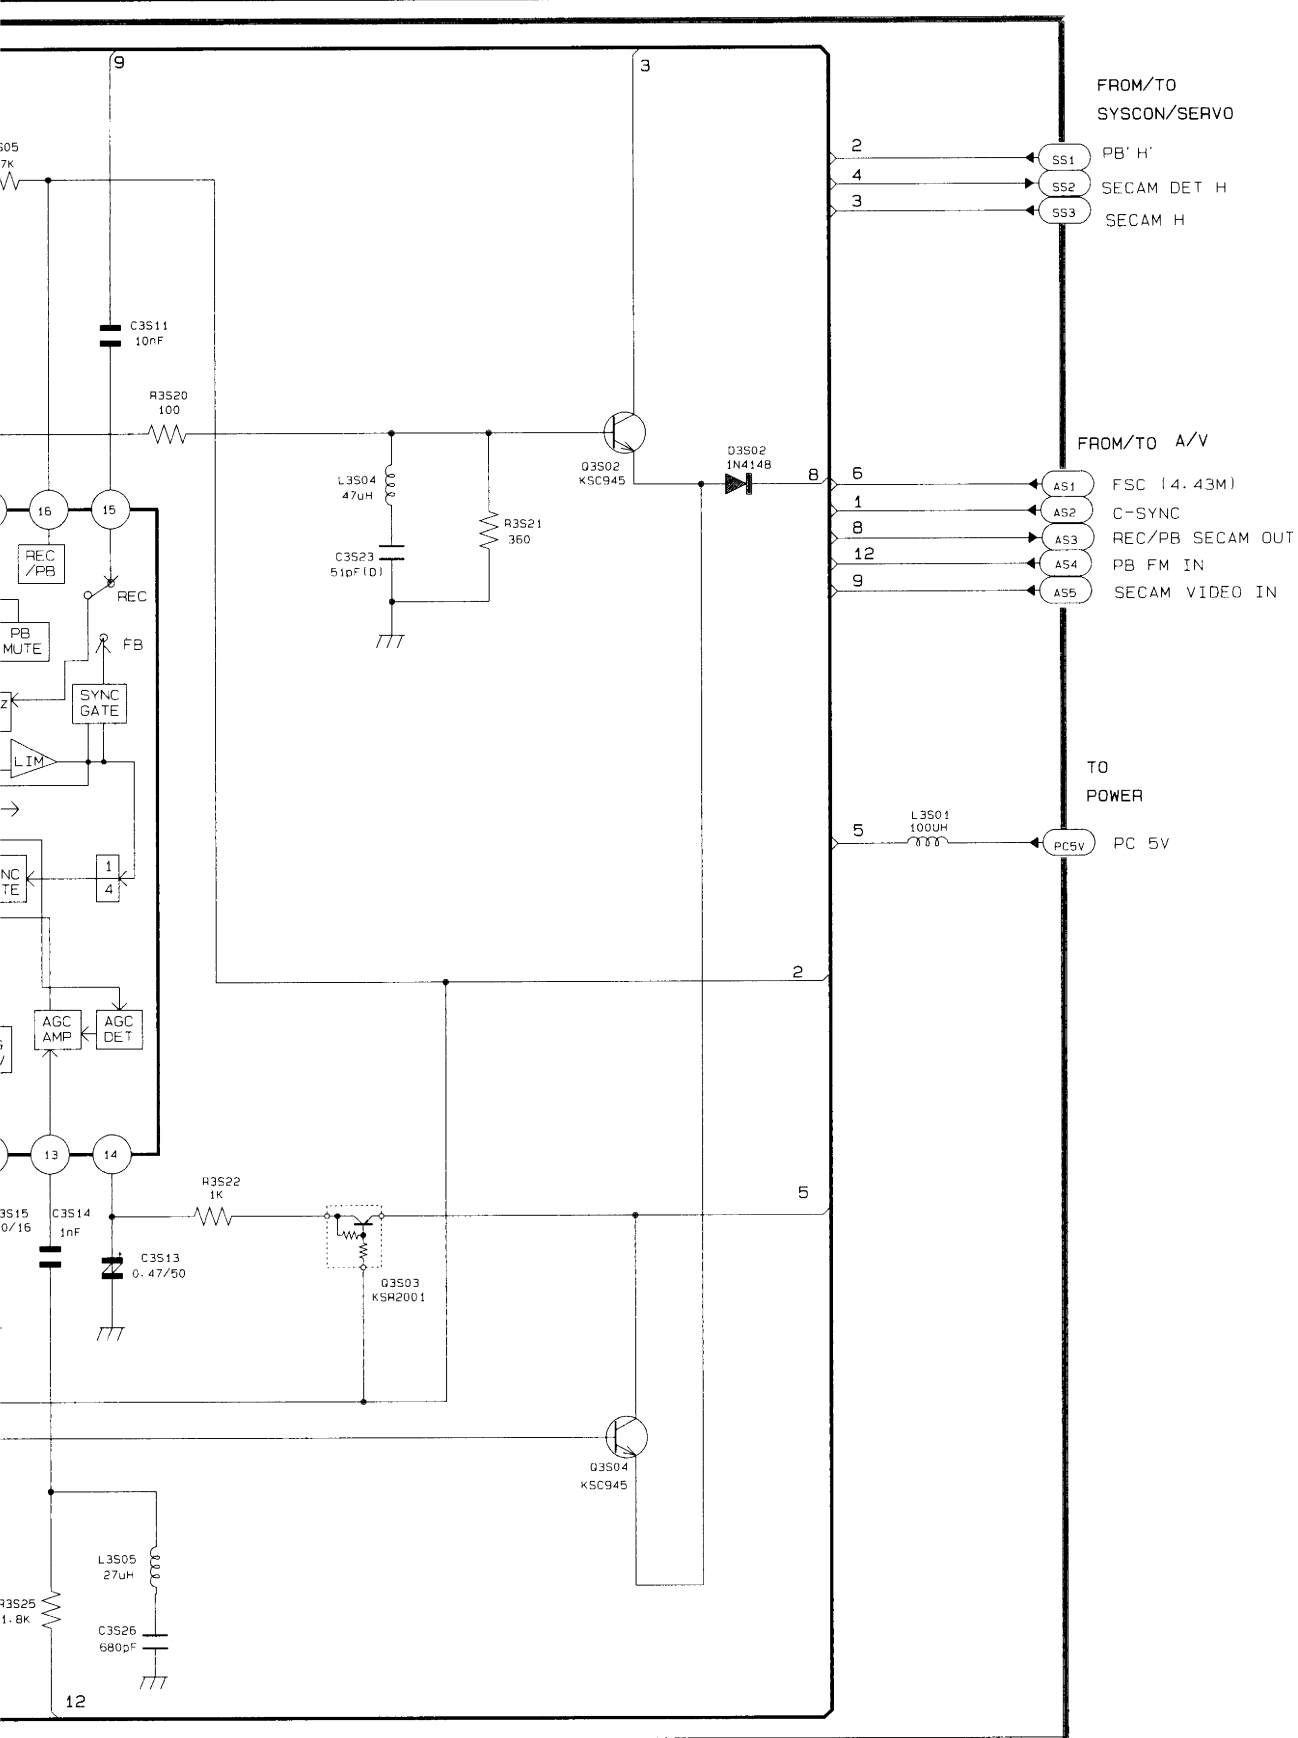


# 10-9 A2/NICAM

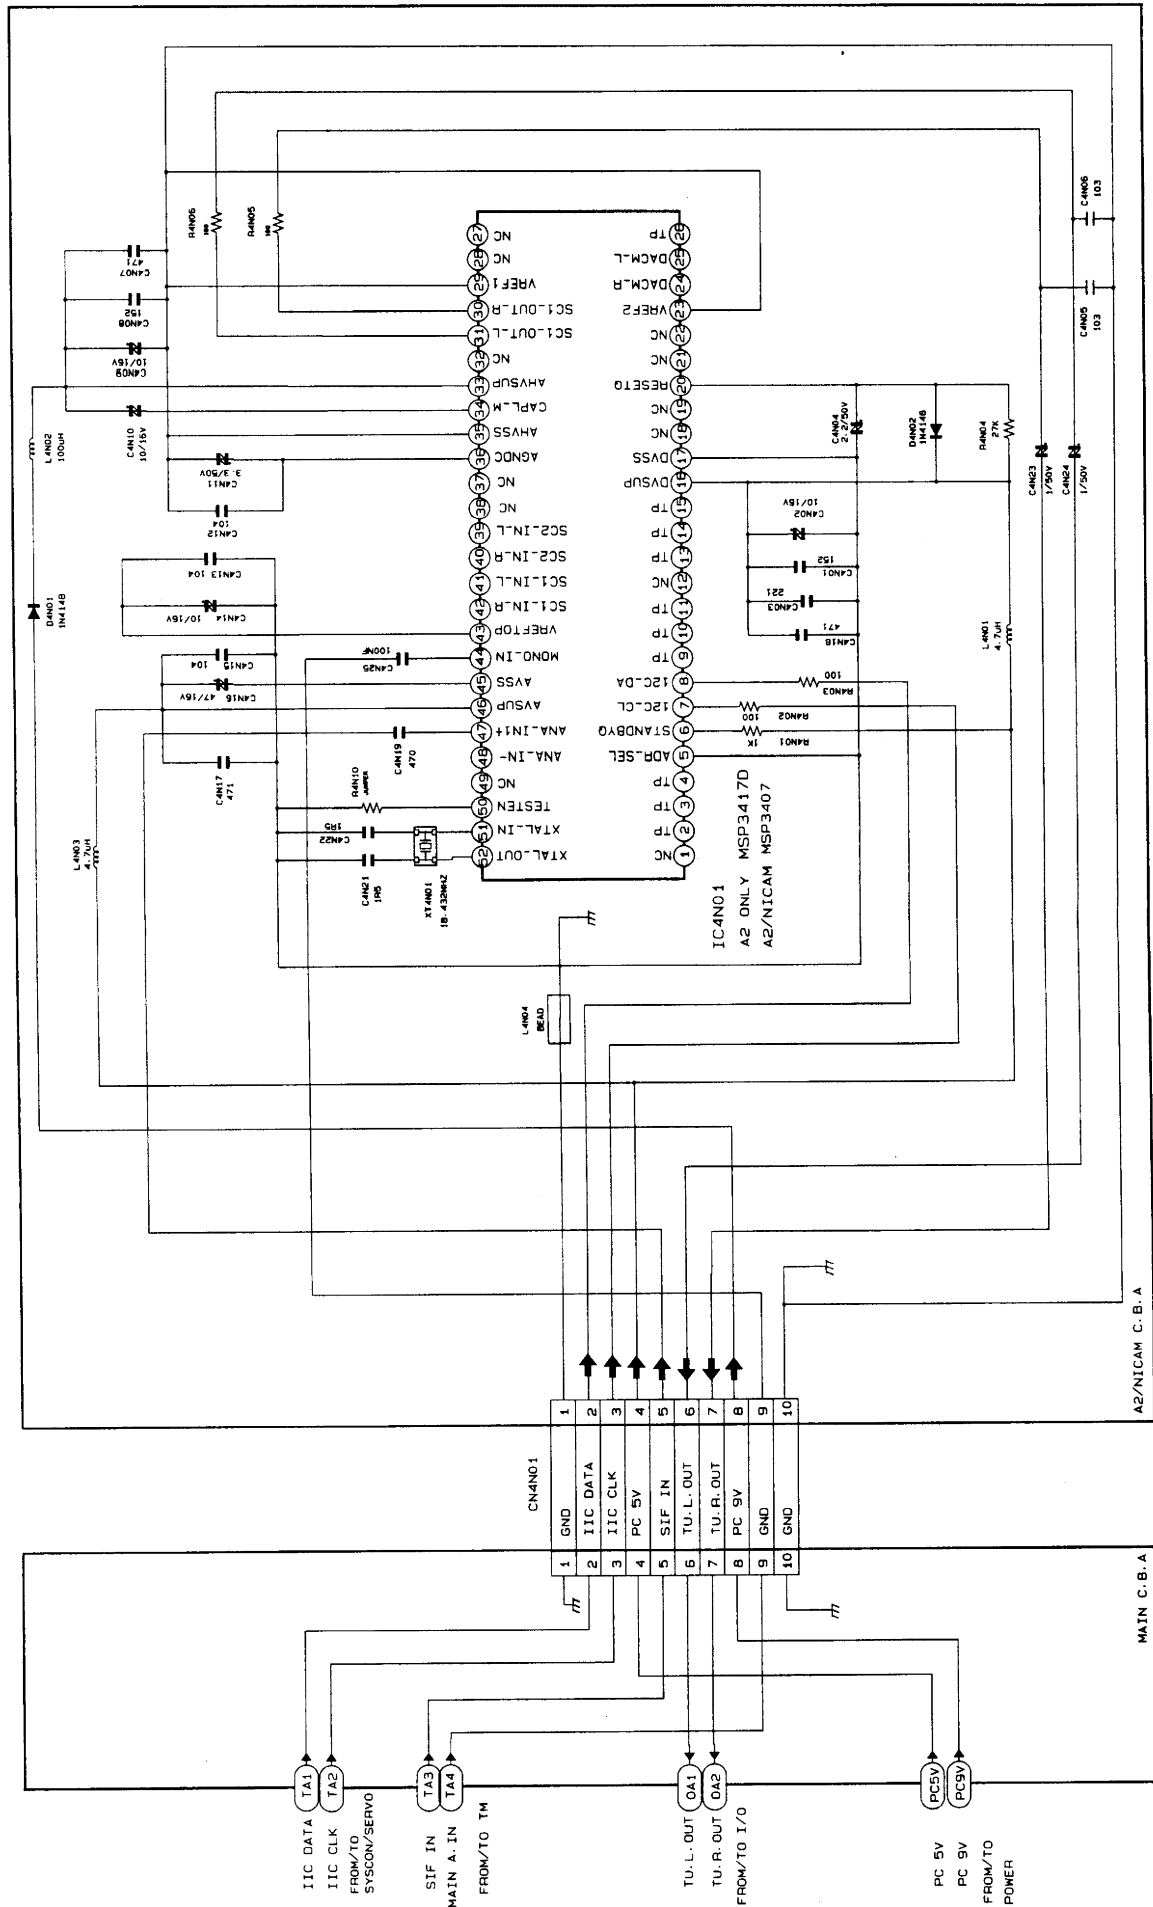


10-9 A2/NICAM

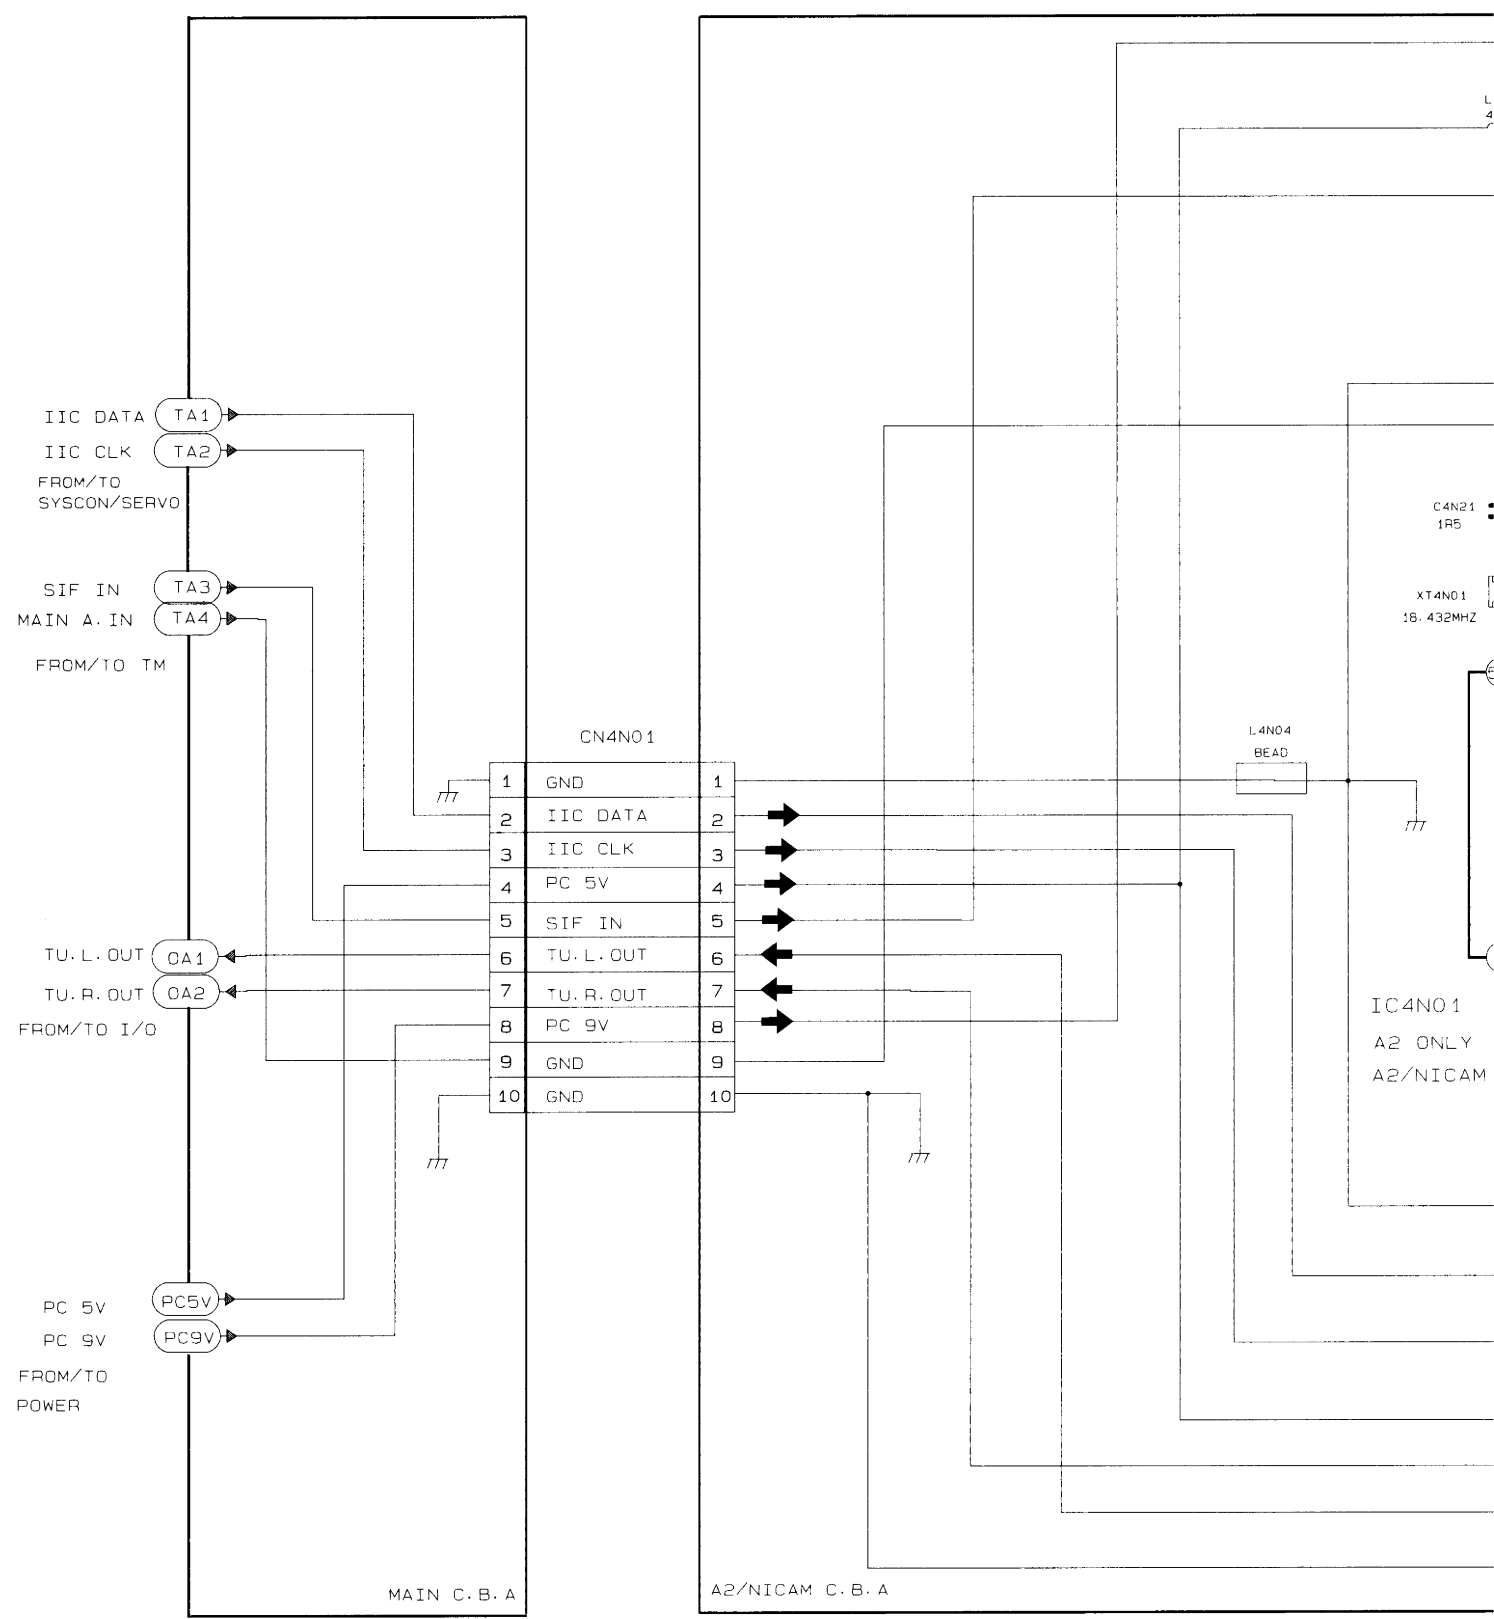

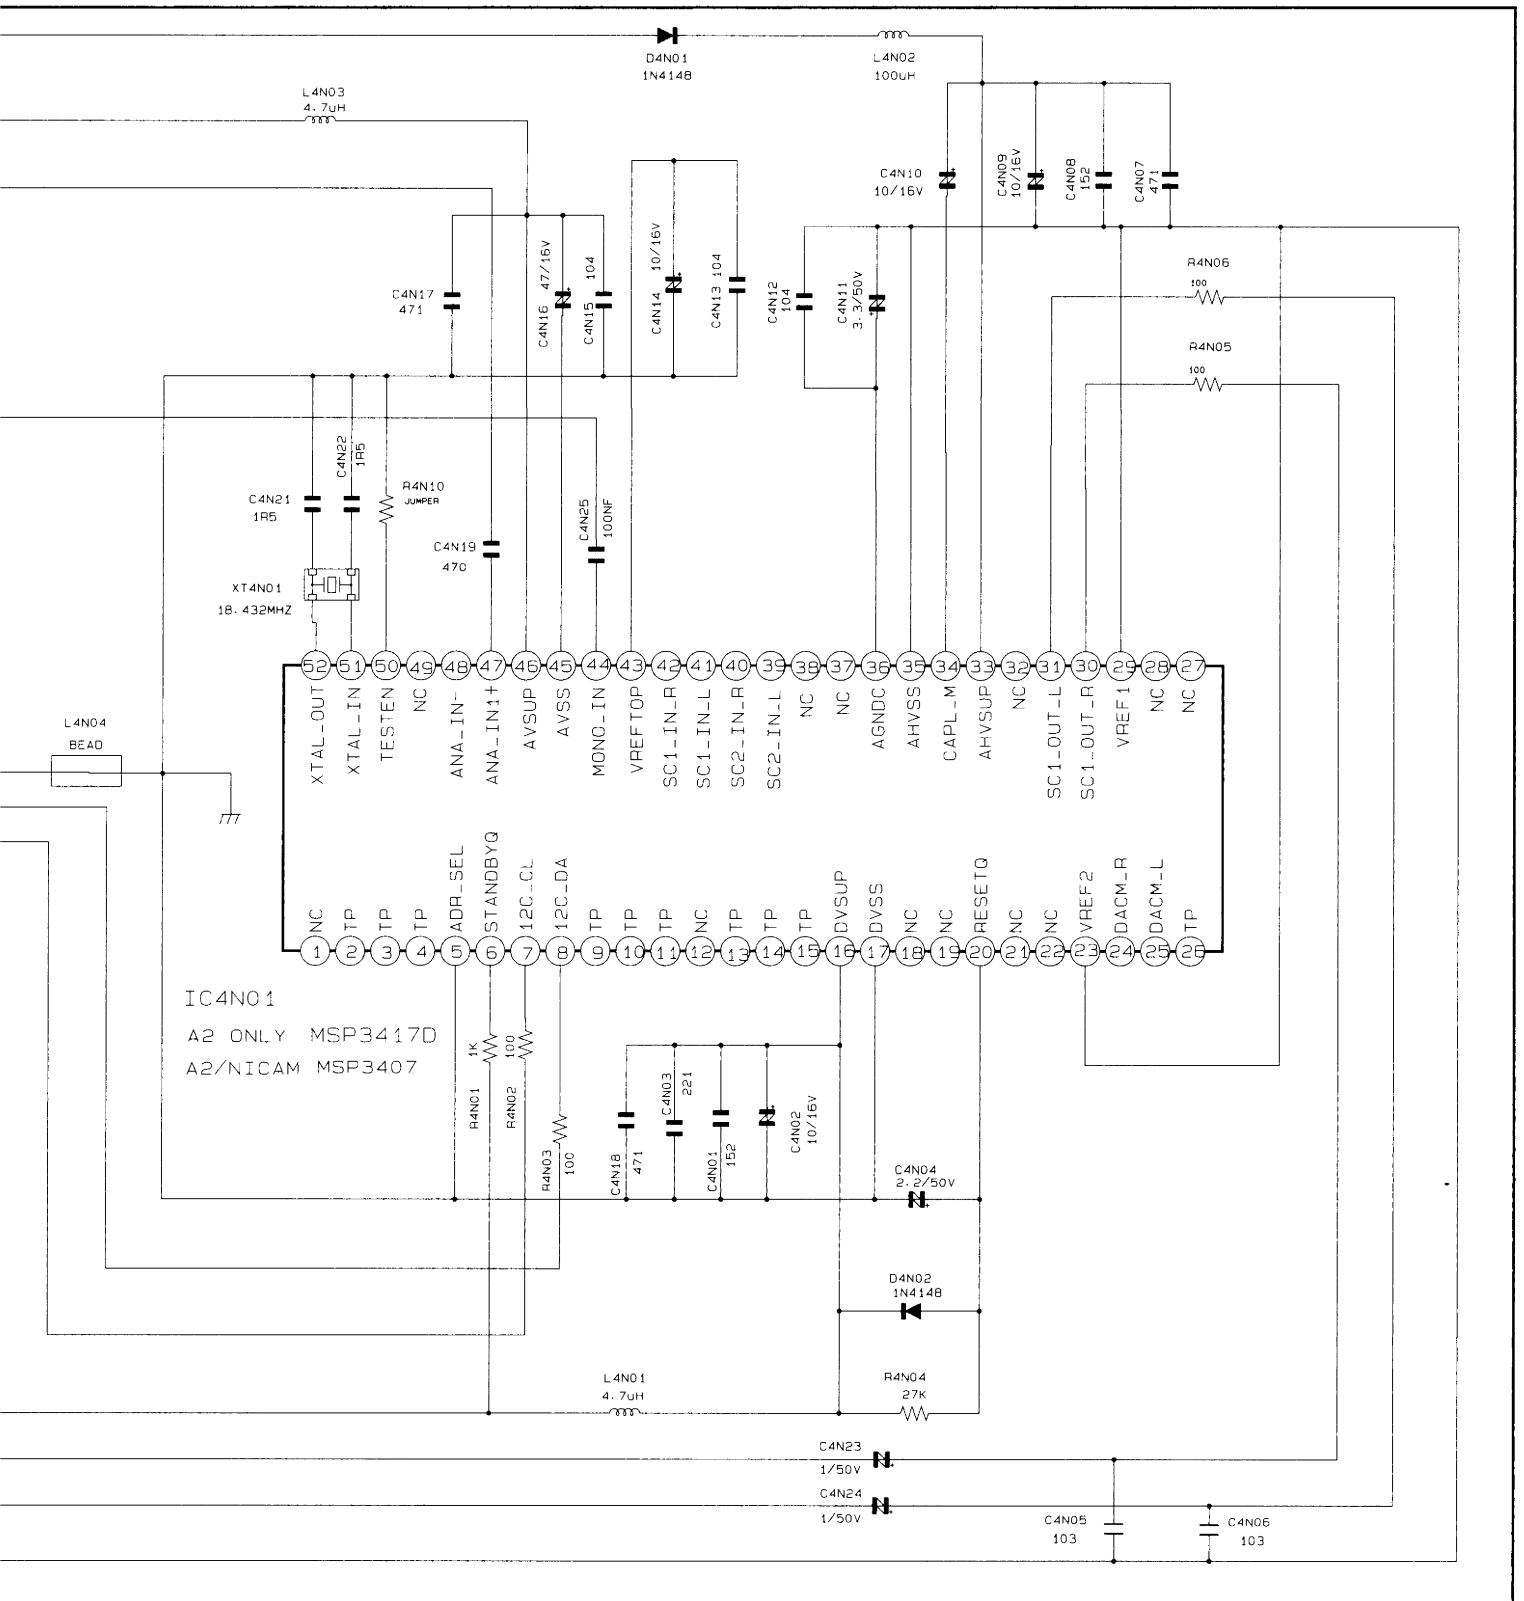



## 10-10 Input-Output (2 Scart)

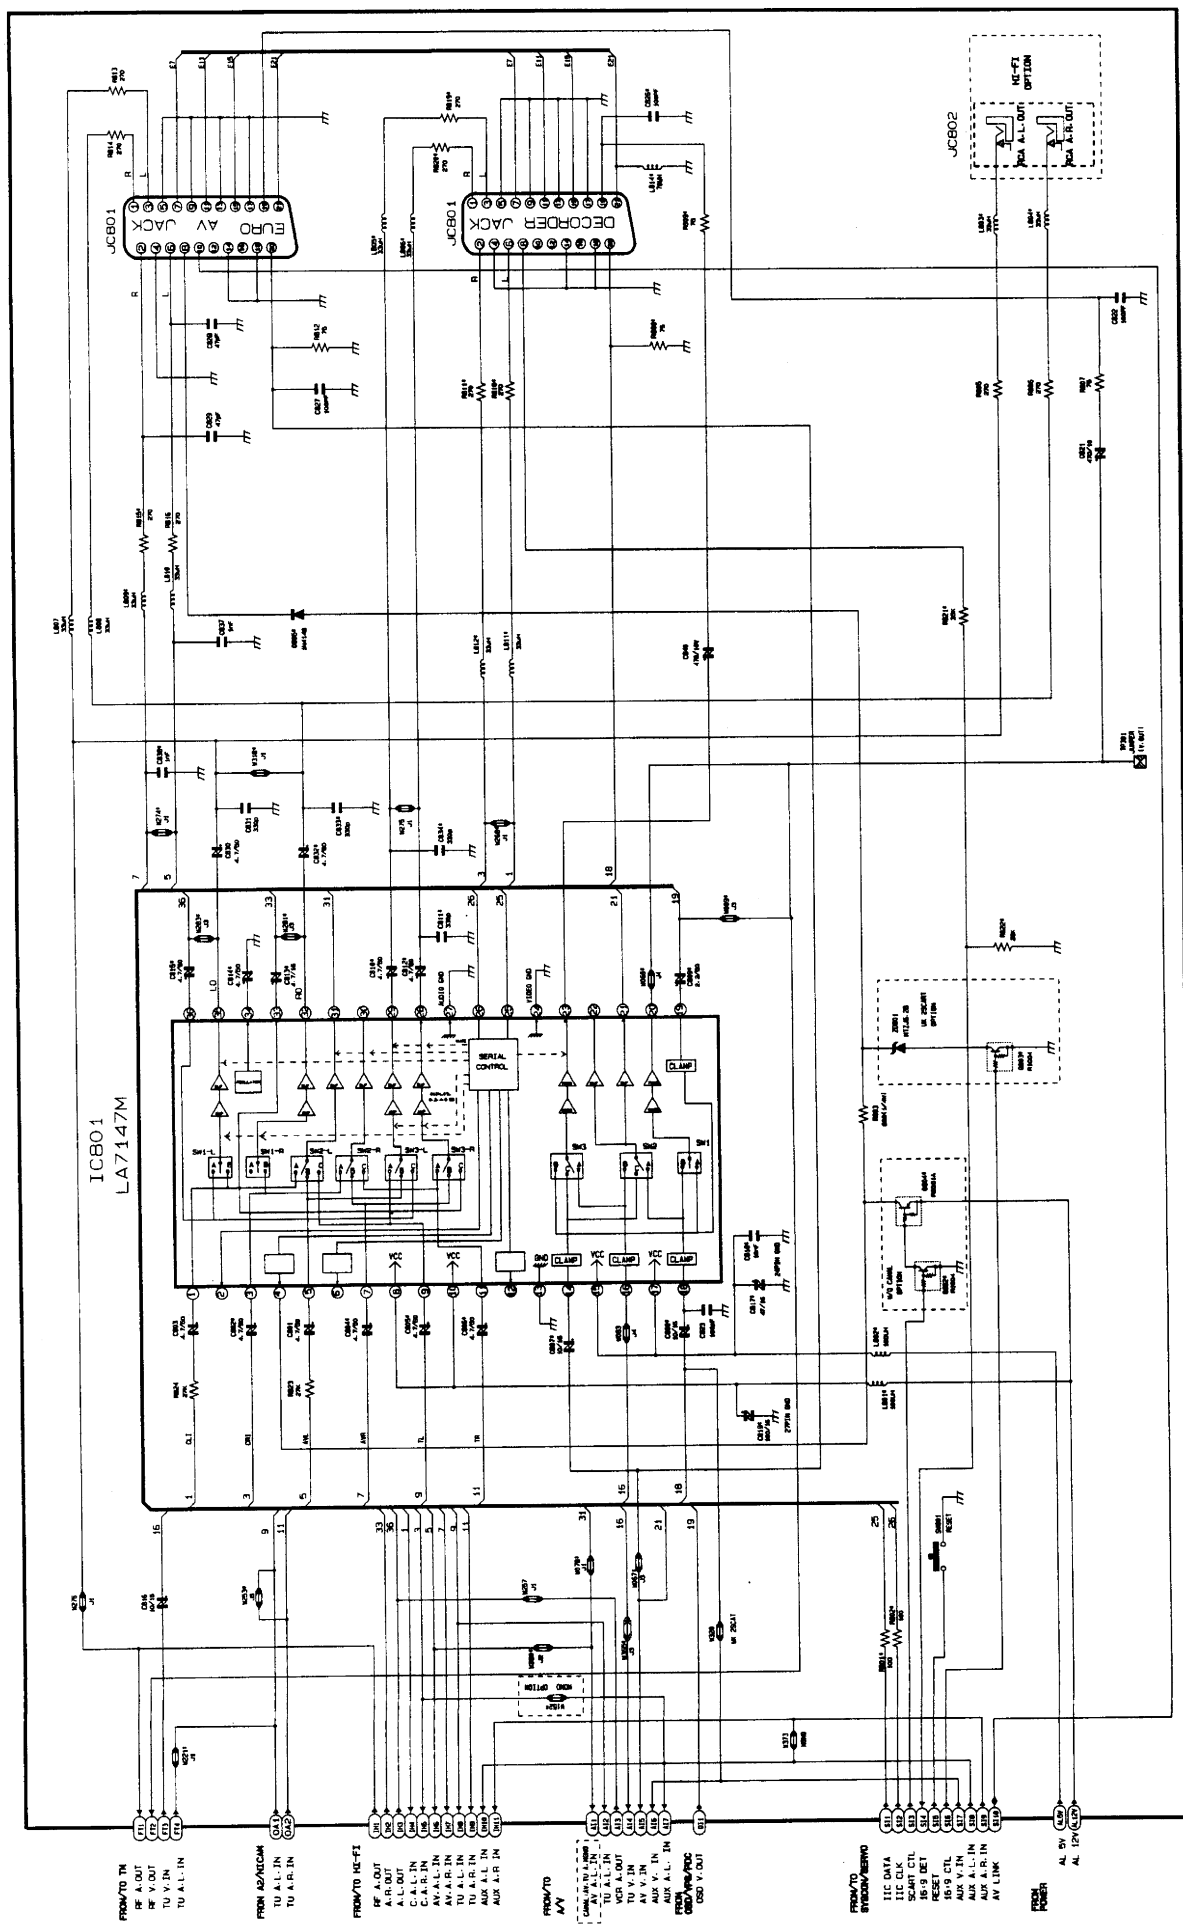







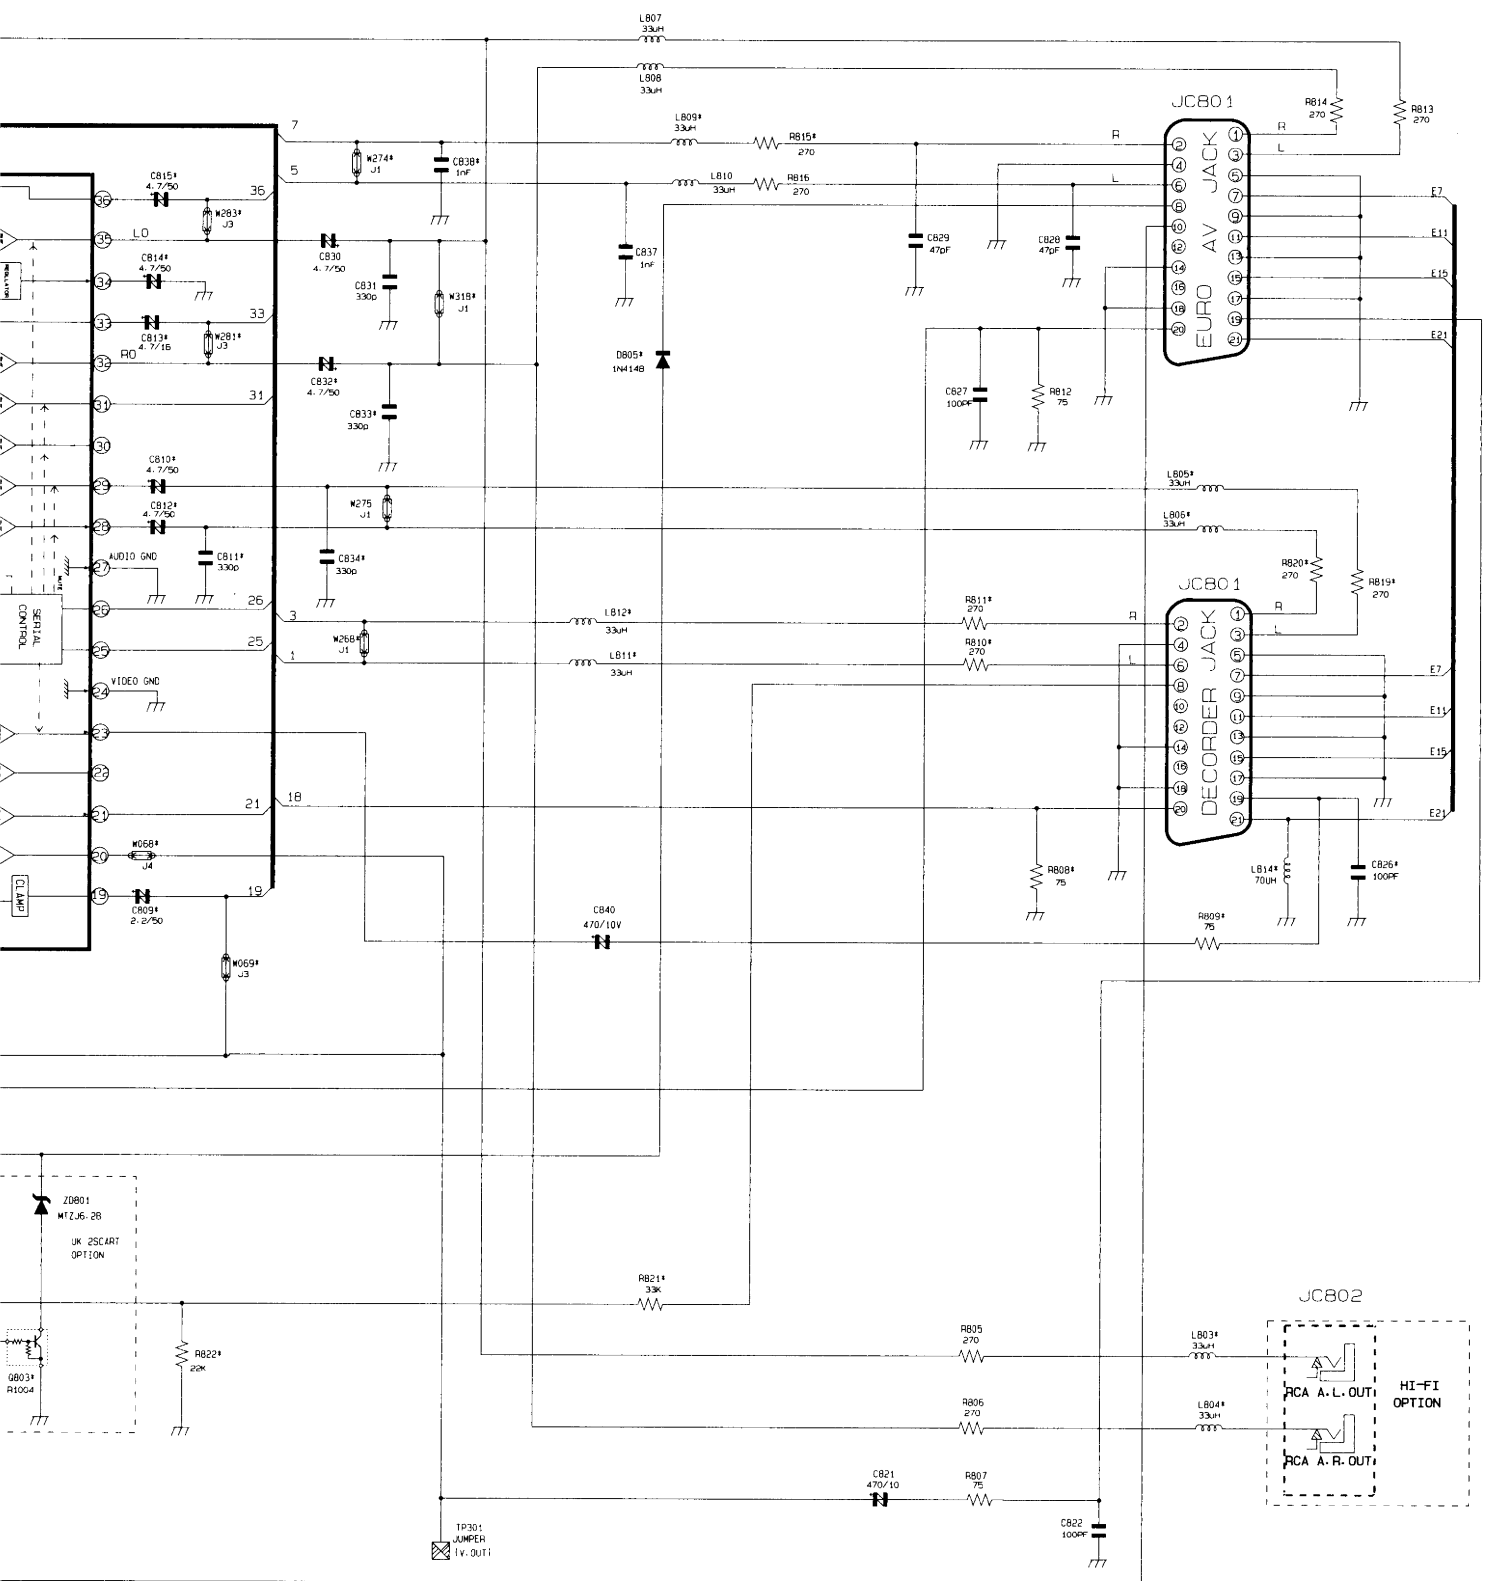

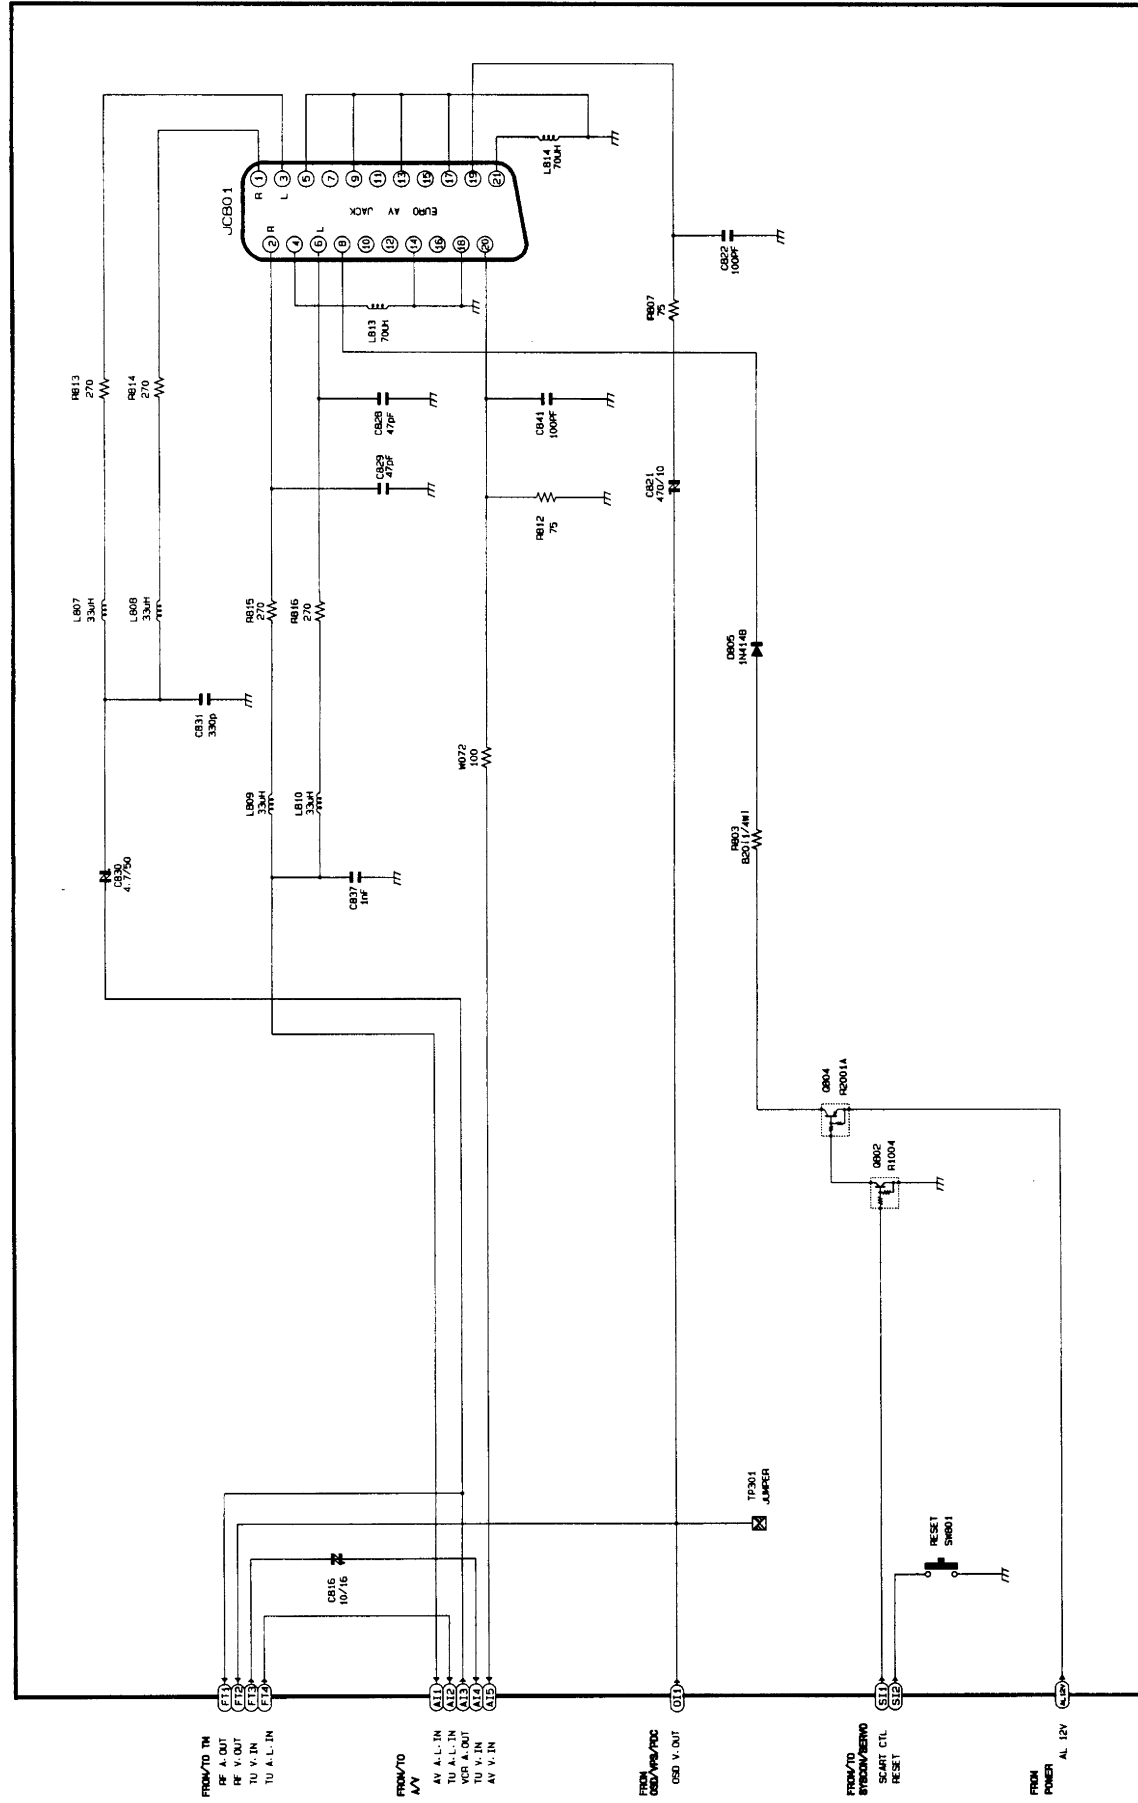


## 10-11 Input-Output (1 Scart)

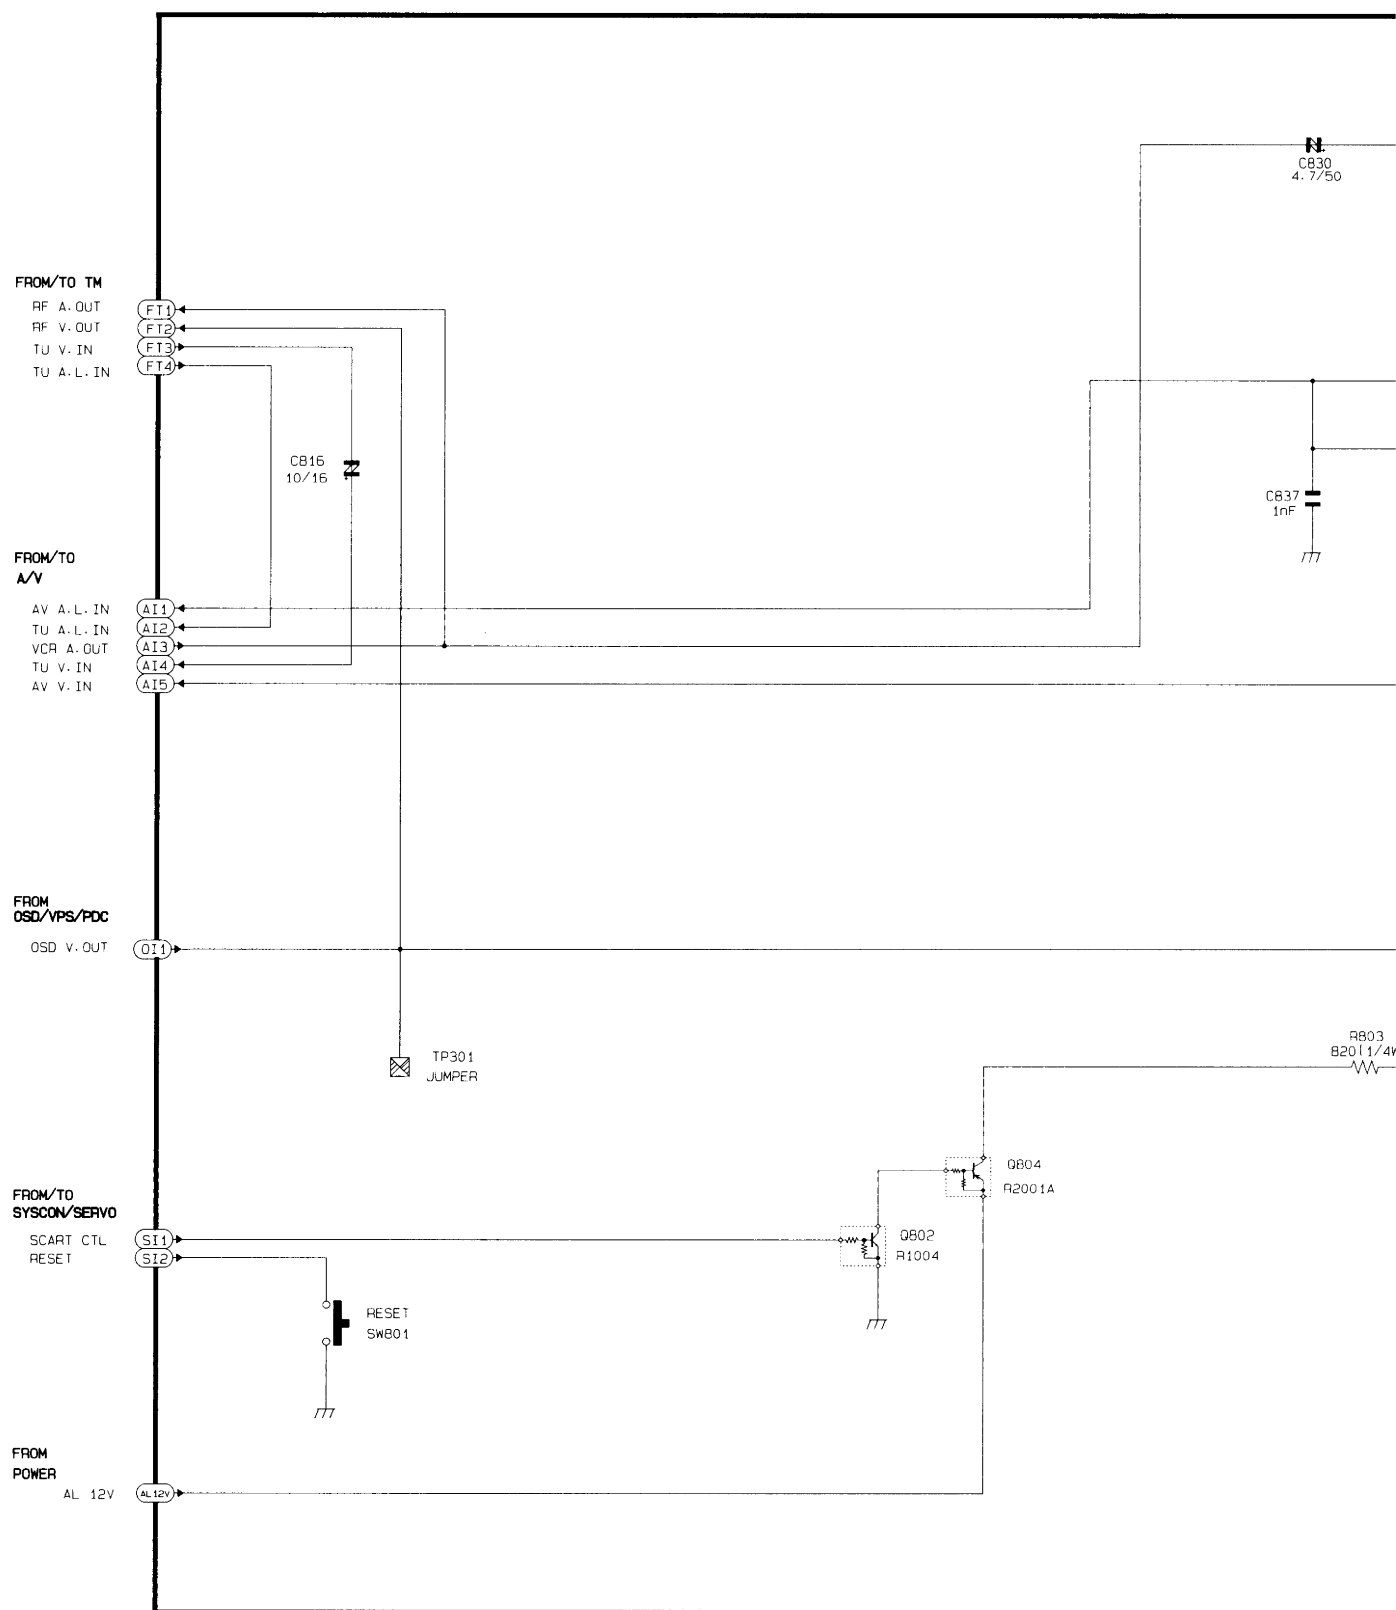


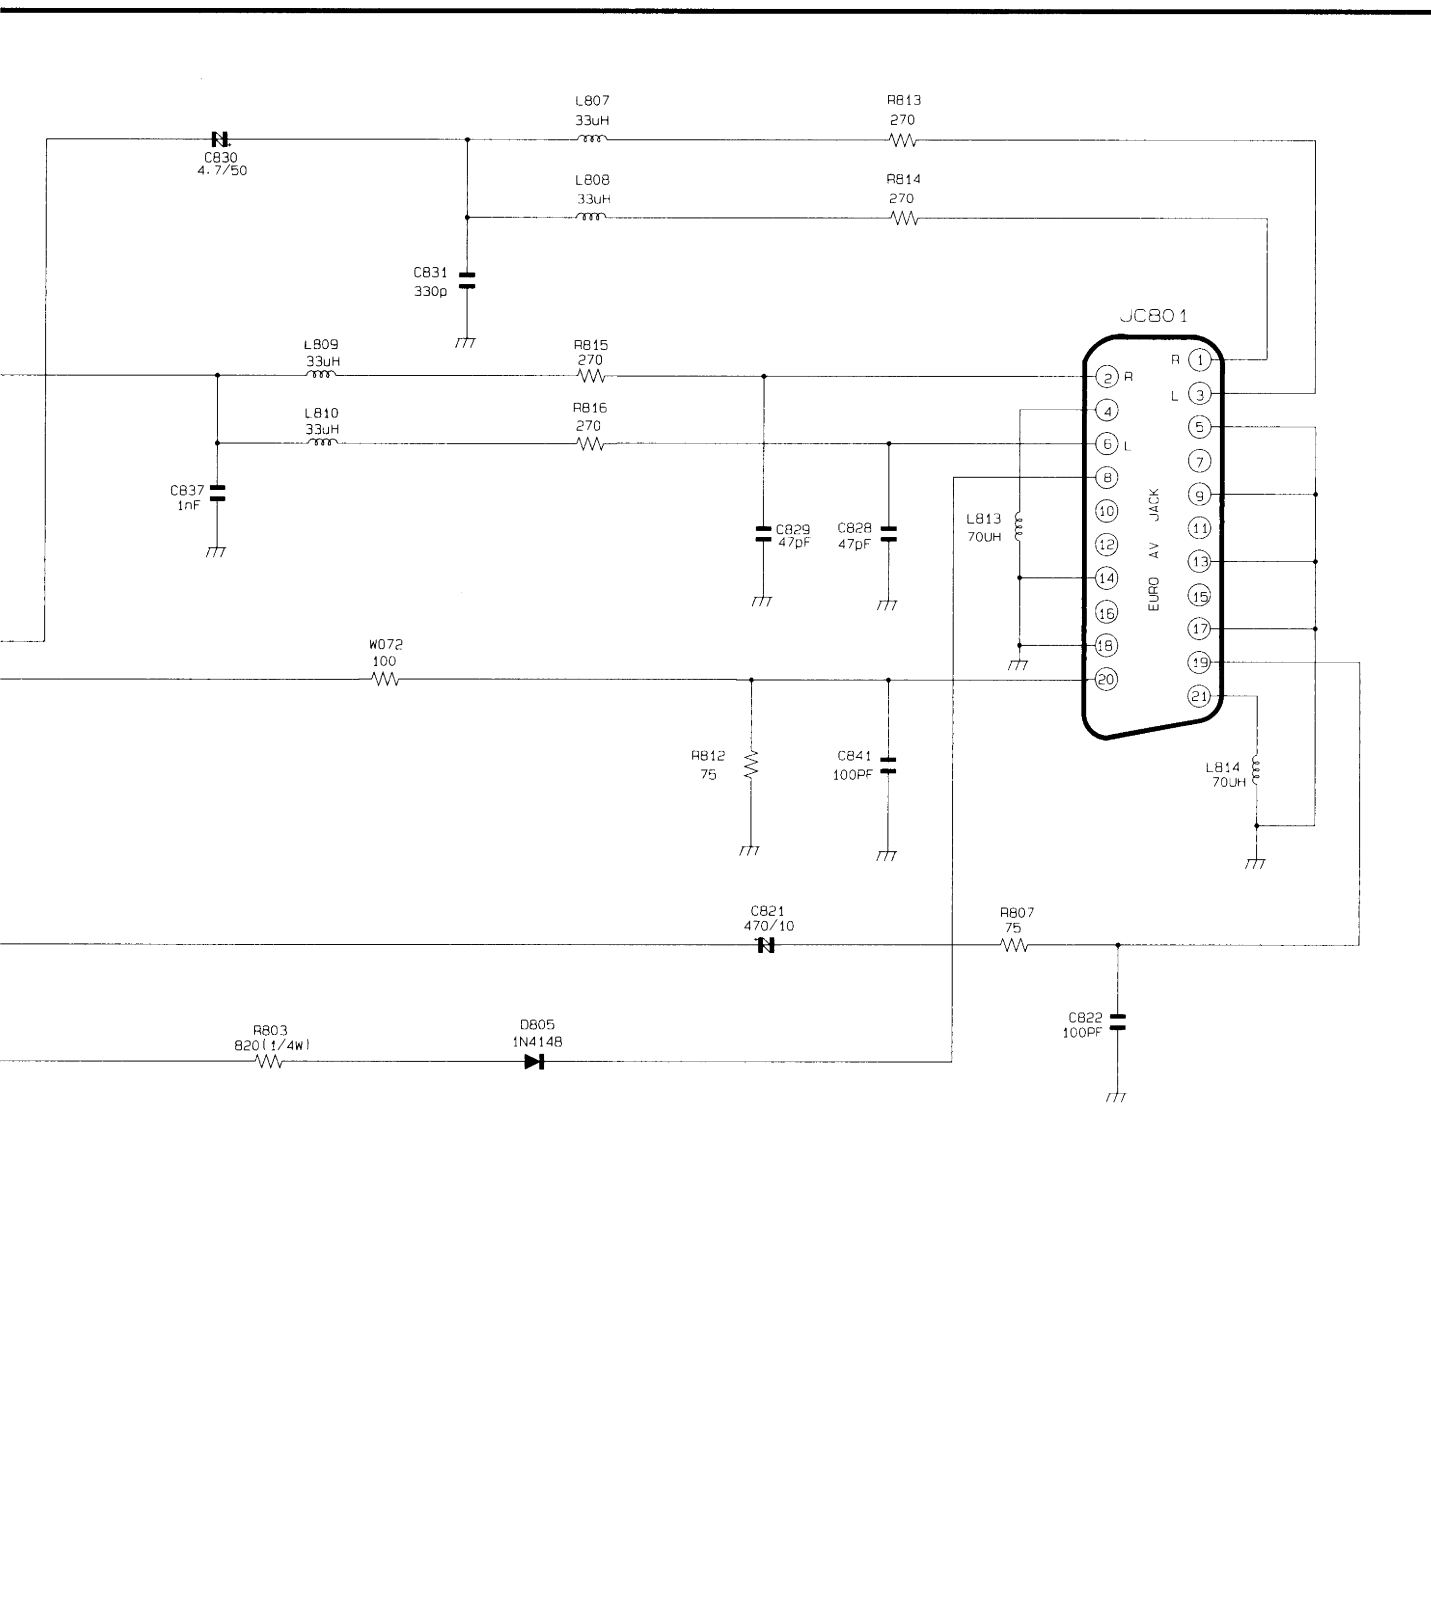




10-12 OSD/VPS/PCD

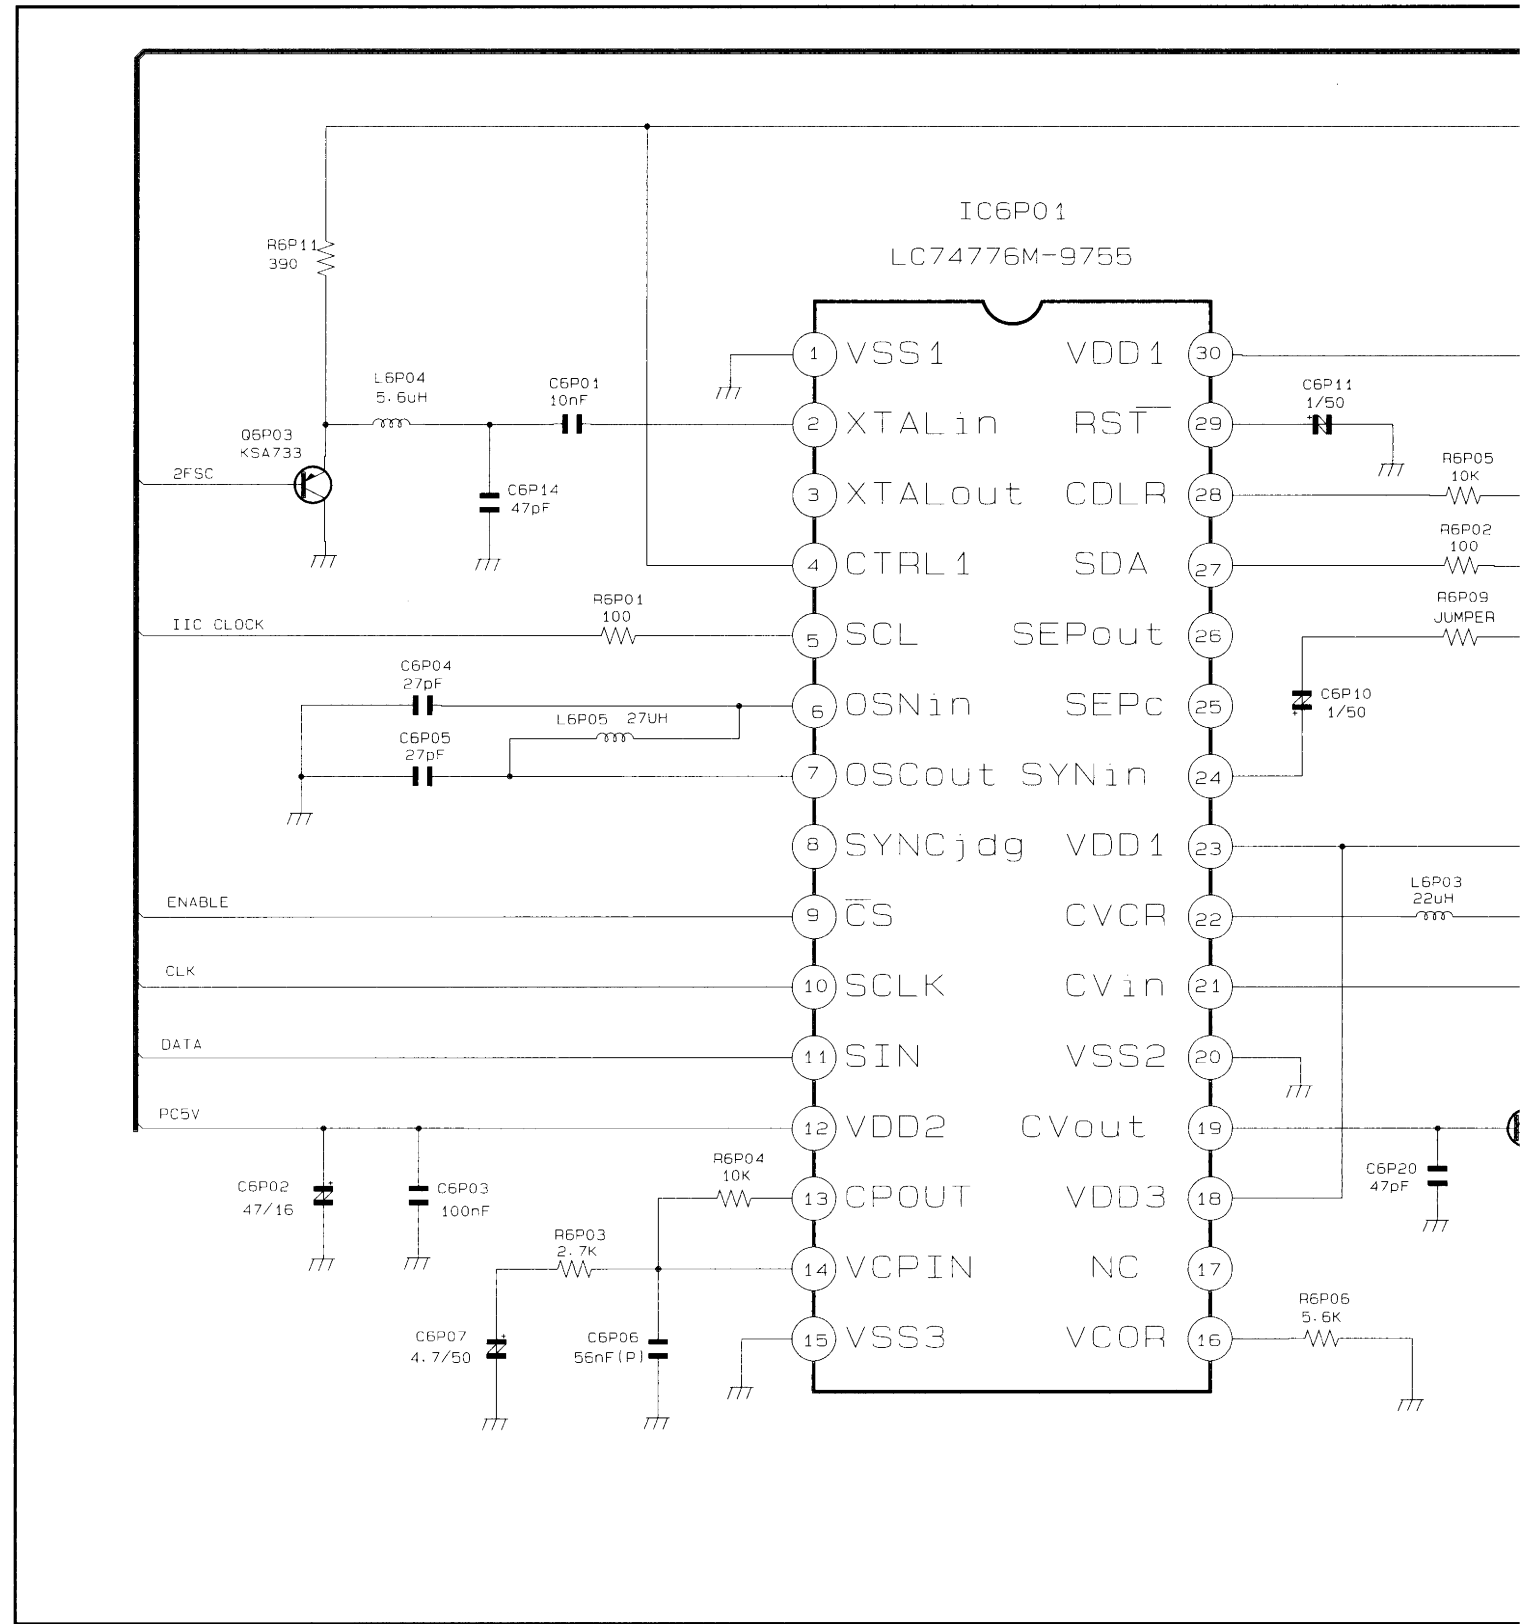

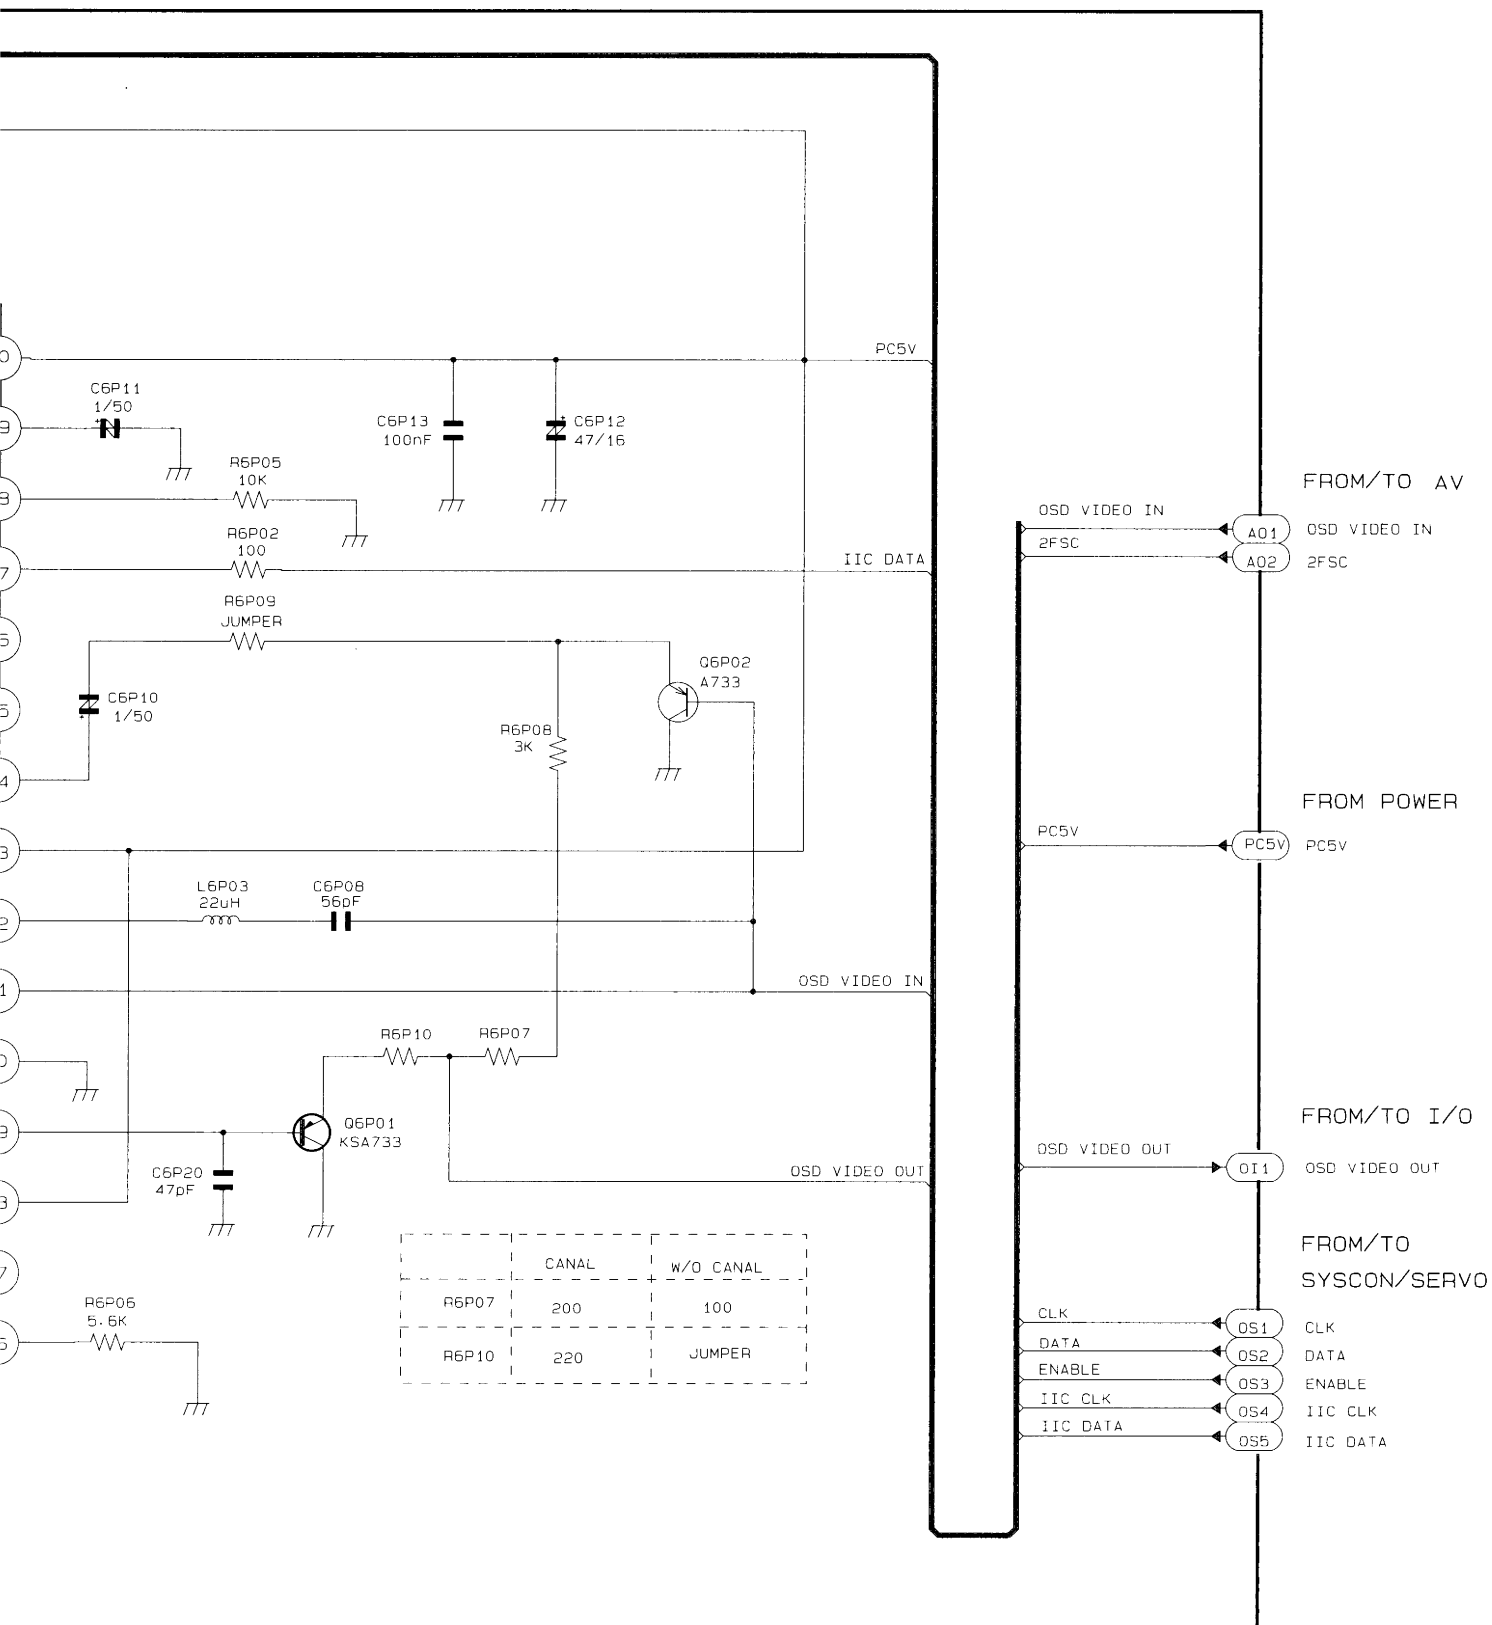



## 10-13 OSD (Without VPS/PDC)

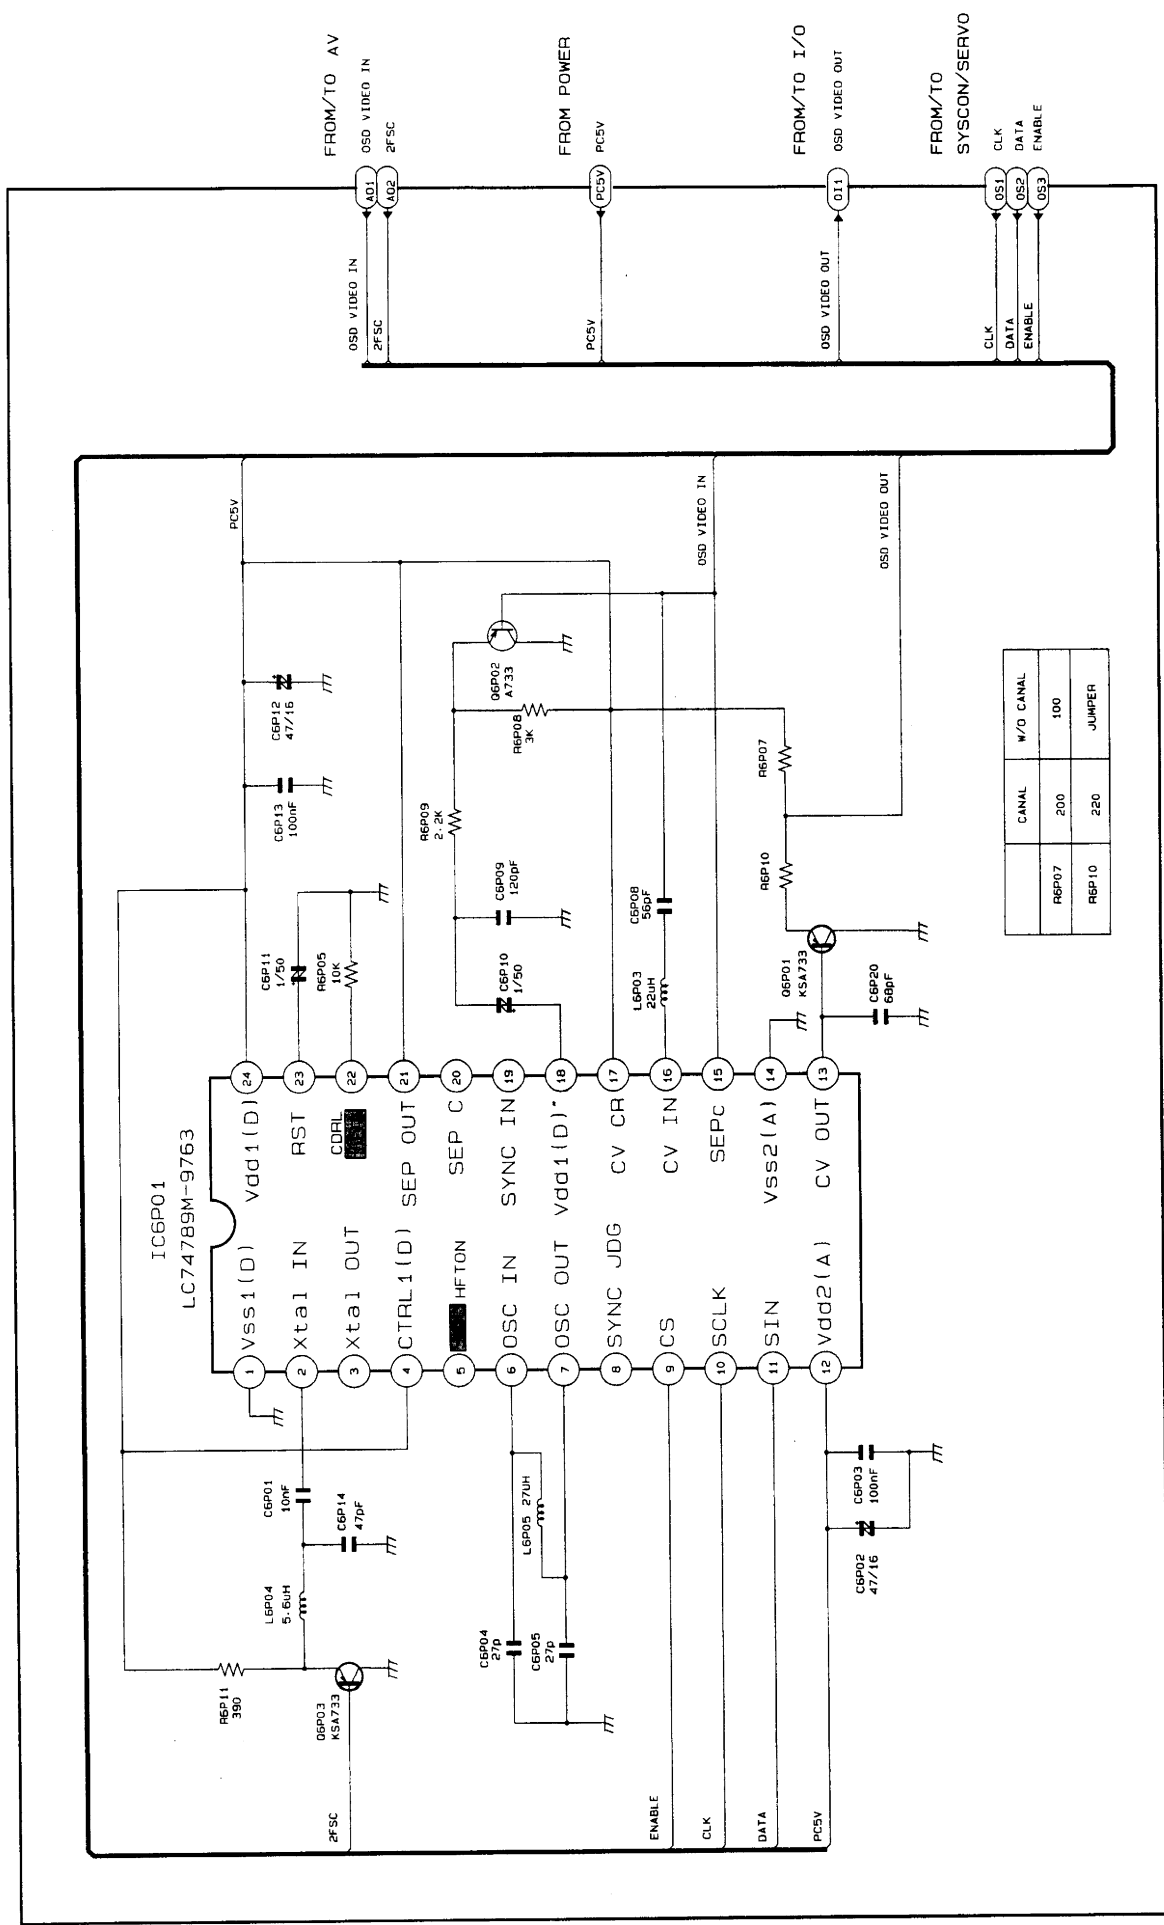




## 10-13 OSD (Without VPS/PDC)

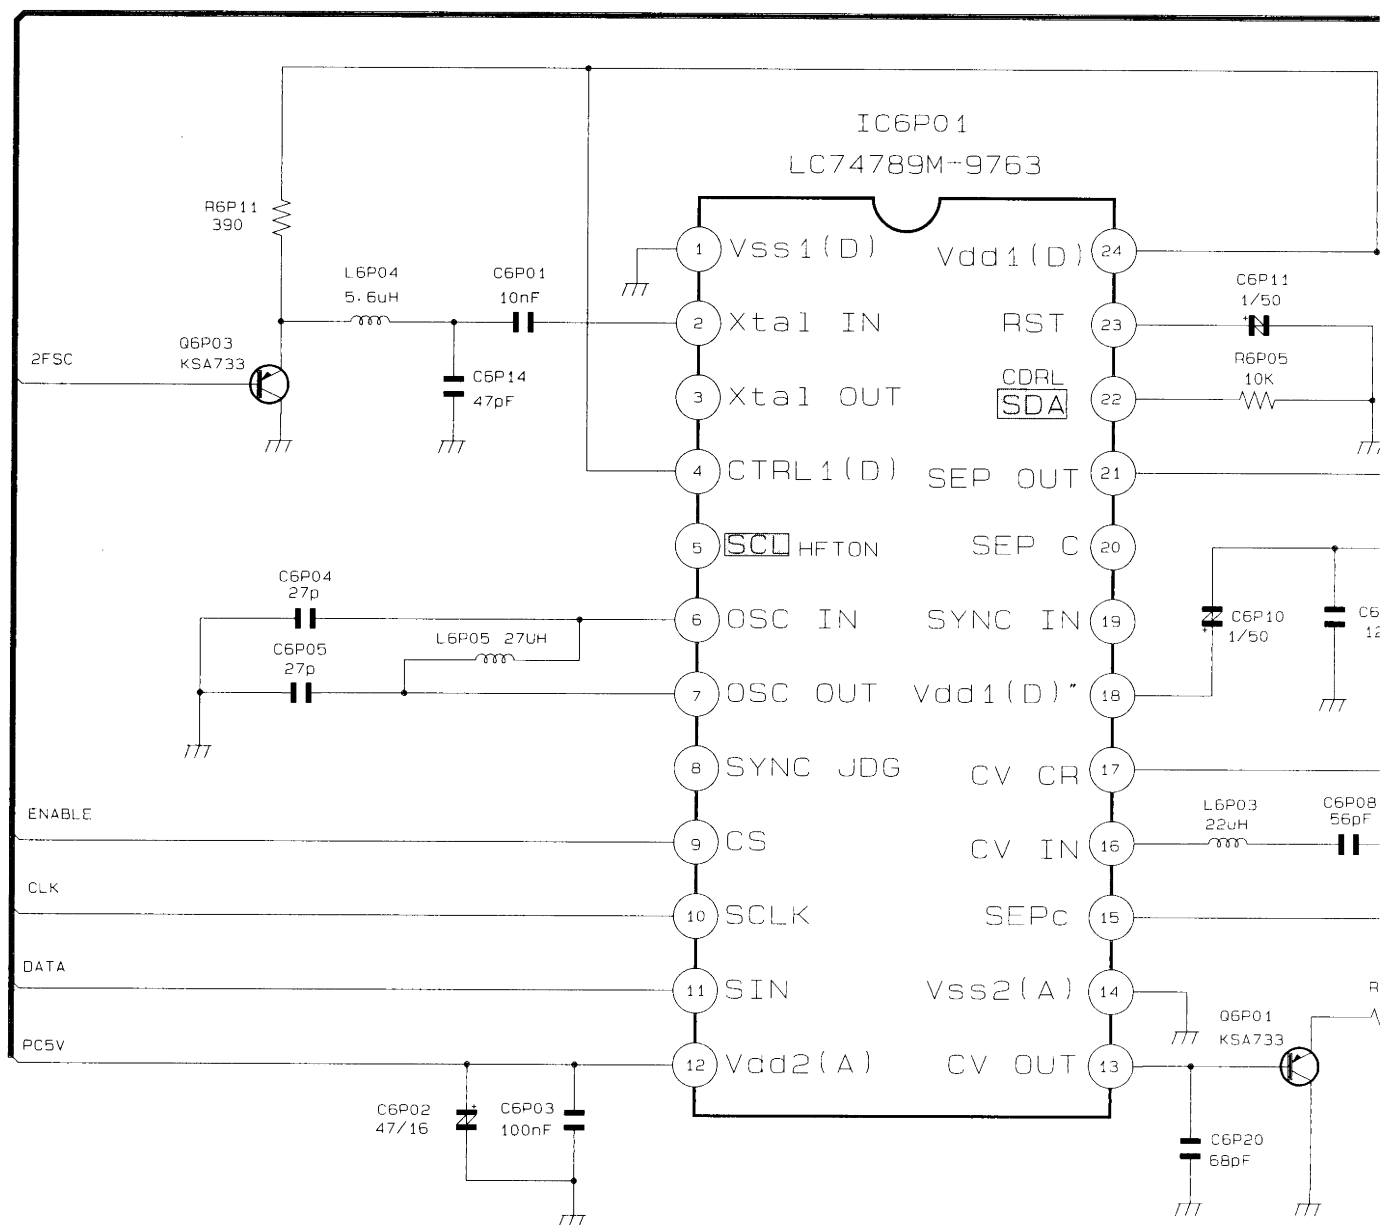

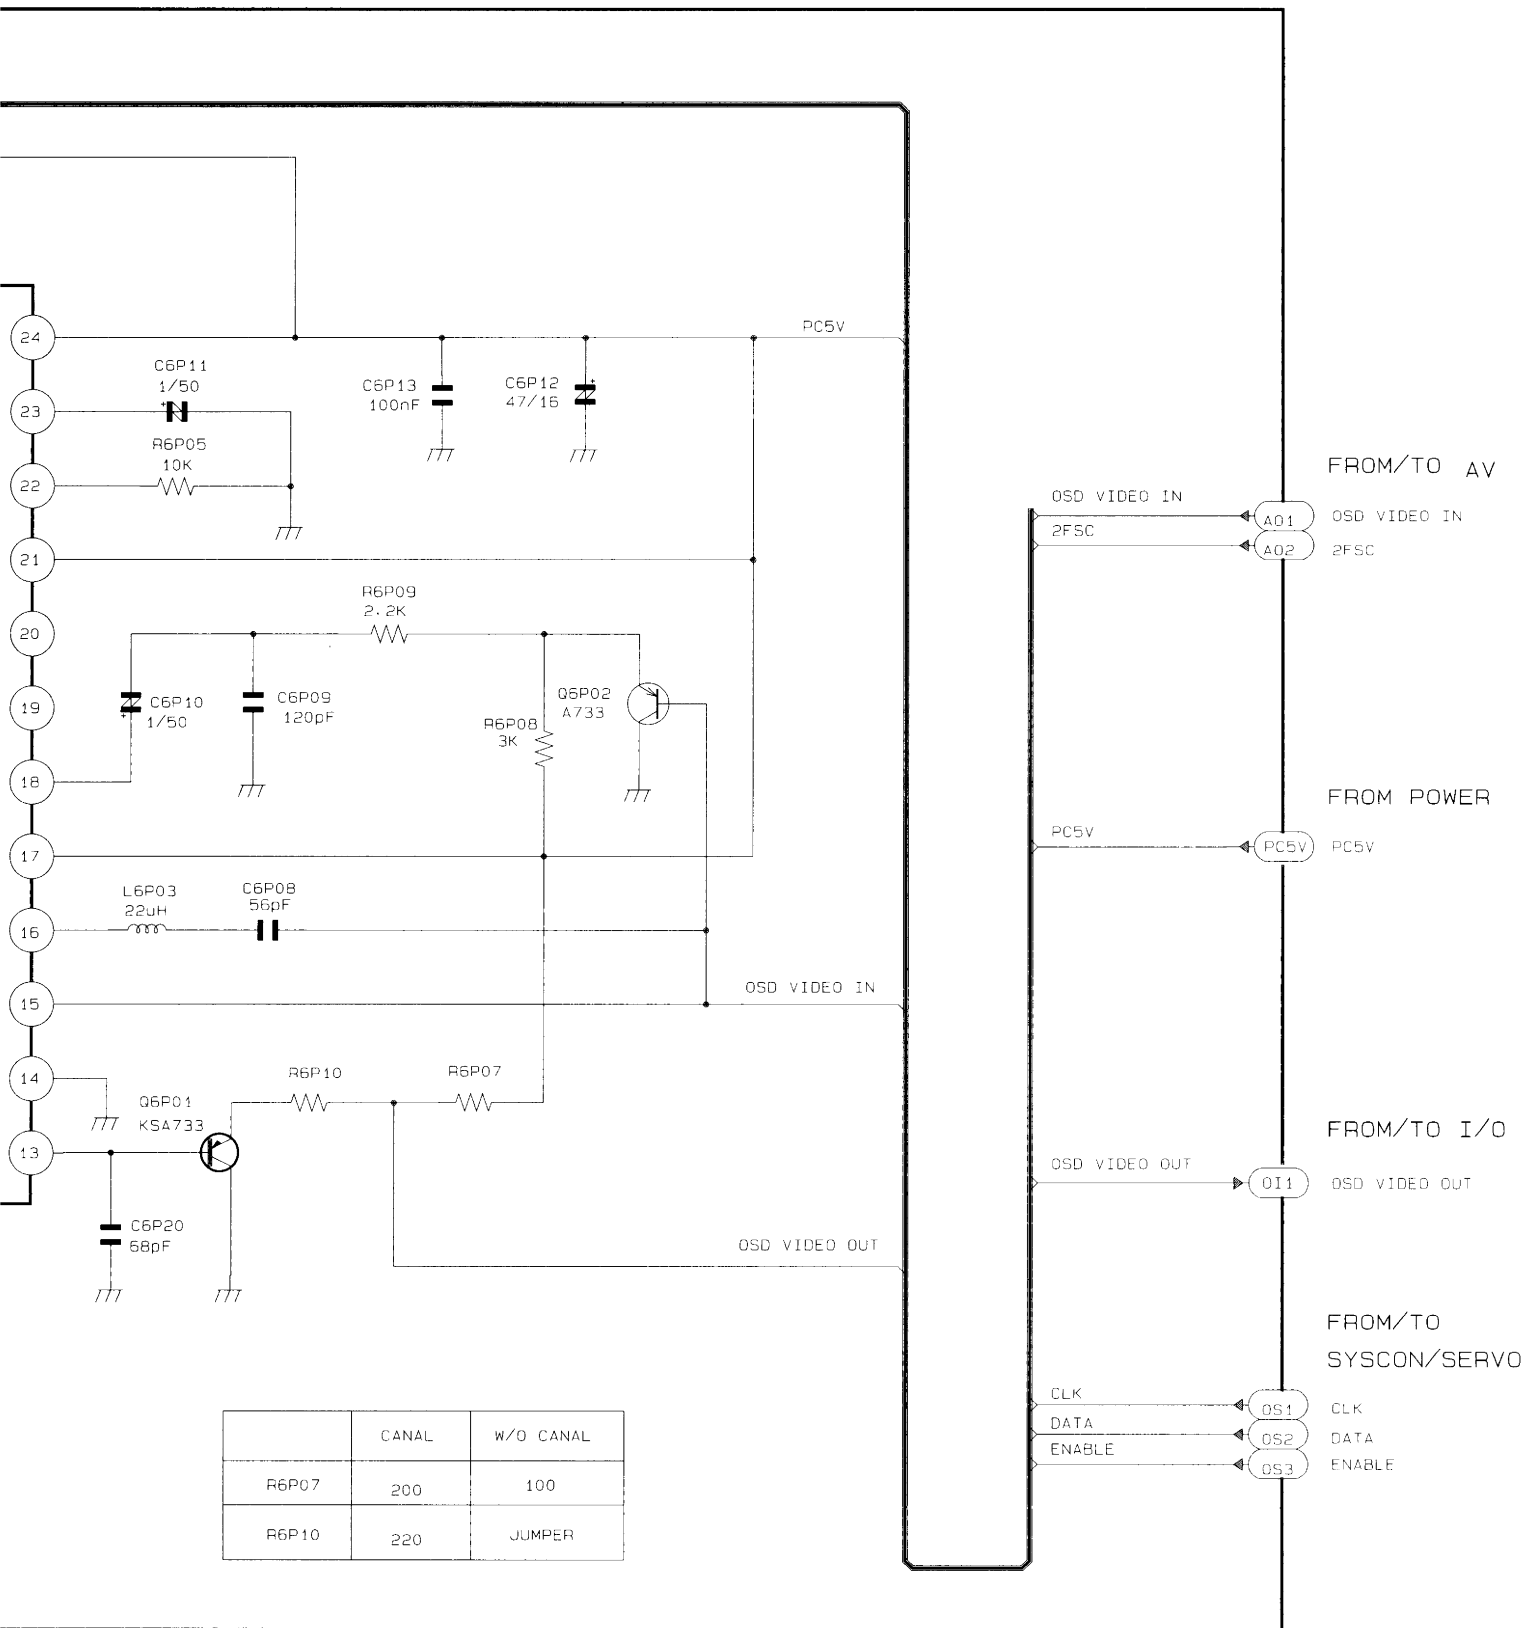





## 10-14 VFD (With AV-Link)

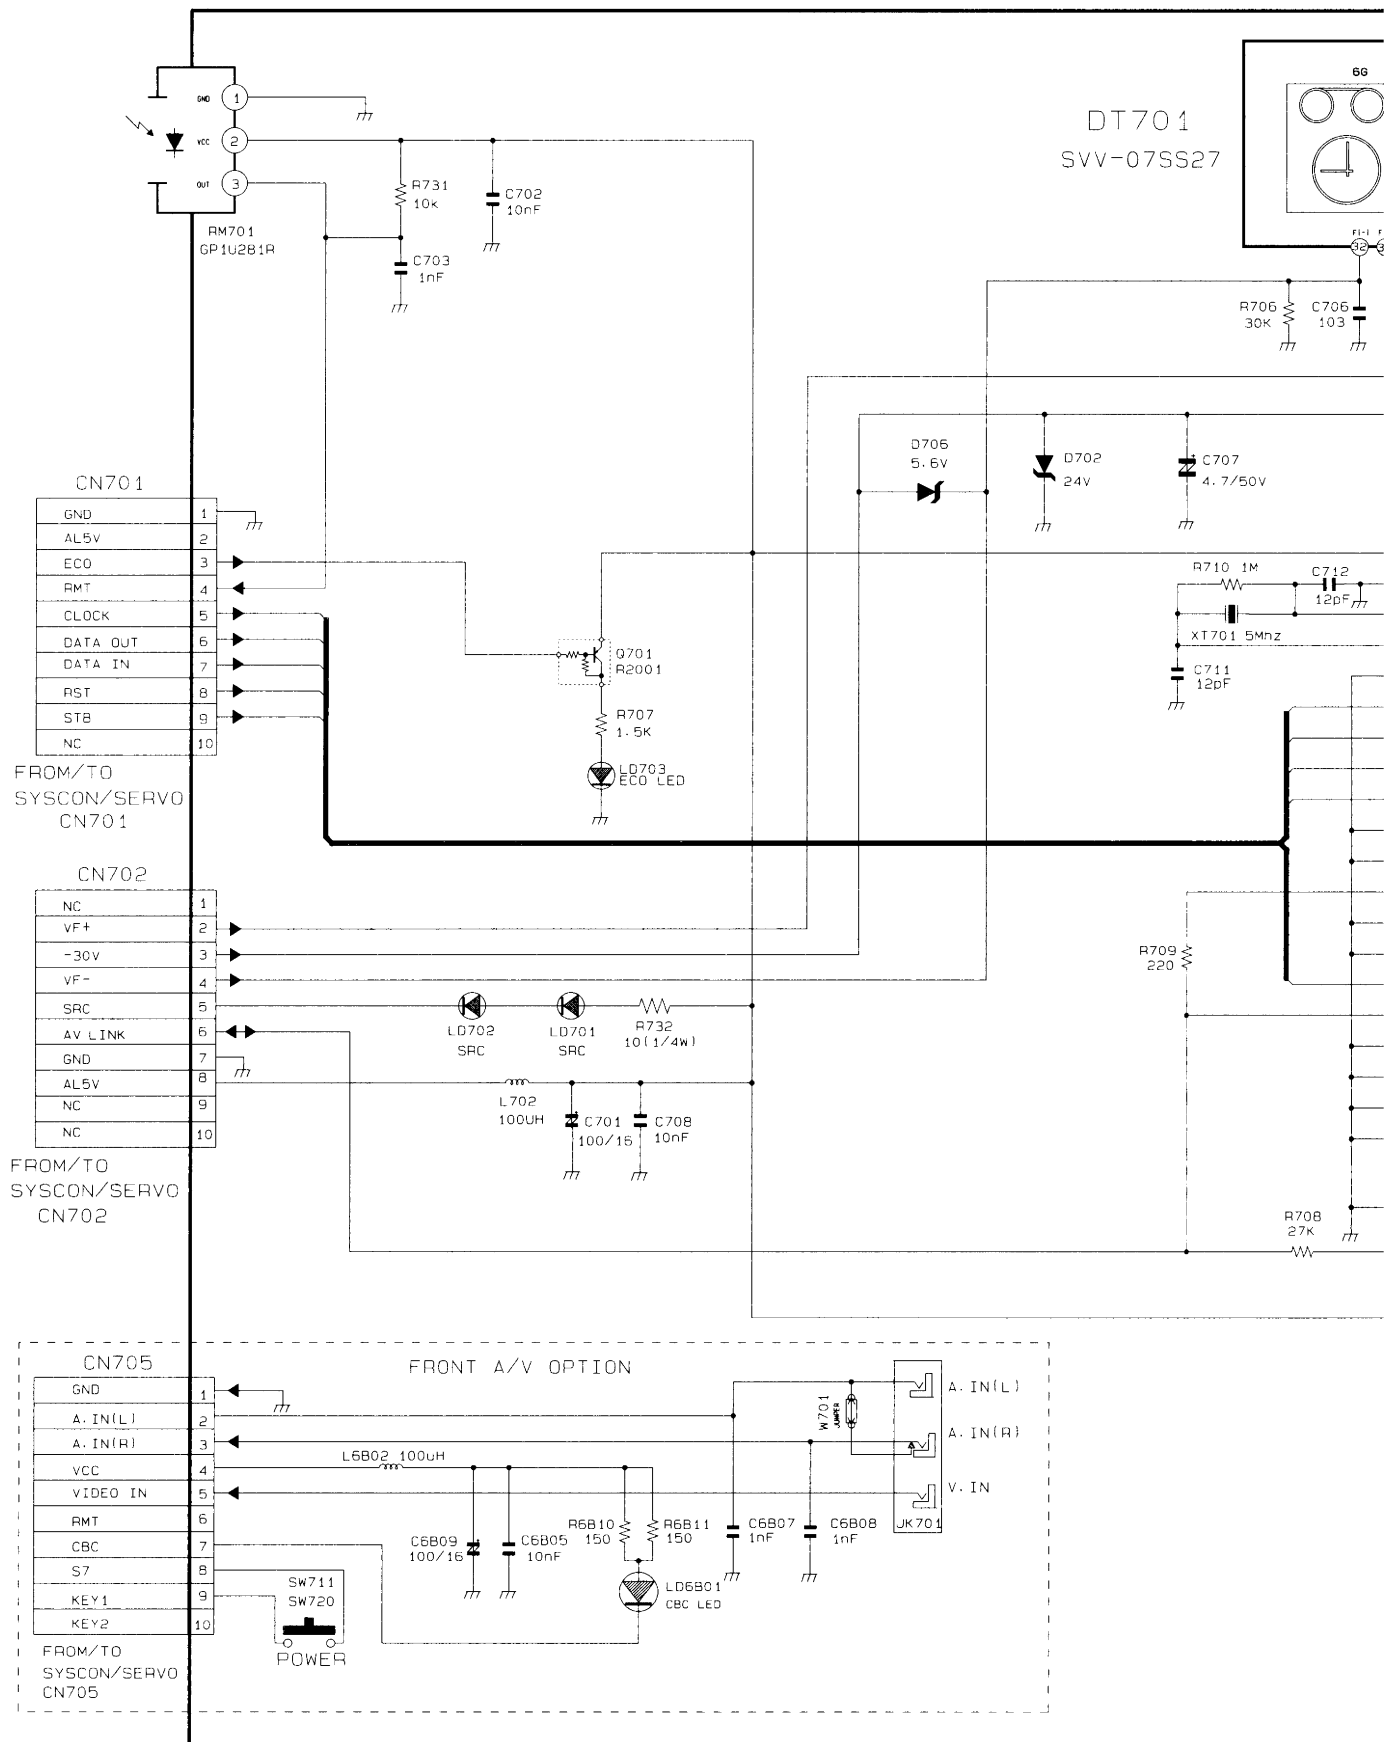


DT701  
VV-07SS27

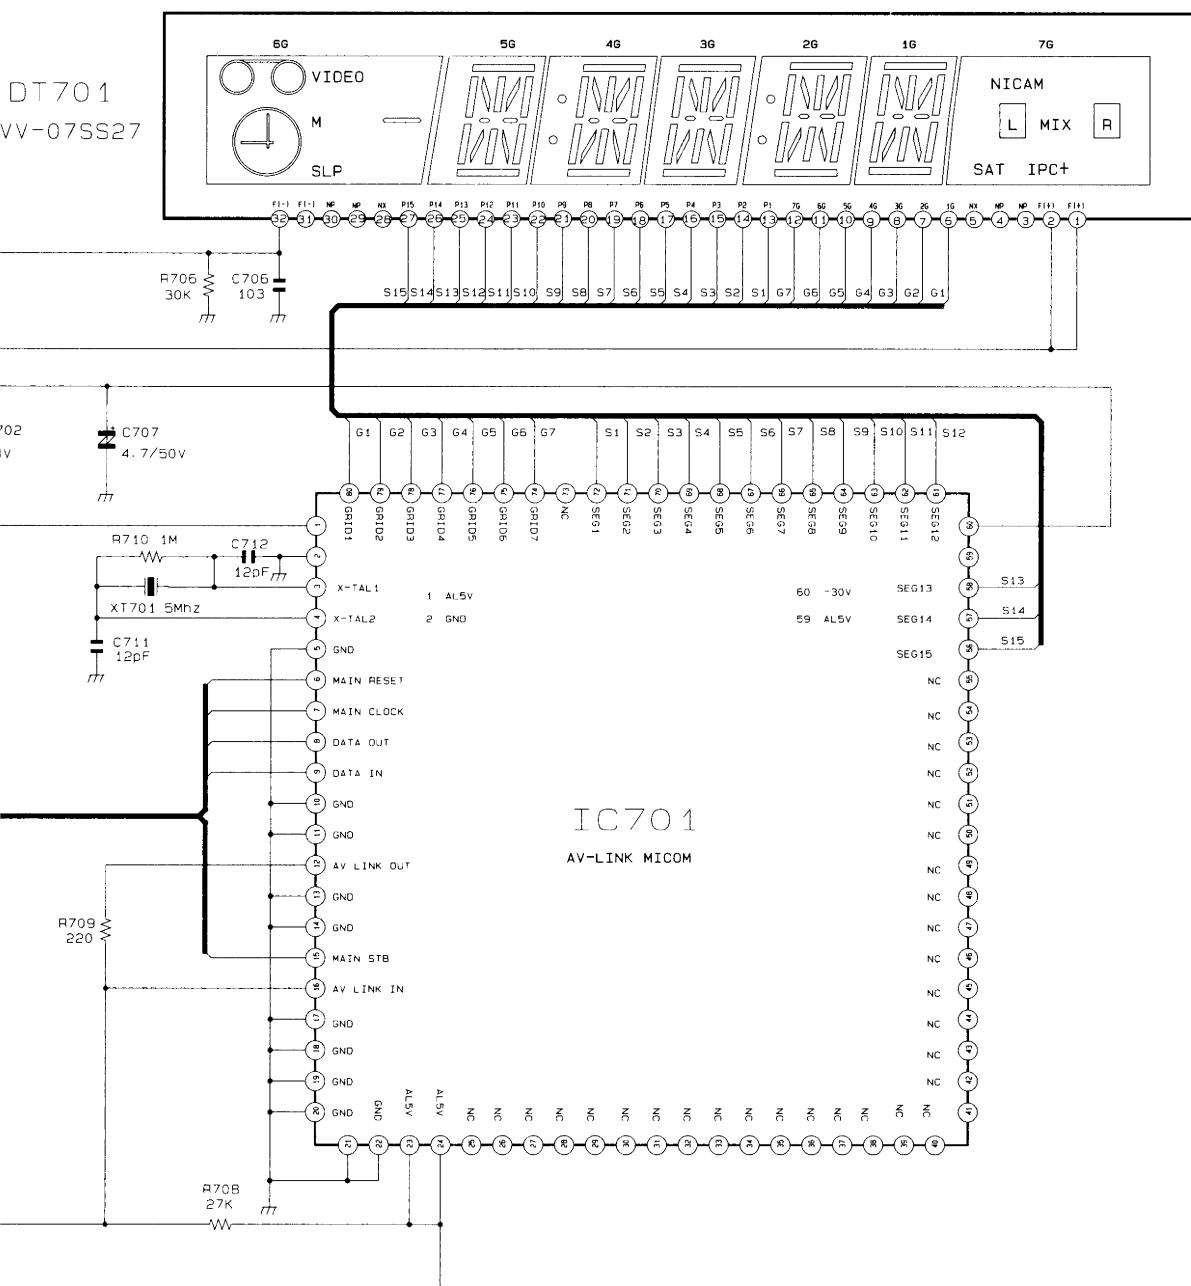


### 10-15 VFD (Without AV-Link)

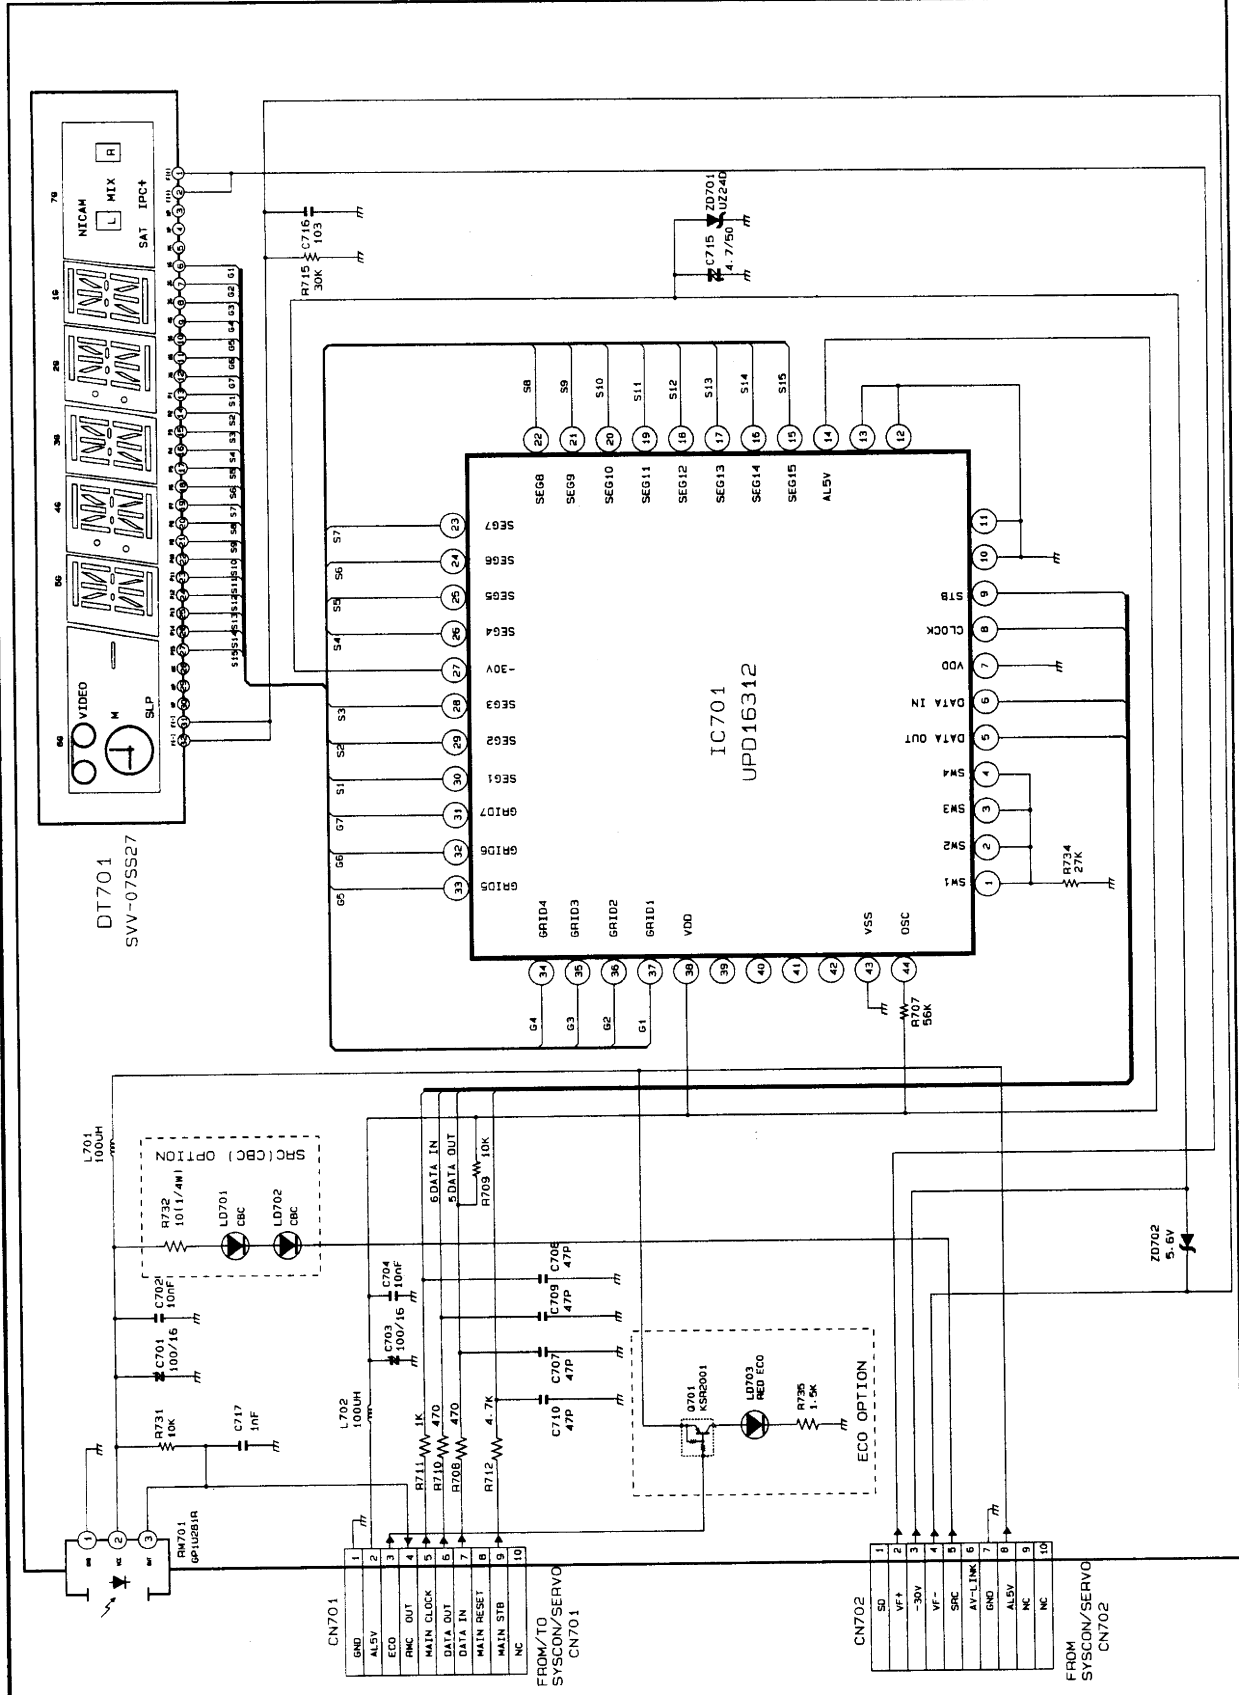


## 10-15 VFD (Without AV-Link)

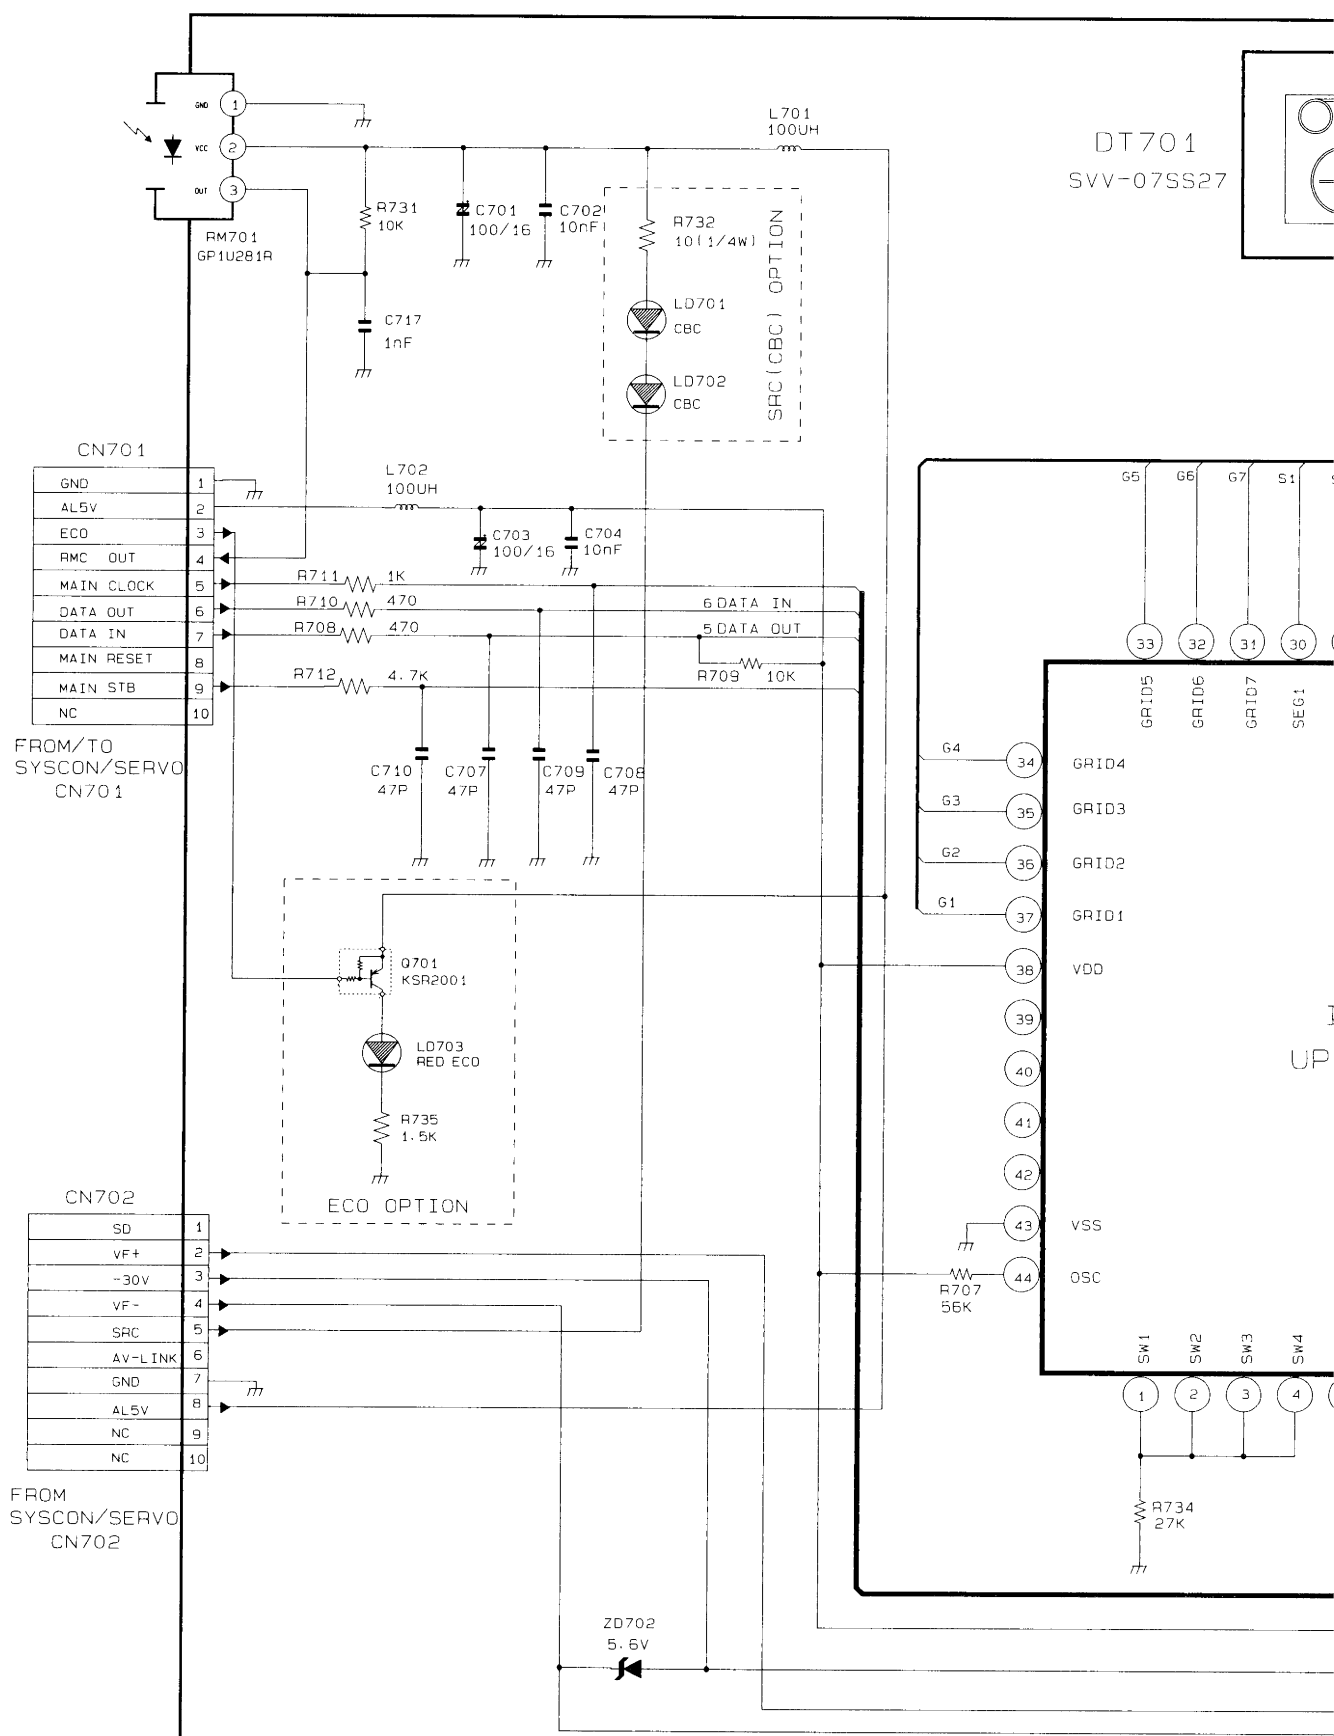

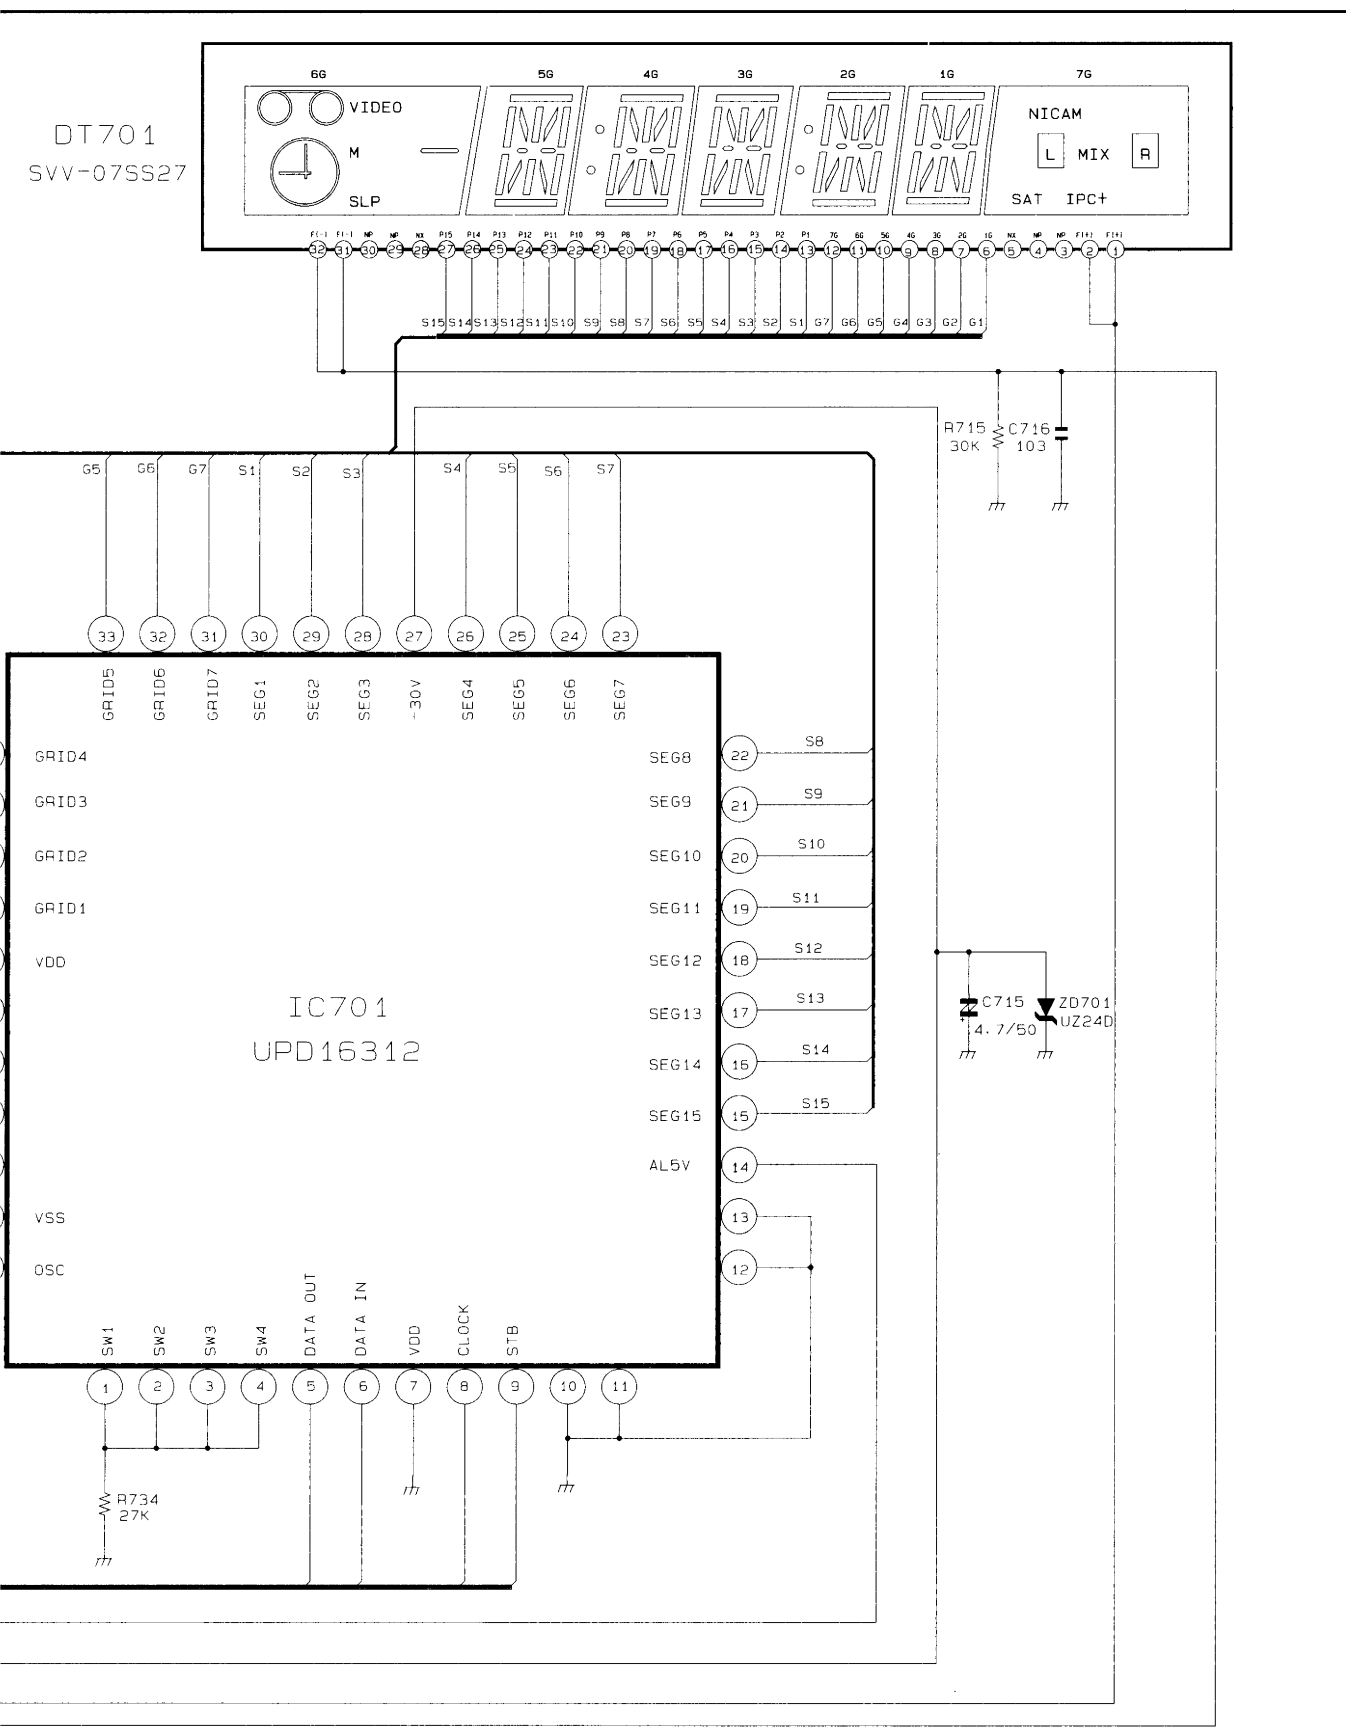





## 10-16 Remote-Control (Multi)

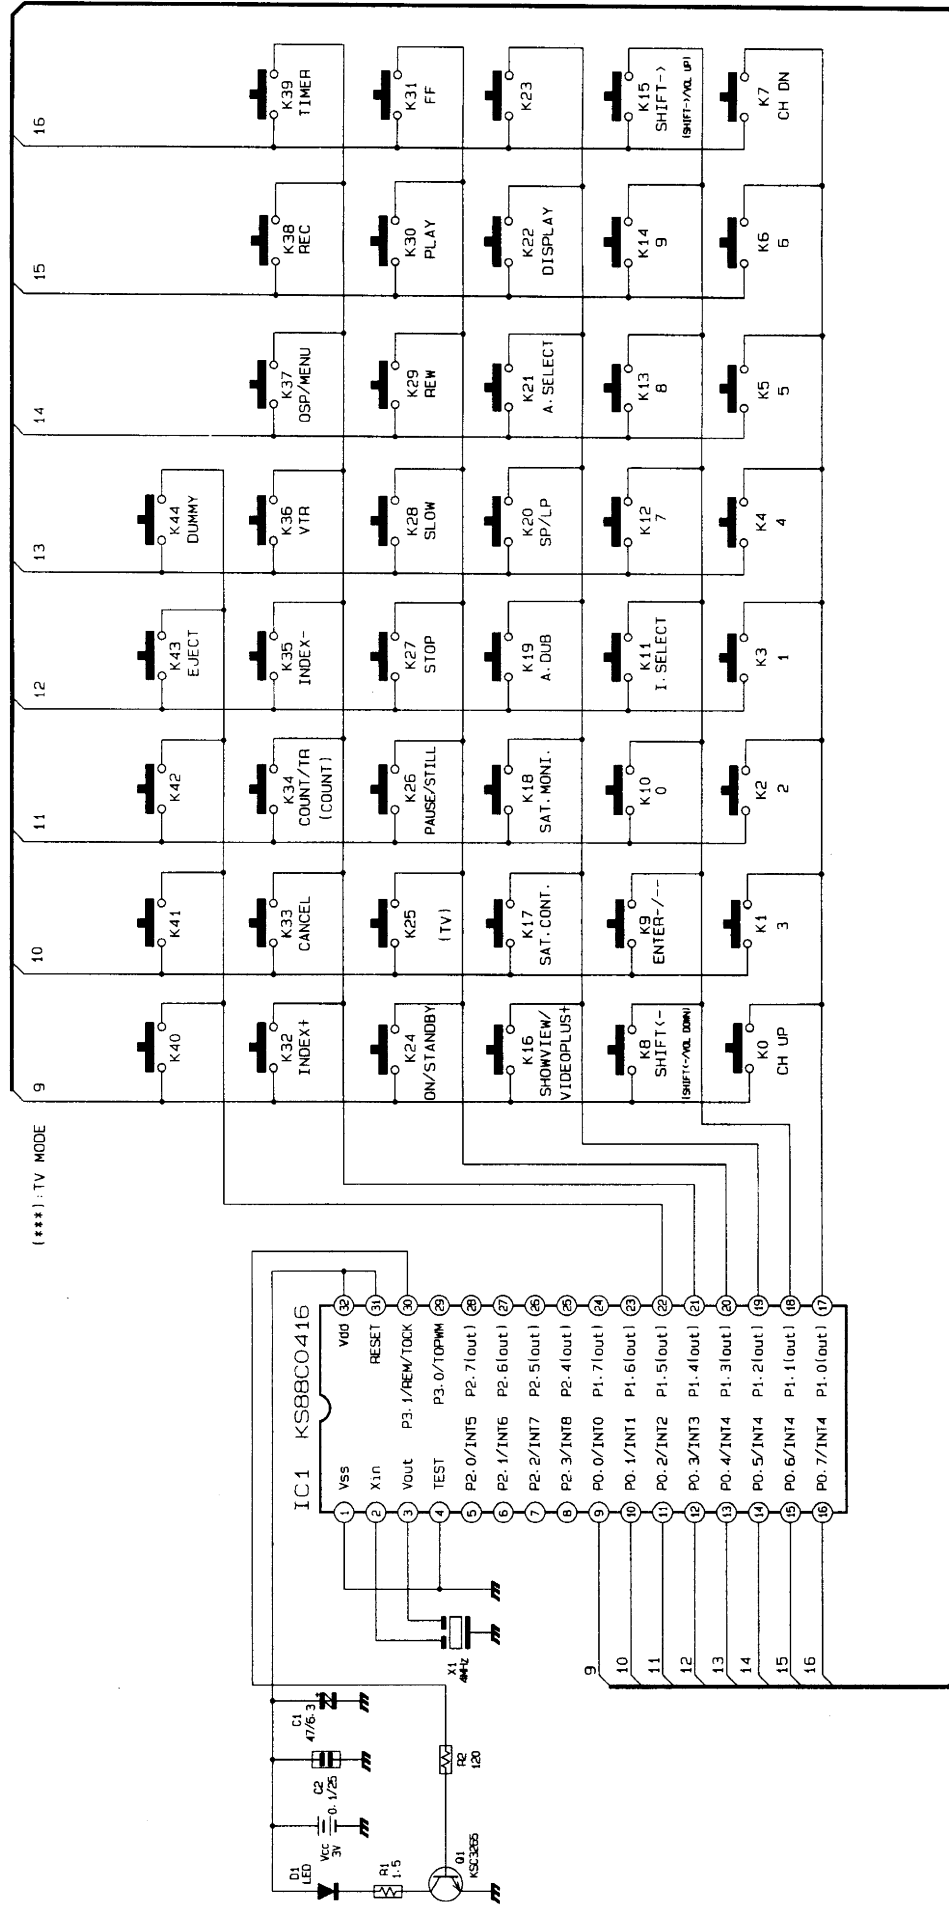


10-16 Remote-Control (Multi)

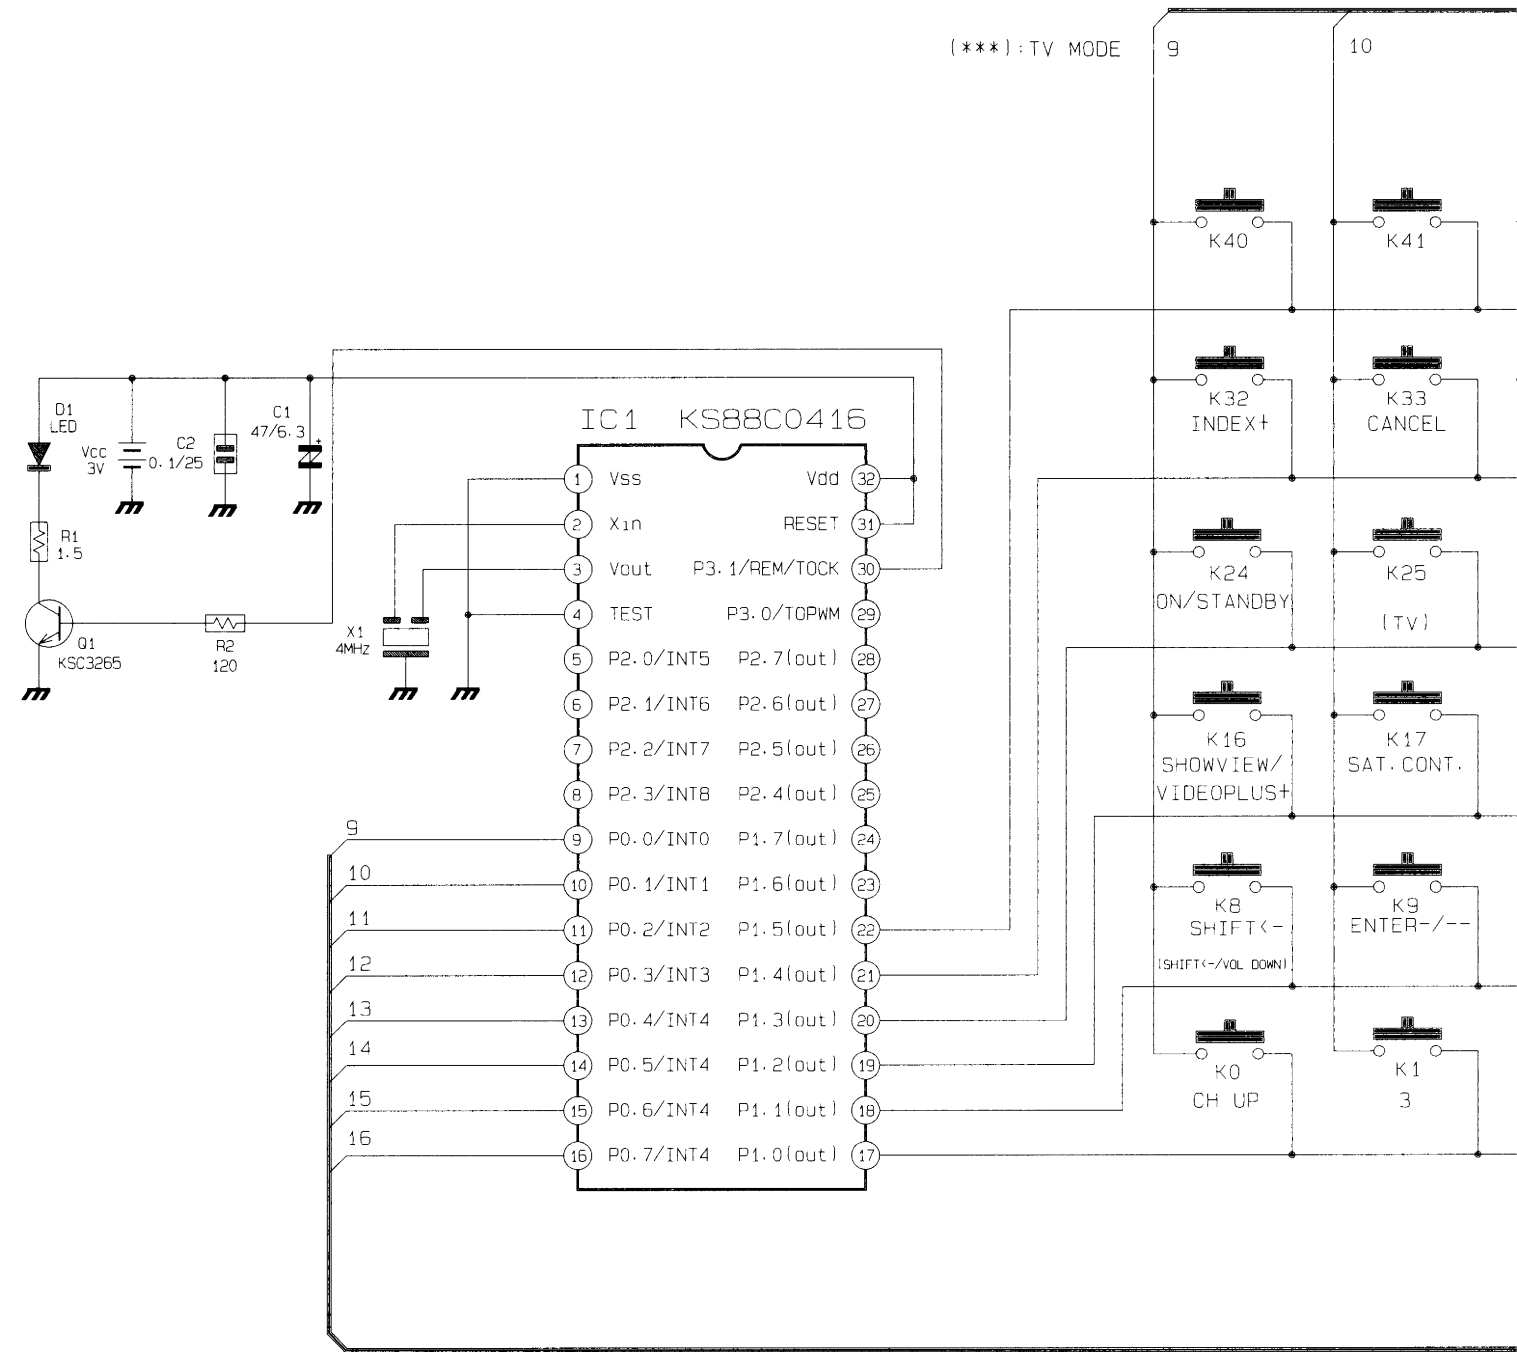

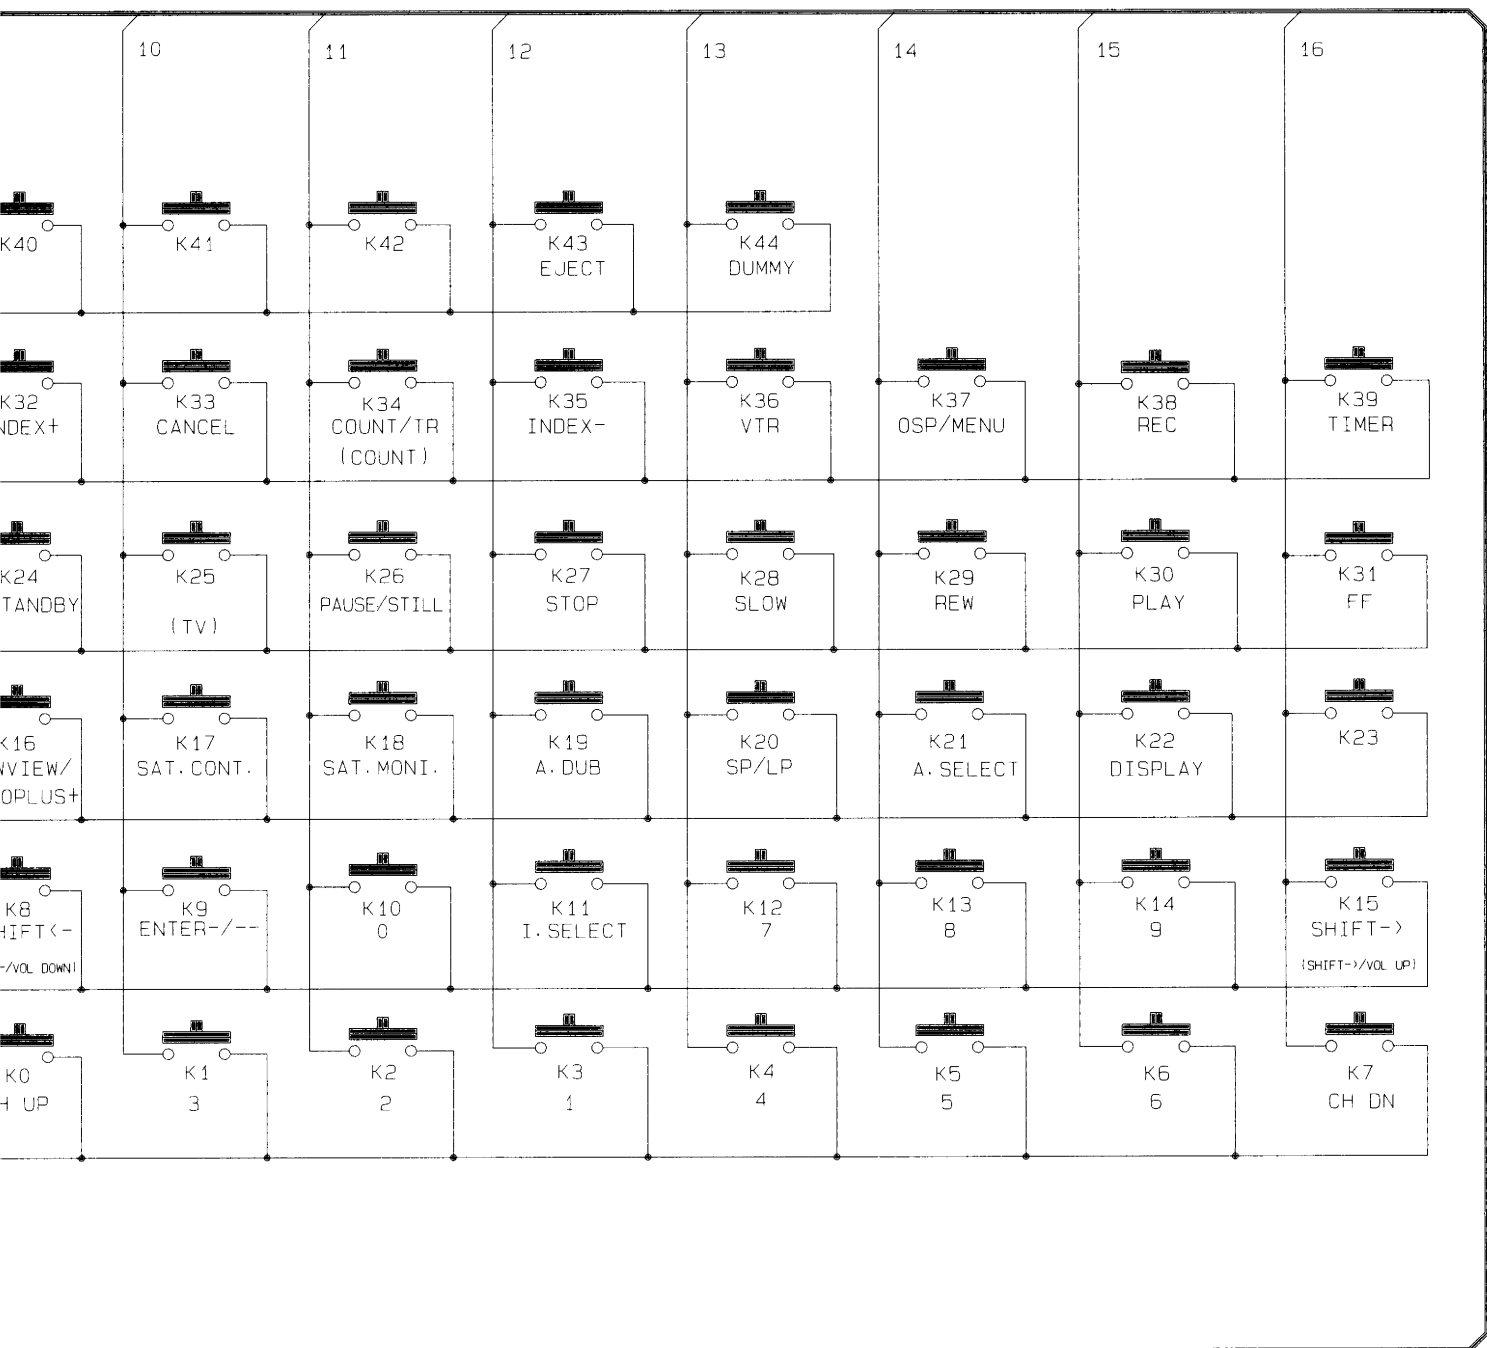

## 10-17 Remote-Control (VCR Only)

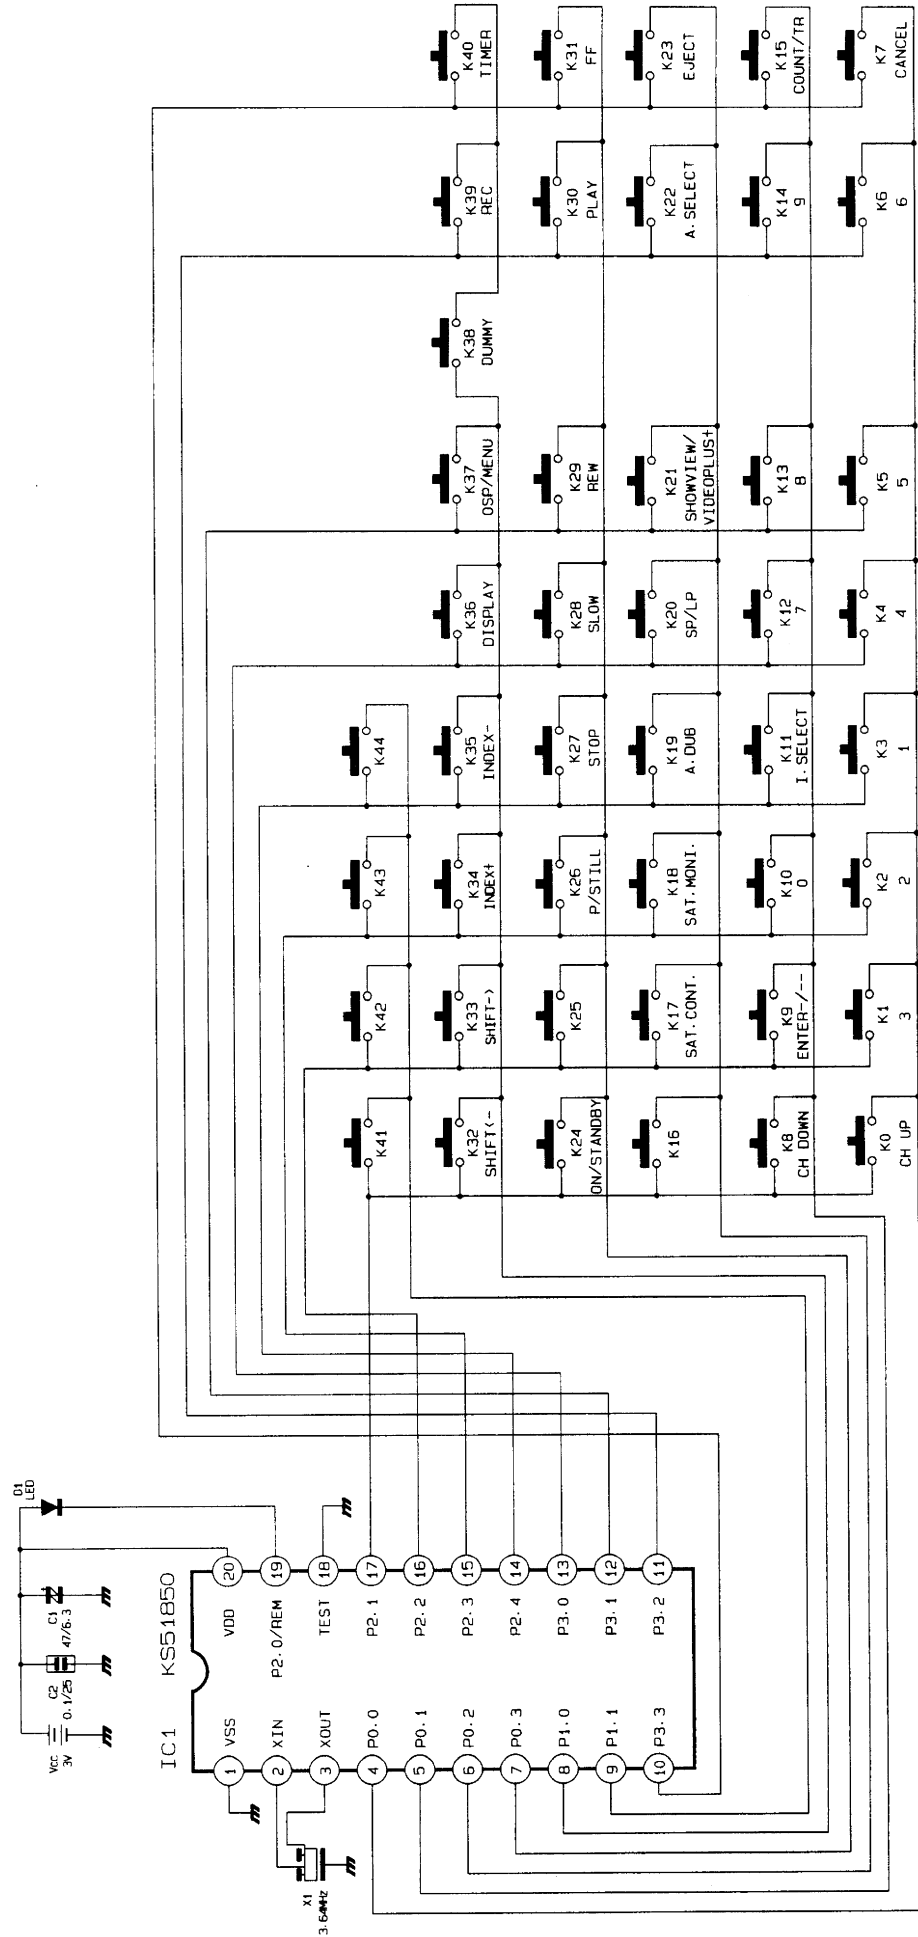

## 10-17 Remote-Control (VCR Only)

